



Installation manual

Daikin Altherma 3 R



[illegible]

Daikin Industries Czech Republic s.r.o.

- [illegible]

- İnşaatın kendisi sorumluluğunda olmak üzere bu bildirimin ilgili olduğu donanımının aşağıdaki gibi olduğunu beyan eder:
- 25) (M)

ERGA04DAV37,

- [illegible]

EN60335-2-40,

- | | | | | | | | |
|----|-------------------------------------|----|------------------------------------|----|--|----|---|
| 01 | following the provisions of: | 01 | Direktives, as amended. | 10 | Direktiver, med senere ændringer. | 18 | Direktivelor, un amendamentelor respective. |
| 02 | gemäß den Vorschriften der: | 02 | Direktives, genløst. Aendring. | 11 | Direktiv, med foretagne ændringer. | 19 | Direktive v ismi spremenitjani. |
| 03 | conformément aux dispositions des: | 03 | Direktives, telexe que modifiées. | 12 | Direktiv, med foretagne ændringer. | 20 | Direktivo kooz spremenitjani. |
| 04 | o overeenkomstig de bepalingen van: | 04 | Richtlijnen, zoals gemiddeld. | 13 | Richtlijn, met voorafgaande wijzigingen. | 21 | Direktiva, s treshviri izmenjeniya. |
| 05 | overeenkomstig de bepalingen van: | 05 | Direktives, según lo emendado. | 14 | Richtlijn, zoals gemiddeld. | 22 | Direktiva, s treshviri izmenjeniya. |
| 06 | secondo le disposizioni de: | 06 | Direktives, según lo emendado. | 15 | Direktive, como da modifika. | 23 | Direktivos su poplavljanja. |
| 07 | secondo le disposizioni per: | 07 | Direktives, según lo emendado. | 16 | Direktive, como da modifika. | 24 | Direktivi un to zapodnjavanja. |
| 08 | der Tilføjelse til Kommissionen's: | 08 | Direktives, conforme allargato em. | 17 | Direktive, conforme allargato em. | 25 | Smernice, v platnom znani. |
| 09 | der Tilføjelse til Kommissionen's: | 09 | Direktives, conforme allargato em. | 18 | Direktive, conforme allargato em. | | Dogajstveniki jasnjenje vnojemlikov. |

- [illegible]

- | | | | |
|-------|--|-------|---|
| 01*** | Dakin Europe N.V. is autorizės to compile the Technical Construction File. | 13*** | Dakin Europe N.V. om vattuutellu laadimatu Teknisen asiakirjan. |
| 02*** | Dakin Europe N.V. hat die Berechtigung die Technische Konstruktionsakte zusammenzustellen. | 14*** | Dakin Europe N.V. este autorizat sa compileze Dosarul tehnic de constructie. |
| 03*** | Dakin Europe N.V. est autorisė a compiler le Dossier de Construction Technique. | 15*** | Společnost Dakin Europe N.V. má právními ke kompilaci souboru technické konstrukce. |
| 04*** | Dakin Europe N.V. est autorisė a compiler le Dossier de Construction Technique. | 16*** | Dakin Europe N.V. is vuesten na izradu Delovne in tehnične konstrukcije. |
| 05*** | Dakin Europe N.V. is bevoegd om het Technisch Constructiedossier samen te stellen. | 17*** | Dakin Europe N.V. jagi toisid sūdadi š techniskos konstrukcijos laiką. |
| 06*** | Dakin Europe N.V. est autorisė a compiler le Constructif de Construction Technique. | 18*** | Dakin Europe N.V. este autorizat sa compila Dosarul tehnic de constructie. |
| 07*** | Dakin Europe N.V. est autorisė a compiler le Dossier de Construction Technique. | 19*** | Dakin Europe N.V. este autorizat sa compila Dosarul tehnic de constructie. |
| 08*** | Dakin Europe N.V. est autorisė a compiler le Dossier de Construction Technique. | 20*** | Dakin Europe N.V. este autorizat sa compila Dosarul tehnic de constructie. |
| 09*** | Kompanija Dakin Europe N.V. ymoćnoćuje odobrenje Komitetu Tehnickomog Povjerljazivanja. | 21*** | Dakin Europe N.V. e omprigardat pa ocrabati Arta za tehnicuza ocrabatyvazura. |
| 10*** | Dakin Europe N.V. est autorisė a compiler le Dossier de Construction Technique. | 22*** | Dakin Europe N.V. jagi toisid sūdadi š techniskos konstrukcijos laiką. |
| 11*** | Dakin Europe N.V. est autorisė a compiler le Constructif de Construction Technique. | 23*** | Dakin Europe N.V. jagi toisid sūdadi š techniskos konstrukcijos laiką. |
| 12*** | Dakin Europe N.V. hat tilalese til a komplette den Tekniske konstruktionsfilen. | 24*** | Společnost Dakin Europe N.V. je oprávněna vytvořit soubor technické konstrukce. |
| | | 25*** | Dakin Europe N.V. Teknik Yamo Dostavim derineve veltidur. |

Table of contents

1	About the documentation	4
1.1	About this document.....	4
2	About the box	4
2.1	Outdoor unit.....	4
2.1.1	To handle the outdoor unit.....	4
2.1.2	To remove the accessories from the outdoor unit.....	5
3	Preparation	5
3.1	Preparing the installation site	5
3.1.1	Installation site requirements of the outdoor unit	5
3.1.2	Additional installation site requirements of the outdoor unit in cold climates	5
4	Installation	6
4.1	Opening the units	6
4.1.1	To open the outdoor unit.....	6
4.2	Mounting the outdoor unit.....	6
4.2.1	To provide the installation structure	6
4.2.2	To install the outdoor unit.....	7
4.2.3	To provide drainage	8
4.2.4	To prevent the outdoor unit from falling over	8
4.3	Connecting the refrigerant piping	9
4.3.1	To connect the refrigerant piping to the outdoor unit ..	9
4.4	Checking the refrigerant piping	9
4.4.1	To check for leaks.....	9
4.4.2	To perform vacuum drying.....	9
4.5	Charging refrigerant	9
4.5.1	To determine the additional refrigerant amount.....	9
4.5.2	To charge additional refrigerant.....	10
4.5.3	To fix the fluorinated greenhouse gases label	10
4.6	Connecting the electrical wiring.....	10
4.6.1	About electrical compliance	10
4.6.2	Specifications of standard wiring components.....	10
4.6.3	To connect the electrical wiring to the outdoor unit.....	10
4.7	Finishing the outdoor unit installation	11
4.7.1	To finish the outdoor unit installation	11
5	Starting up the outdoor unit	11
6	Technical data	12
6.1	Piping diagram: Outdoor unit.....	12
6.2	Wiring diagram: Outdoor unit	13

1 About the documentation

1.1 About this document

Target audience

Authorised installers

Documentation set

This document is part of a documentation set. The complete set consists of:

- **General safety precautions:**
 - Safety instructions that you must read before installing
 - Format: Paper (in the box of the indoor unit)
- **Indoor unit installation manual:**
 - Installation instructions
 - Format: Paper (in the box of the indoor unit)
- **Outdoor unit installation manual:**
 - Installation instructions
 - Format: Paper (in the box of the outdoor unit)

- **Installer reference guide:**
 - Preparation of the installation, good practices, reference data,...
 - Format: Digital files on <http://www.daikineurope.com/support-and-manuals/product-information/>
- **Addendum book for optional equipment:**
 - Additional info about how to install optional equipment
 - Format: Paper (in the box of the indoor unit) + Digital files on <http://www.daikineurope.com/support-and-manuals/product-information/>

Latest revisions of the supplied documentation may be available on the regional Daikin website or via your dealer.

The original documentation is written in English. All other languages are translations.

Technical engineering data

- A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible).
- The **full set** of latest technical data is available on the Daikin Business Portal (authentication required).

2 About the box

2.1 Outdoor unit



2.1.1 To handle the outdoor unit



CAUTION


To avoid injury, do NOT touch the air inlet or aluminium fins of the unit.

- 1 Handle the unit using the sling to the left and the handle to the right. Pull up both sides of the sling at the same time to prevent disconnection of the sling from the unit.

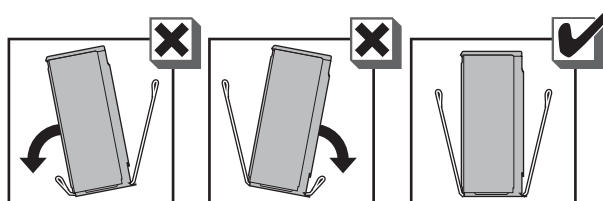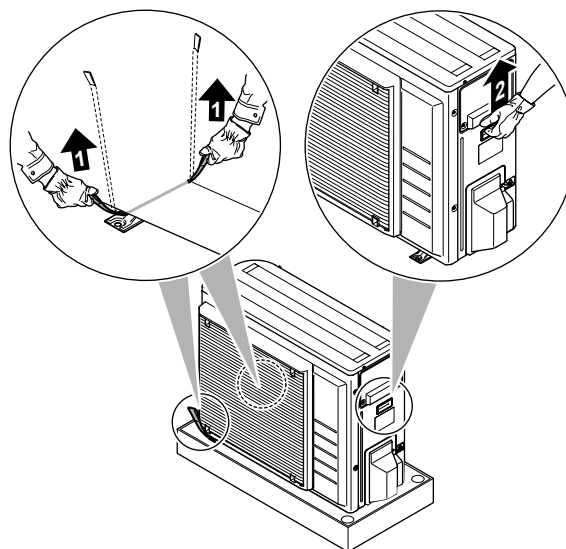

2 While handling the unit:



- Keep both sides of the sling level.
- Keep your back straight.

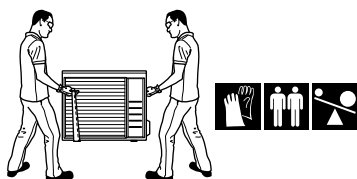

- After mounting the unit, remove the sling from the unit by pulling 1 side of the sling.

2.1.2 To remove the accessories from the outdoor unit

- Lift the outdoor unit. See "2.1.1 To handle the outdoor unit" [p. 4].
- Remove the accessories at the bottom of the package.

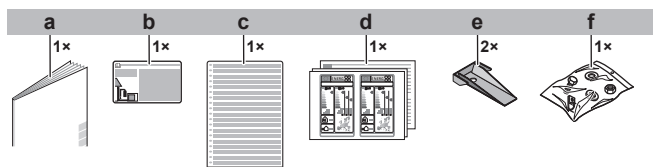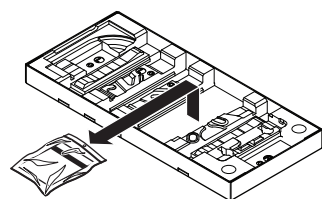

- a Outdoor unit installation manual
- b Fluorinated greenhouse gases label
- c Multilingual fluorinated greenhouse gases label
- d Energy label
- e Unit mounting plate
- f Bolts, nuts, washers, spring washers and wire clamp

3 Preparation

3.1 Preparing the installation site




WARNING


The appliance shall be stored in a room without continuously operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater).

3.1.1 Installation site requirements of the outdoor unit

Mind the following spacing guidelines:

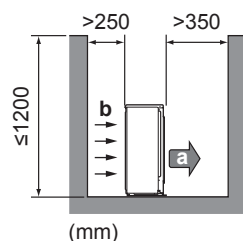


- a Air outlet
- b Air inlet

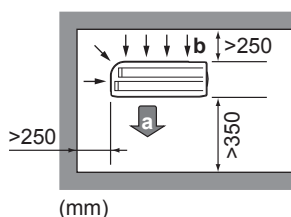


INFORMATION

In sound sensitive areas (e.g. near a bedroom), you can install the low sound cover (EKLNO8A1) to decrease the operation noise of the outdoor unit. If you install it, mind the following spacing guidelines:

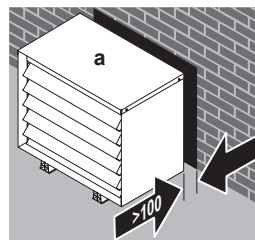

a Low sound cover

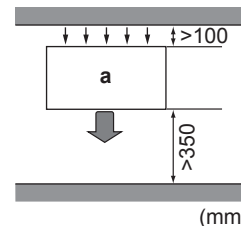

The outdoor unit is designed for outdoor installation only, and for the following ambient temperatures:


Cooling mode	10~43°C
Heating mode	-25~25°C

3.1.2 Additional installation site requirements of the outdoor unit in cold climates

In areas with low ambient temperatures and high humidity, or in areas with heavy snowfall, remove the suction grille to ensure proper operation.

Non-exhaustive list of areas: Austria, Czech Republic, Denmark, Estonia, Finland, Germany, Hungary, Latvia, Lithuania, Norway, Poland, Romania, Serbia, Slovakia, Sweden, ...


- Remove the screws holding the suction grille.
- Remove the suction grille, and dispose of it.
- Reattach the screws to the unit.

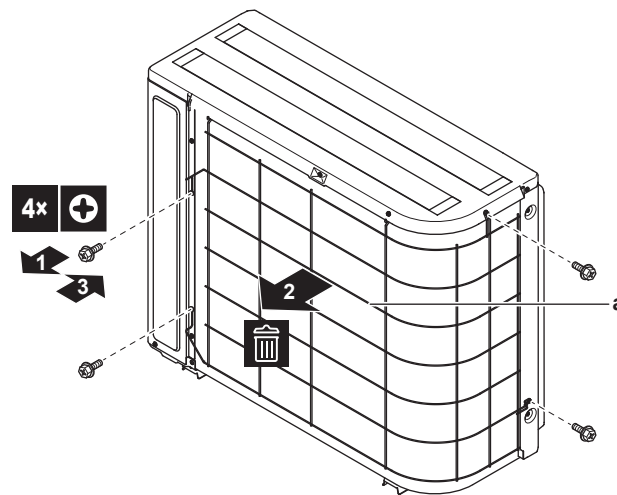

a Suction grille

Protect the outdoor unit against direct snowfall and take care that the outdoor unit is NEVER snowed up.

4 Installation

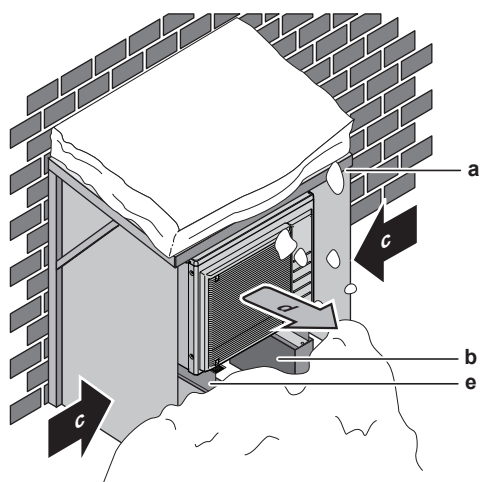

- a Snow cover or shed
- b Pedestal
- c Prevailing wind direction
- d Air outlet
- e EKFT008D option kit

In any case, provide at least 300 mm of free space below the unit. Additionally, make sure the unit is positioned at least 100 mm above the maximum expected level of snow. See ["4.2 Mounting the outdoor unit"](#) [► 6] for more details.

In heavy snowfall areas it is very important to select an installation site where the snow will NOT affect the unit. If lateral snowfall is possible, make sure that the heat exchanger coil is NOT affected by the snow. If necessary, install a snow cover or shed and a pedestal.

4 Installation

4.1 Opening the units

4.1.1 To open the outdoor unit



DANGER: RISK OF ELECTROCUTION



DANGER: RISK OF BURNING

See ["4.3.1 To connect the refrigerant piping to the outdoor unit"](#) [► 9] and ["4.6.3 To connect the electrical wiring to the outdoor unit"](#) [► 10].

4.2 Mounting the outdoor unit

4.2.1 To provide the installation structure

This topic shows different installation structures. For all, use 4 sets of M8 or M10 anchor bolts, nuts and washers. In any case, provide at least 300 mm of free space below the unit. Additionally, make sure the unit is positioned at least 100 mm above the maximum expected level of snow.




INFORMATION

The maximum height of the upper protruding part of the bolts is 15 mm.



INFORMATION

If you install the U-beams in combination with the low sound cover (EKLN08A1), different installation instructions apply for the U-beams. See the installation manual of the low sound cover.

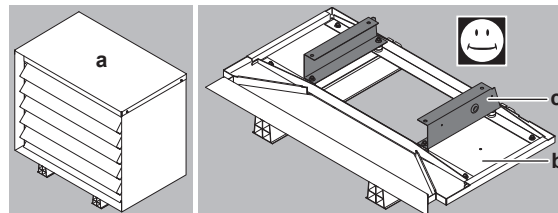


a Low sound cover

b Bottom parts of the low sound cover

c U-beams

Option 1: On mounting feet "flexi-foot with strut"

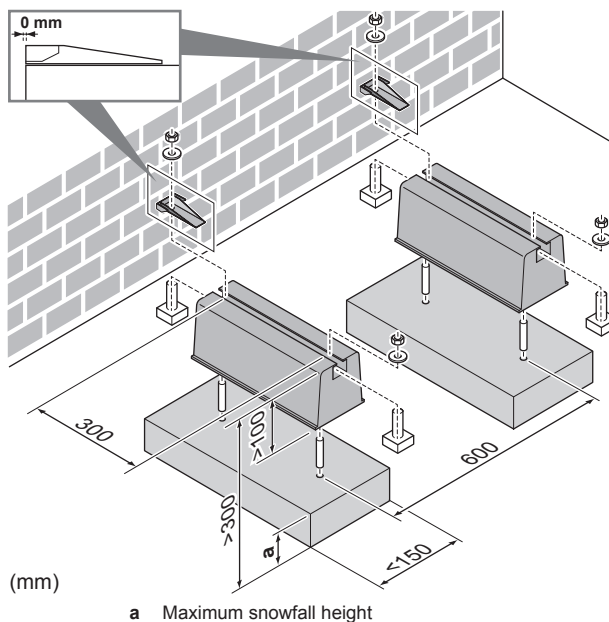


(mm)

a Maximum snowfall height

Option 2: On plastic mounting feet

In this case, you can use the bolts, nuts, washers and spring washers delivered with the unit as accessories.

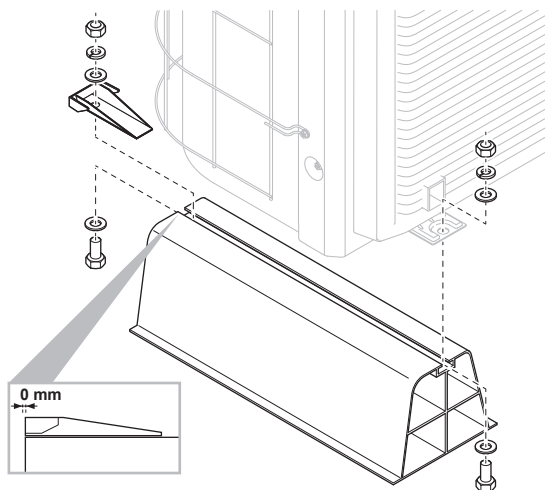


(mm)

a Maximum snowfall height

Option 3: On a pedestal with the EKFT008D option kit

The EKFT008D option kit is recommended in areas with heavy snowfall.

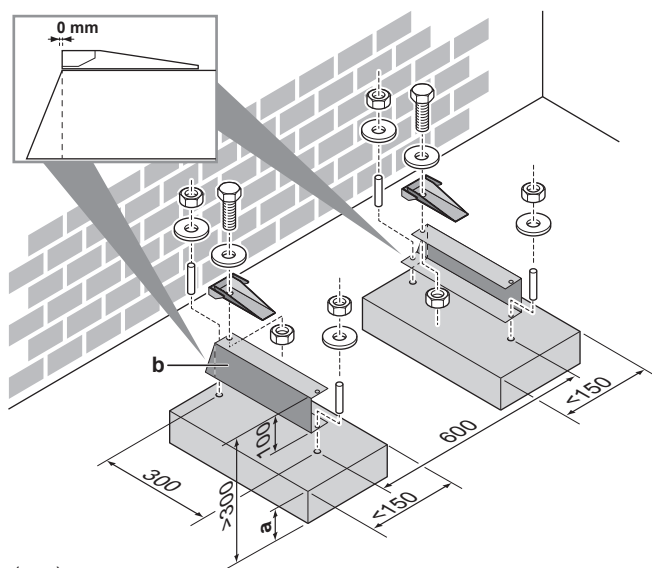


(mm)

- a Maximum snowfall height
- b EKFT008D option kit


Option 4: On brackets to the wall with the EKFT008D option kit

The EKFT008D option kit is recommended in areas with heavy snowfall.

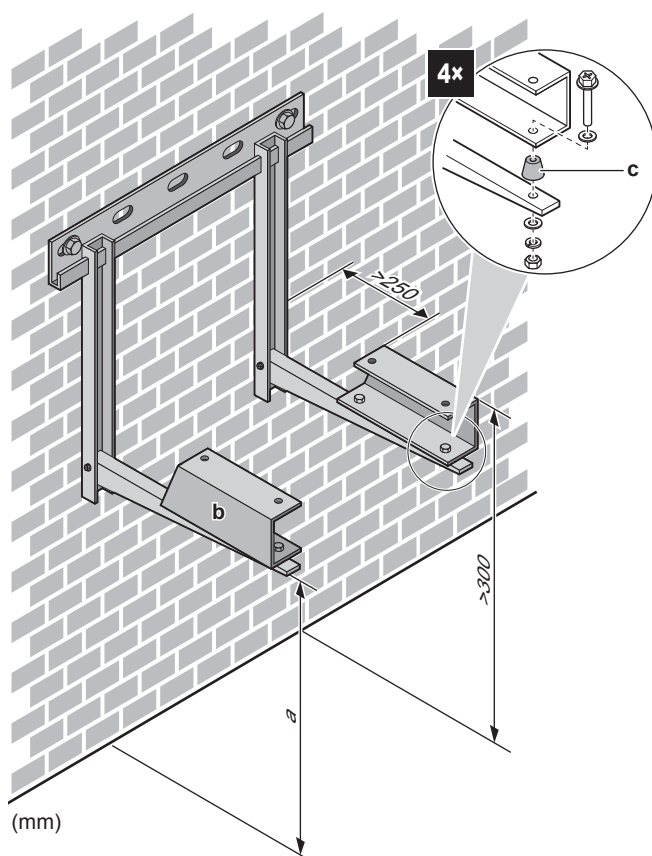

(mm)

- a Maximum snowfall height
- b EKFT008D option kit
- c Anti-vibration rubber (field supply)

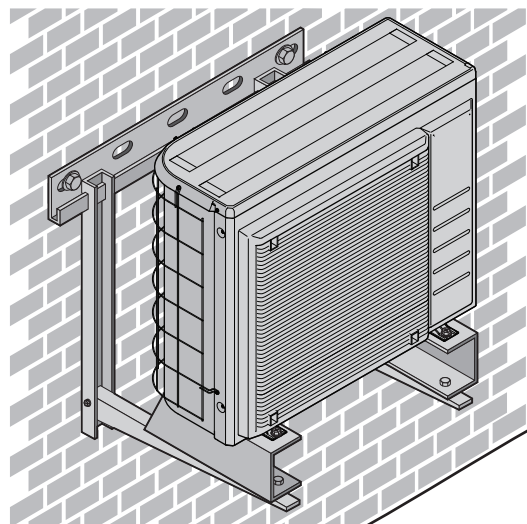


4.2.2 To install the outdoor unit



CAUTION

Do NOT remove the protective cardboard before the unit is installed properly.

- 1 Lift the outdoor unit as described in "2.1.1 To handle the outdoor unit" [p 4].
- 2 Install the outdoor unit as follows:
 - (1) Put the unit into position (using the sling to the left and the handle to the right).
 - (2) Remove the sling (by pulling 1 side of the sling).
 - (3) Fix the unit.

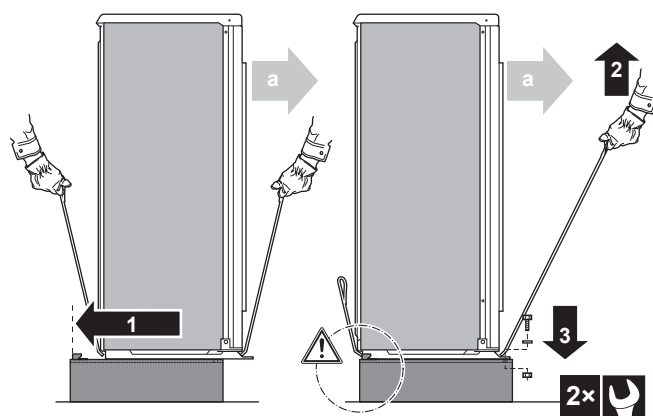

a Air outlet




NOTICE

Properly align the unit. Make sure the backside of the unit does NOT protrude.

4 Installation

- 3 Remove the protective cardboard and instruction sheet.

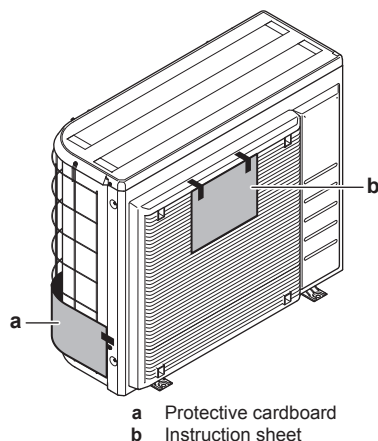

4.2.3 To provide drainage



Make sure that condensation water can be evacuated properly.



NOTICE

If the drain holes of the outdoor unit are blocked up, provide space of at least 300 mm below the outdoor unit.

- **Drain pan.** You can use the drain pan option (EKDP008D) to gather the drain water. For the complete installation instructions, see the installation manual of the drain pan. In short, the drain pan must be installed level (with a tolerance of 1° at all sides) and as follows:

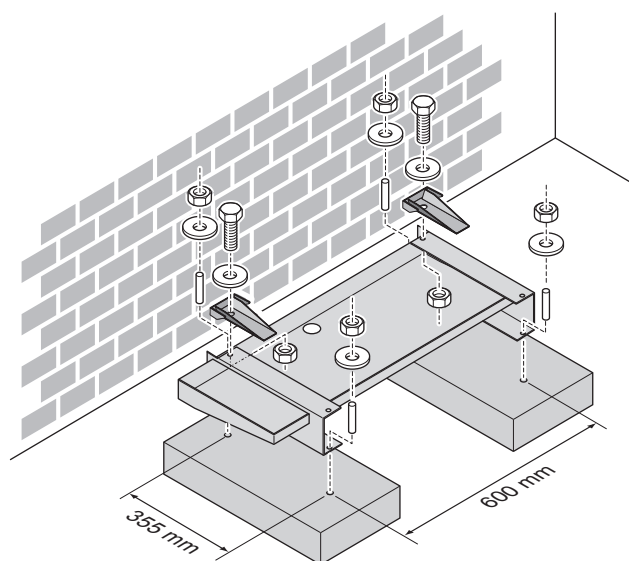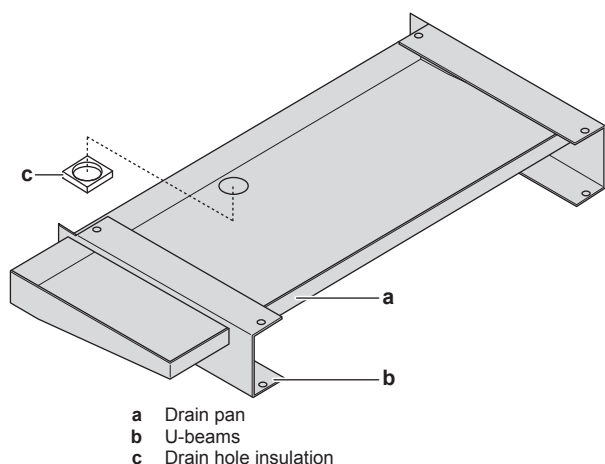


- **Drain pan heater.** You can use the drain pan heater option (EKDPH008CA) to prevent freezing-up of the drain pan. For the installation instructions, see the installation manual of the drain pan heater.
- **Non-heated drain tube.** When using the drain pan heater without drain tube or with a non-heated drain tube, remove the drain hole insulation (Item c on the illustration).



INFORMATION

If you install the drain pan kit (with or without drain pan heater) in combination with the low sound cover (EKLN08A1), different installation instructions apply for the drain pan kit. See the installation manual of the low sound cover.

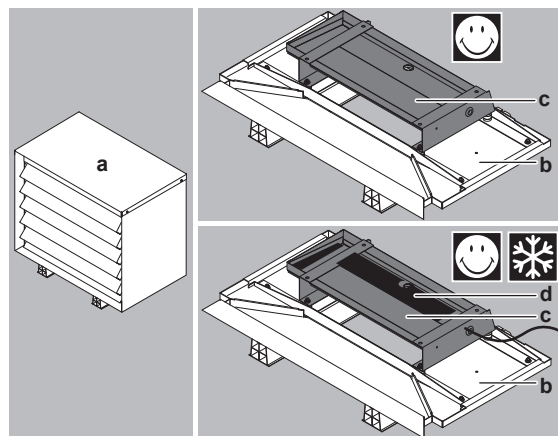


- a Low sound cover
b Bottom parts of the low sound cover
c Drain pan kit
d Drain pan heater

4.2.4 To prevent the outdoor unit from falling over

In case the unit is installed in places where strong wind can tilt the unit, take following measure:

- 1 Prepare 2 cables as indicated in the following illustration (field supply).
- 2 Place the 2 cables over the outdoor unit.
- 3 Insert a rubber sheet between the cables and the outdoor unit to prevent the cables from scratching the paint (field supply).
- 4 Attach the ends of the cables.
- 5 Tighten the cables.

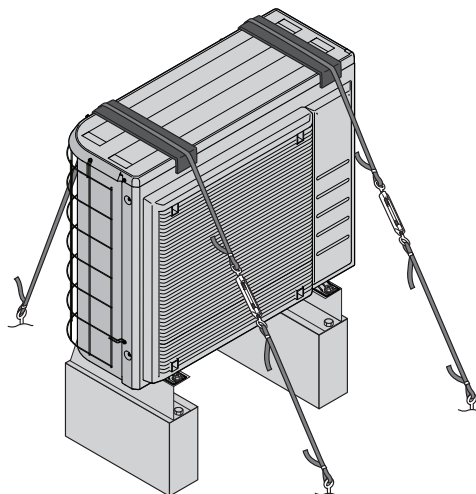



4.3 Connecting the refrigerant piping



DANGER: RISK OF BURNING

4.3.1 To connect the refrigerant piping to the outdoor unit

- 1 Connect the liquid refrigerant connection from the indoor unit to the liquid stop valve of the outdoor unit.

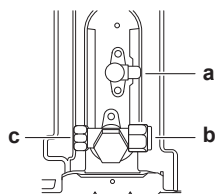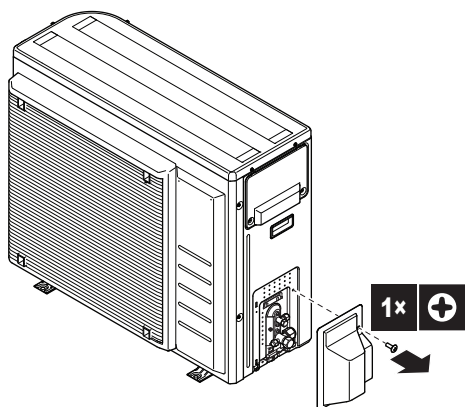

- a Liquid stop valve
- b Gas stop valve
- c Service port

- 2 Connect the gas refrigerant connection from the indoor unit to the gas stop valve of the outdoor unit.



NOTICE

It is recommended that the refrigerant piping between indoor and outdoor unit is installed in a ducting or the refrigerant piping is wrapped with finishing tape.

4.4 Checking the refrigerant piping

4.4.1 To check for leaks



NOTICE

Do NOT exceed the unit's maximum working pressure (see "PS High" on the unit name plate).



NOTICE

Make sure to use a recommended bubble test solution from your wholesaler. Do not use soap water, which may cause cracking of flare nuts (soap water may contain salt, which absorbs moisture that will freeze when the piping gets cold), and/or lead to corrosion of flared joints (soap water may contain ammonia which causes a corrosive effect between the brass flare nut and the copper flare).

- 1 Charge the system with nitrogen gas up to a gauge pressure of at least 200 kPa (2 bar). It is recommended to pressurize to 3000 kPa (30 bar) in order to detect small leaks.
- 2 Check for leaks by applying the bubble test solution to all connections.
- 3 Discharge all nitrogen gas.

4.4.2 To perform vacuum drying

- 1 Vacuum the system until the pressure on the manifold indicates -0.1 MPa (-1 bar).
- 2 Leave as is for 4-5 minutes and check the pressure:

If the pressure...	Then...
Does not change	There is no moisture in the system. This procedure is finished.
Increases	There is moisture in the system. Go to the next step.

- 3 Vacuum the system for at least 2 hours to a manifold pressure of -0.1 MPa (-1 bar).
- 4 After turning the pump OFF, check the pressure for at least 1 hour.
- 5 If you do NOT reach the target vacuum or CANNOT maintain the vacuum for 1 hour, do the following:
 - Check for leaks again.
 - Perform vacuum drying again.



NOTICE

Make sure to open the stop valves after installing the refrigerant piping and performing vacuum drying. Running the system with the stop valves closed may break the compressor.

4.5 Charging refrigerant

4.5.1 To determine the additional refrigerant amount



WARNING

If the total refrigerant charge in the system is ≥ 1.84 kg (i.e. if the piping length is ≥ 27 m), you need to comply with the minimum floor area requirements for the indoor unit. For more information, see the indoor unit installation manual.

If the total liquid piping length is...	Then...
≤ 10 m	Do NOT add additional refrigerant.
> 10 m	$R = (\text{total length (m) of liquid piping} - 10 \text{ m}) \times 0.020$ $R = \text{Additional charge (kg) (rounded in units of 0.01 kg)}$



INFORMATION

Piping length is the one-way length of liquid piping.

4 Installation

4.5.2 To charge additional refrigerant



WARNING


- Only use R32 as refrigerant. Other substances may cause explosions and accidents.
- R32 contains fluorinated greenhouse gases. Its global warming potential (GWP) value is 675. Do NOT vent these gases into the atmosphere.
- When charging refrigerant, ALWAYS use protective gloves and safety glasses.

Prerequisite: Before charging refrigerant, make sure the refrigerant piping is connected and checked (leak test and vacuum drying).

- 1 Connect the refrigerant cylinder to the service port.
- 2 Charge the additional refrigerant amount.
- 3 Open the gas stop valve.

4.5.3 To fix the fluorinated greenhouse gases label

- 1 Fill in the label as follows:

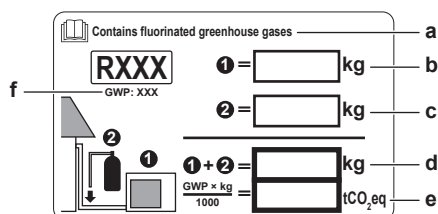

- If a multilingual fluorinated greenhouse gases label is delivered with the unit (see accessories), peel off the applicable language and stick it on top of a.
- Factory refrigerant charge: see unit name plate
- Additional refrigerant amount charged
- Total refrigerant charge
- Quantity of fluorinated greenhouse gases** of the total refrigerant charge expressed as tonnes CO₂ equivalent.
- GWP = Global warming potential



NOTICE

Applicable legislation on **fluorinated greenhouse gases** requires that the refrigerant charge of the unit is indicated both in weight and CO₂ equivalent.

Formula to calculate the quantity in CO₂ equivalent tonnes: GWP value of the refrigerant × total refrigerant charge [in kg] / 1000

Use the GWP value mentioned on the refrigerant charge label. That GWP is based on the current legislation on fluorinated greenhouse gases. The GWP mentioned in the manual might be outdated.

- 2 Fix the label on the inside of the outdoor unit near the gas and liquid stop valves.

4.6 Connecting the electrical wiring



DANGER: RISK OF ELECTROCUTION



WARNING

ALWAYS use multicore cable for power supply cables.

4.6.1 About electrical compliance

Equipment complying with EN/IEC 61000-3-12 (European/ International Technical Standard setting the limits for harmonic currents produced by equipment connected to public low-voltage systems with input current >16 A and ≤75 A per phase.).


4.6.2 Specifications of standard wiring components

Component		ERGA04DAV37
Power supply cable	MCA ^(a)	19.9 A
	Voltage	230 V
	Phase	1~
	Frequency	50 Hz
	Wire sizes	Must comply with applicable legislation
Interconnection cable		Minimum cable section of 1.5 mm ² and applicable for 230 V
Recommended field fuse		20 A
Earth leakage circuit breaker		Must comply with applicable legislation


^(a) MCA=Minimum circuit ampacity. Stated values are maximum values (see electrical data of combination with indoor units for exact values).

4.6.3 To connect the electrical wiring to the outdoor unit


- 1 Remove the switch box cover.

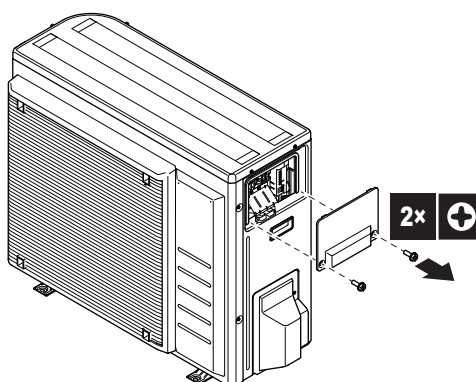

- 2 Connect the interconnection cable and power supply as follows. Ensure stress relief by using the wire clamp.

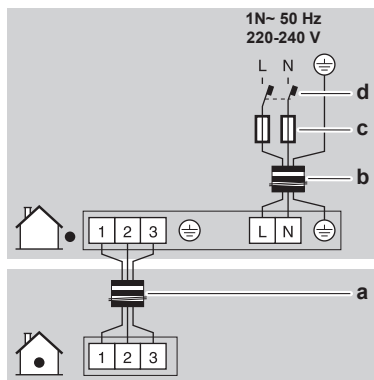


- a Interconnection cable
- b Power supply cable
- c Fuse
- d Earth leakage circuit breaker

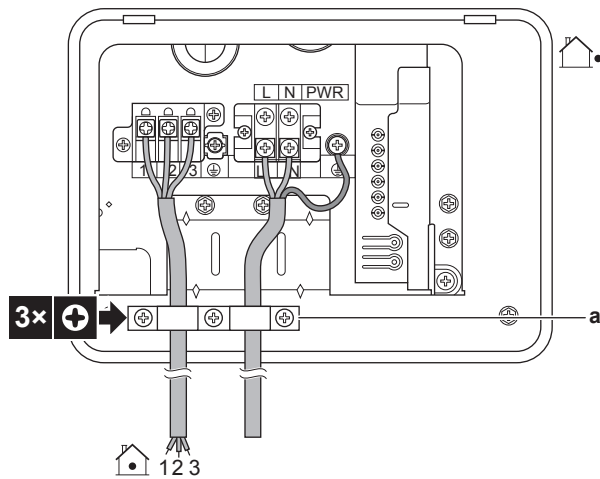

- a Wire clamp

- 3 Reattach the switch box cover.
- 4 Optional: Attach the wire clamp (accessory) to the screw of the refrigerant piping cover, and fix the cables to it with a cable tie.

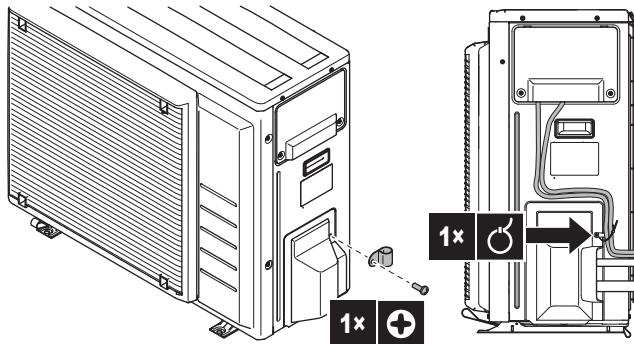


- 5 Connect an earth leakage circuit breaker and fuse to the power supply line.

4.7 Finishing the outdoor unit installation

4.7.1 To finish the outdoor unit installation

- 1 Insulate and fix the refrigerant piping and cables as follows:

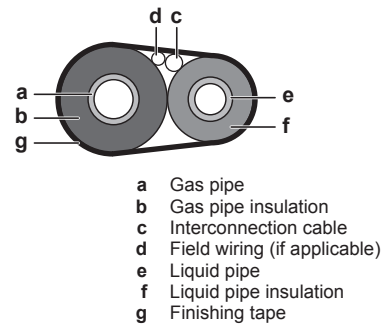

- 2 Install the service cover.

5 Starting up the outdoor unit


See the indoor unit installation manual for configuration and commissioning of the system.

6 Technical data

6 Technical data

A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible). The **full set** of latest technical data is available on the Daikin Business Portal (authentication required).

6.1 Piping diagram: Outdoor unit

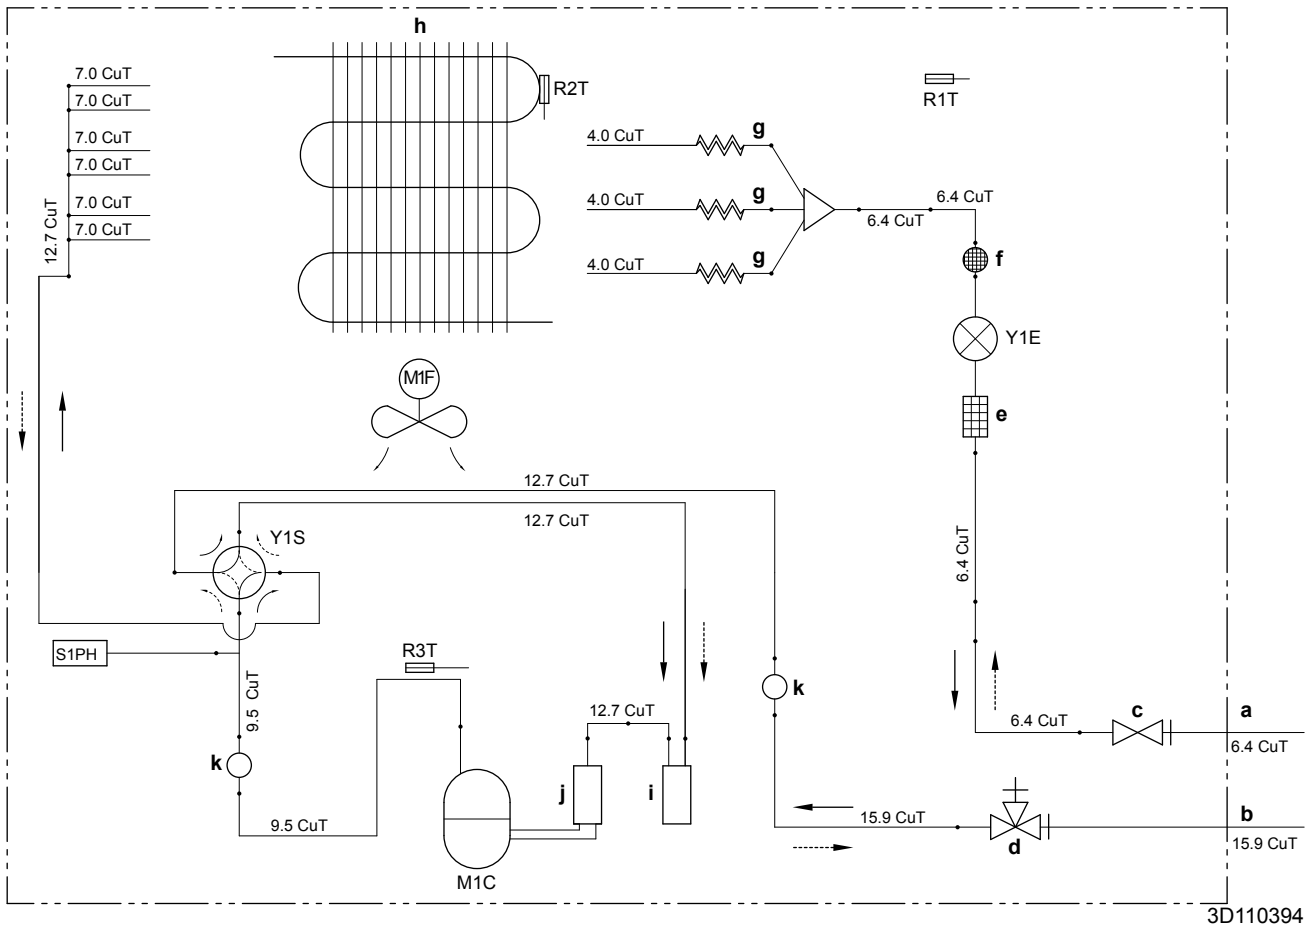

3D110394

- a Field piping (liquid: Ø6.4 mm flare connection)
- b Field piping (gas: Ø15.9 mm flare connection)
- c Stop valve (liquid)
- d Stop valve with service port (gas)
- e Filter
- f Muffler with filter
- g Capillary tube
- h Heat exchanger
- i Accumulator
- j Compressor accumulator
- k Muffler
- M1C Compressor
- M1F Fan
- R1T Thermistor (outdoor air)
- R2T Thermistor (heat exchanger)
- R3T Thermistor (compressor discharge)
- S1PH High pressure switch (automatic reset)
- Y1E Electronic expansion valve
- Y1S Solenoid valve (4-way valve)(ON: cooling)
- Heating
- Cooling




6.2 Wiring diagram: Outdoor unit

See the internal wiring diagram supplied with the unit (on the inside of the top plate). The abbreviations used are listed below.

(1) Connection diagram

English	Translation
Connection diagram	Connection diagram

   (2) Notes

English	Translation
Notes	Notes
	Connection
X1M	Main terminal
	Earth wiring
	Field supply
	Option
	Switch box
	PCB
	Wiring depending on model
	Protective earth
	Field wire

NOTES:



- 1 When operating, do not short-circuit protection device S1PH.
- 2 Refer to the combination table and the option manual for how to connect the wiring to X6A, X28A and X77A.
- 3 Colours: BLK: black; RED: red; BLU: blue; WHT: white; GRN: green; YLW: yellow



(3) Legend

AL*	Connector
C*	Capacitor
DB*	Rectifier bridge
DC*	Connector
DP*	Connector
E*	Connector
F1U	Fuse T 6.3 A 250 V
FU1, FU2	Fuse T 3.15 A 250 V
FU3	Fuse T 30 A 250 V
H*	Connector
IPM*	Intelligent power module
L	Connector
LED 1~5	Indication lamp
LED A	Pilot lamp
L*	Reactor
M1C	Compressor motor
M1F	Fan motor
MR*	Magnetic relay
N	Connector
PCB1	Printed circuit board (main)
PCB2	Printed circuit board (service)
PS	Switching power supply
Q1L	Thermal protector
Q1DI	# Earth leakage circuit breaker
Q*	Insulated gate bipolar transistor (IGBT)
R1T	Thermistor (air)
R2T	Thermistor (heat exchanger)
R3T	Thermistor (discharge)

RTH2	Resistor
S	Connector
S1PH	High pressure switch
S20~502	Connector
SA1	Surge arrester
SHM	Terminal strip fixed plate
SW*	Push button
U, V, W	Connector
V3, V4, V401	Varistor
X*A	Connector
X*M	Terminal strip
Y1E	Electronic expansion valve
Y1S	Solenoid valve (4-way valve)
Z*C	Noise filter (ferrite core)
Z*F	Noise filter

Field supply

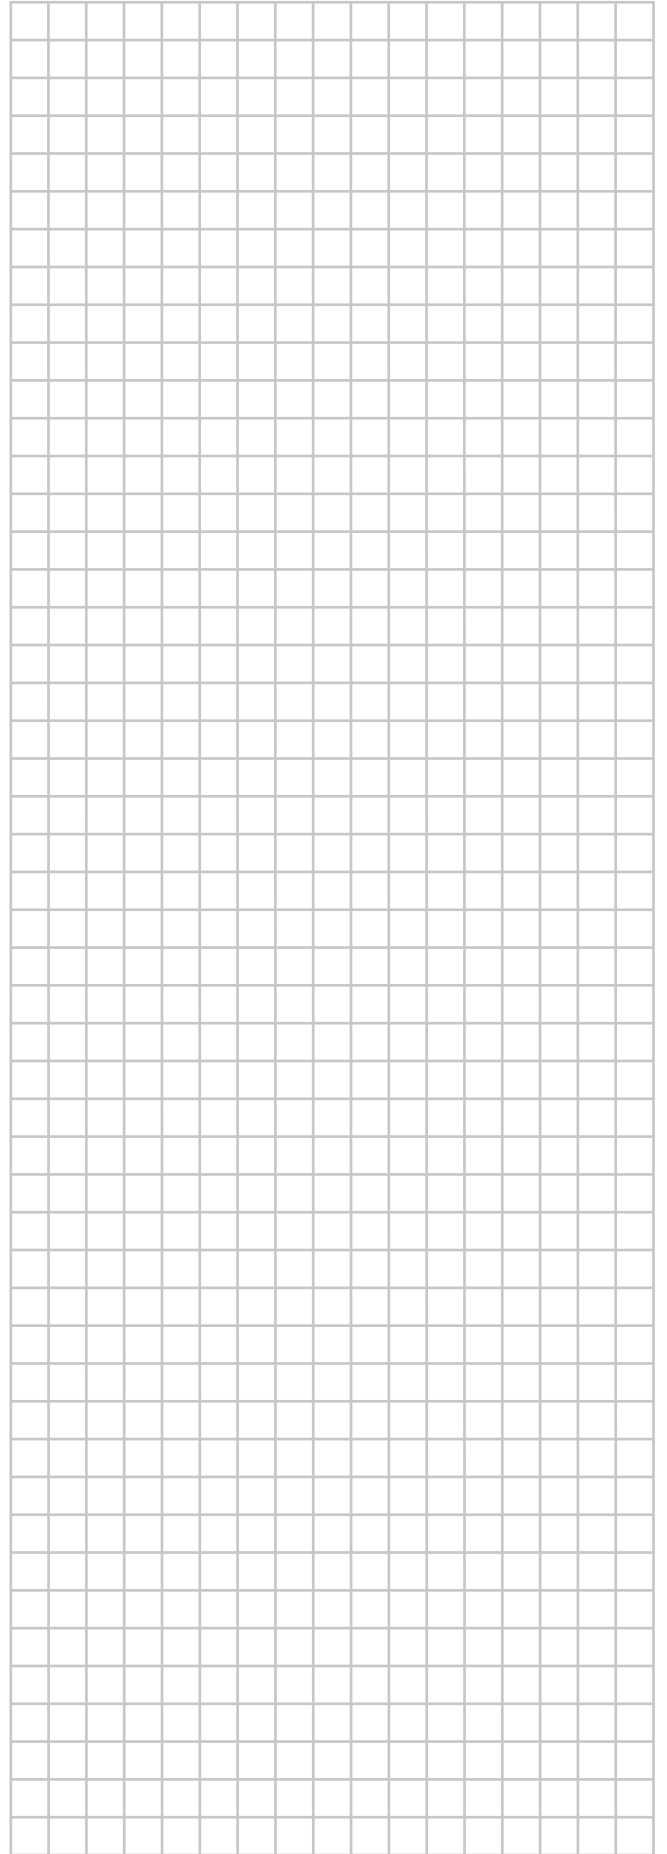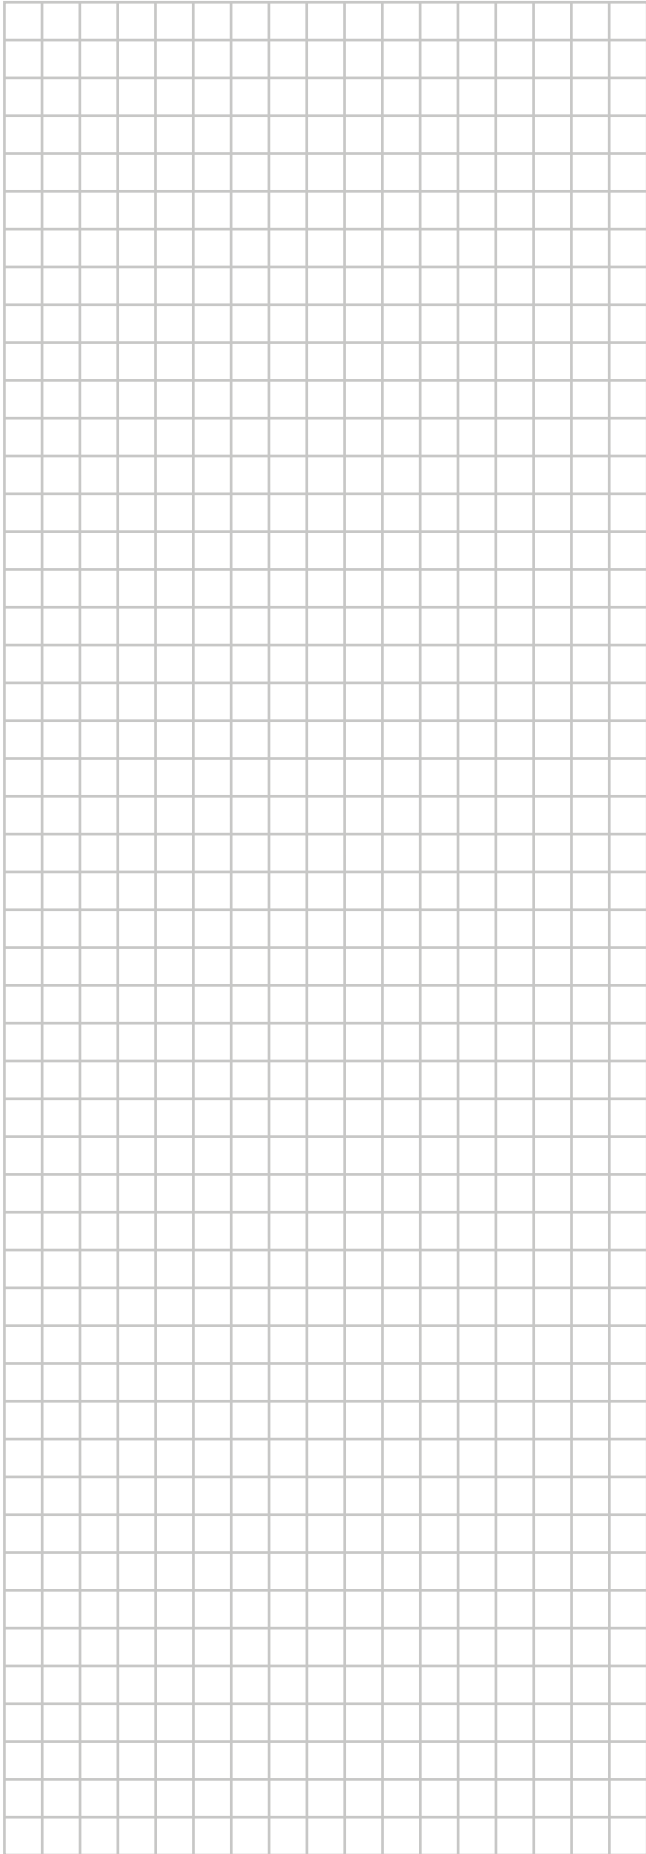

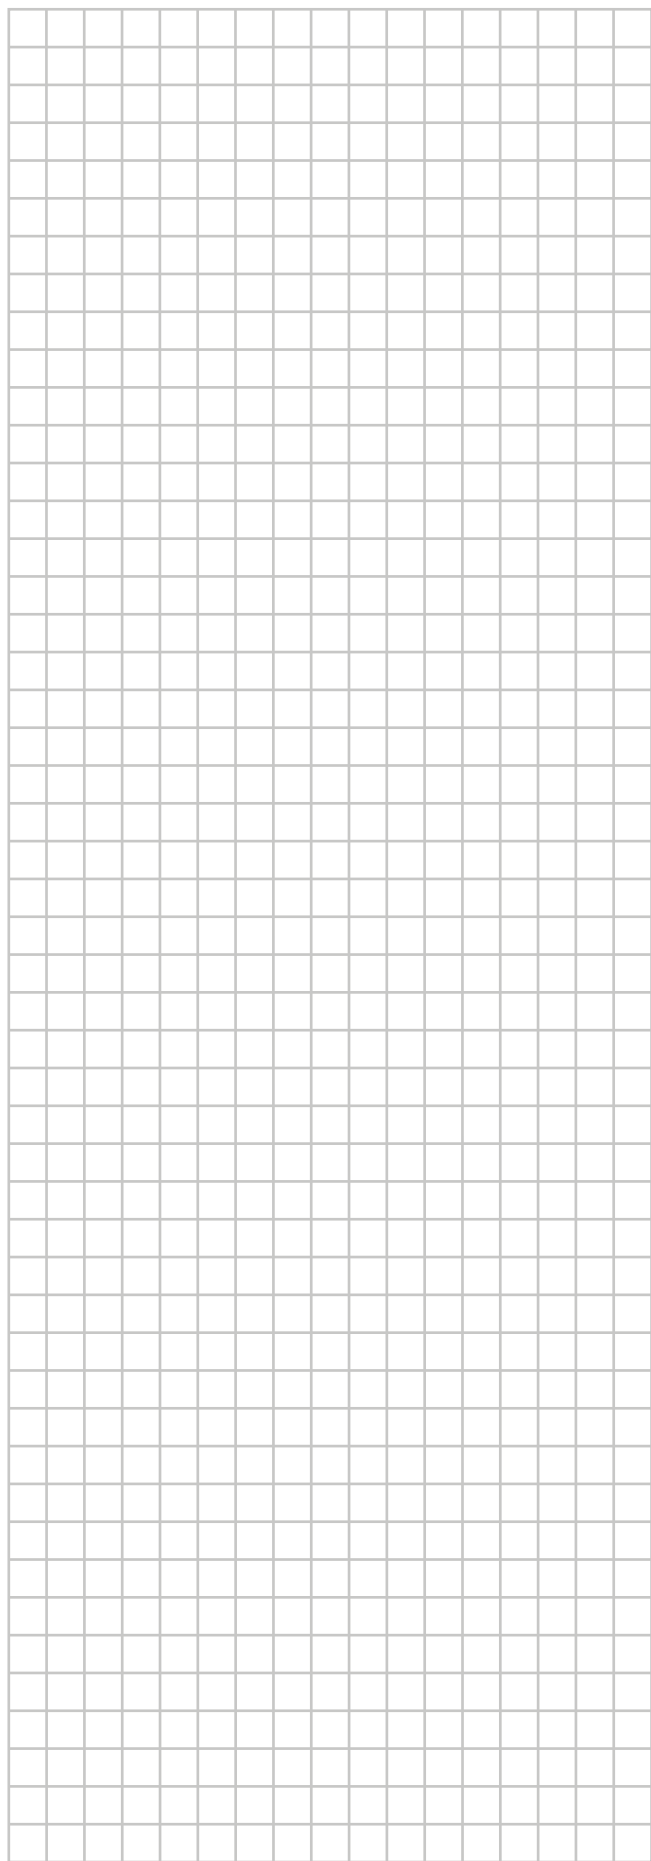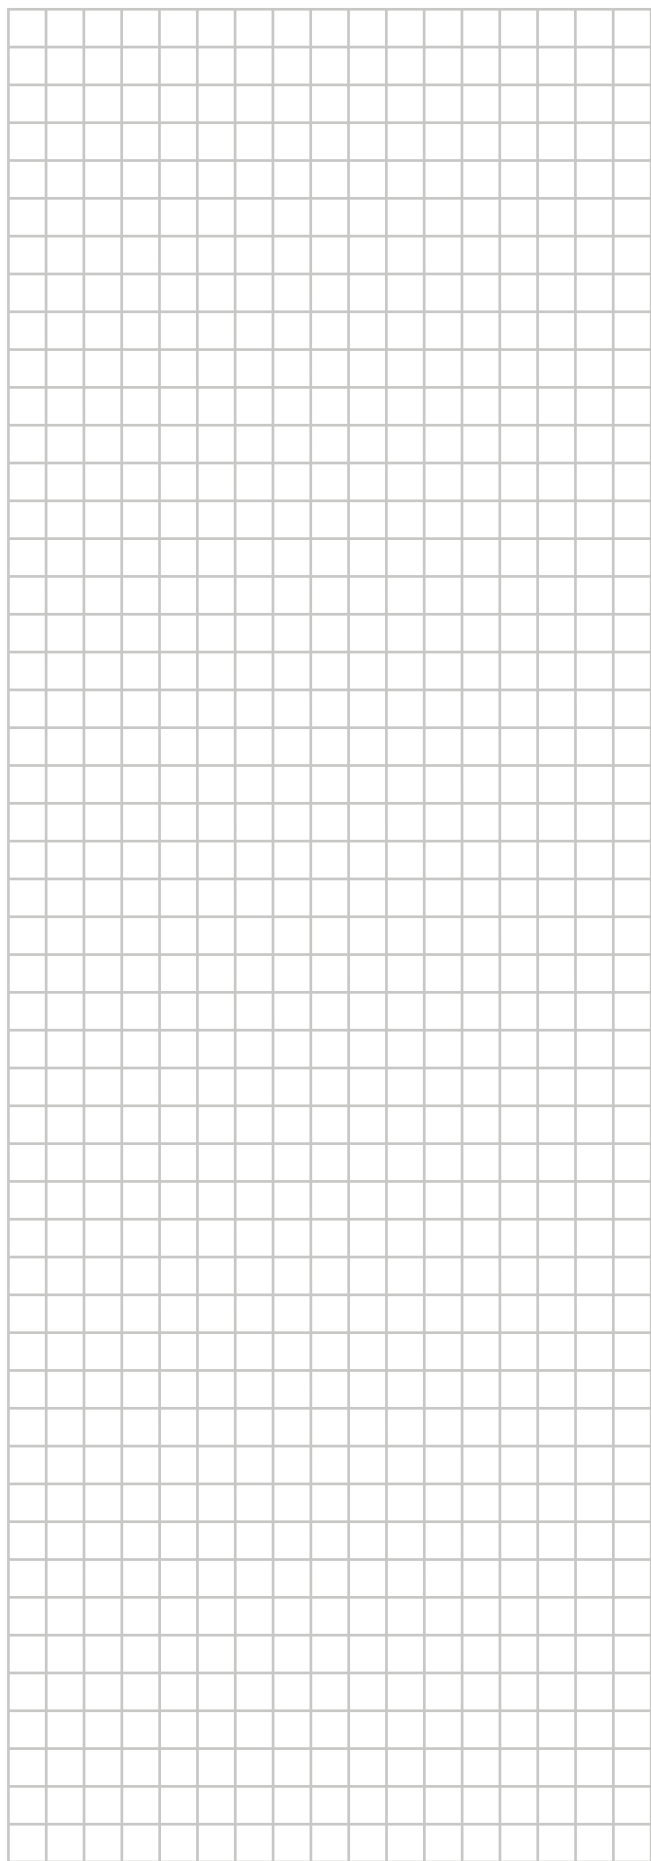



Copyright 2020 Daikin

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium

4P618926-1 2020.03