




# Installation manual

## Daikin Altherma 3 R F



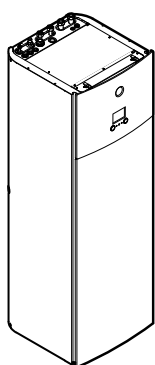

<https://daikintechicaldatahub.eu>







## Table of contents

<b>1</b>	<b>About this document</b>	<b>4</b>		
<b>2</b>	<b>Specific installer safety instructions</b>	<b>5</b>		
<b>3</b>	<b>About the box</b>	<b>7</b>		
3.1	Indoor unit	7		
3.1.1	To remove the accessories from the indoor unit	7		
3.1.2	To handle the indoor unit	7		
3.2	Domestic hot water tank kit	7		
3.2.1	To remove the accessories from the domestic hot water tank kit	7		
3.3	Checklist for the required DHW accessories	7		
<b>4</b>	<b>Unit installation</b>	<b>8</b>		
4.1	Preparing the installation site	8		
4.1.1	Installation site requirements of the indoor unit	8		
4.1.2	Special requirements for R32 units	8		
4.1.3	Installation patterns	9		
4.2	Opening and closing the unit	14		
4.2.1	To open the indoor unit	14		
4.2.2	To lower the switch box on the indoor unit	15		
4.2.3	To close the indoor unit	15		
4.3	Mounting the indoor unit	15		
4.3.1	To install the indoor unit	15		
4.3.2	To connect the drain hose to the drain	16		
<b>5</b>	<b>Piping installation</b>	<b>16</b>		
5.1	Preparing refrigerant piping	16		
5.1.1	Refrigerant piping requirements	16		
5.1.2	Refrigerant piping insulation	16		
5.2	Connecting refrigerant piping	17		
5.2.1	To connect the refrigerant piping to the indoor unit	17		
5.3	Preparing water piping	17		
5.3.1	To check the water volume and flow rate	17		
5.4	Connecting water piping	18		
5.4.1	To connect the water piping	18		
5.4.2	To connect the water piping for domestic hot water	18		
5.4.3	To connect the recirculation piping	20		
5.4.4	To fill the water circuit	20		
5.4.5	To fill the domestic hot water tank	20		
5.4.6	To insulate the water piping	20		
<b>6</b>	<b>Electrical installation</b>	<b>20</b>		
6.1	About electrical compliance	20		
6.2	Guidelines when connecting the electrical wiring	20		
6.3	Connections to the indoor unit	20		
6.3.1	To connect the main power supply	22		
6.3.2	To connect the backup heater power supply	23		
6.3.3	To connect the shut-off valve	24		
6.3.4	To connect the electricity meters	24		
6.3.5	To connect the domestic hot water pump	25		
6.3.6	To connect the alarm output	25		
6.3.7	To connect the space cooling/heating ON/OFF output	26		
6.3.8	To connect the changeover to external heat source	26		
6.3.9	To connect the power consumption digital inputs	27		
6.3.10	To connect the safety thermostat (normally closed contact)	27		
6.3.11	To connect a Smart Grid	28		
6.4	After connecting the electrical wiring to the indoor unit	30		
<b>7</b>	<b>Configuration</b>	<b>30</b>		
7.1	Overview: Configuration	30		
7.1.1	To access the most used commands	30		
7.2	Configuration wizard	31		
7.2.1	Configuration wizard: Language	31		
7.2.2	Configuration wizard: Time and date	31		
7.2.3	Configuration wizard: System	31		
7.2.4	Configuration wizard: Backup heater	32		
7.2.5	Configuration wizard: Main zone	33		
7.2.6	Configuration wizard: Additional zone	34		
7.2.7	Configuration wizard: Tank	34		
7.3	Weather-dependent curve	35		
7.3.1	What is a weather-dependent curve?	35		
7.3.2	2-points curve	35		
7.3.3	Slope-offset curve	36		
7.3.4	Using weather-dependent curves	36		
7.4	Settings menu	37		
7.4.1	Main zone	37		
7.4.2	Additional zone	37		
7.4.3	Information	37		
7.5	Menu structure: Overview installer settings	38		
<b>8</b>	<b>Commissioning</b>	<b>39</b>		
8.1	Checklist before commissioning	39		
8.2	Checklist during commissioning	39		
8.2.1	To check the minimum flow rate	40		
8.2.2	To perform an air purge	40		
8.2.3	To perform an operation test run	40		
8.2.4	To perform an actuator test run	40		
8.2.5	To perform an underfloor heating screed dryout	41		
<b>9</b>	<b>Hand-over to the user</b>	<b>41</b>		
<b>10</b>	<b>Maintenance and service</b>	<b>42</b>		
10.1	Overview: Maintenance and service	42		
10.2	Maintenance safety precautions	42		
10.3	Checklist for yearly maintenance of the indoor unit	42		
10.4	To drain the domestic hot water tank	44		
10.5	To inspect the inside of the domestic hot water tank	44		
10.6	About cleaning the water filter in case of trouble	44		
10.6.1	To remove the water filter	45		
10.6.2	To clean the water filter in case of trouble	45		
10.6.3	To install the water filter	45		
<b>11</b>	<b>Technical data</b>	<b>46</b>		
11.1	Piping diagram: Indoor unit	46		
11.2	Wiring diagram: Indoor unit	47		
11.3	Technical specifications: Domestic hot water tank	50		
11.3.1	Test results in accordance with EN12897 (2016)	50		
11.3.2	Warning label	50		
<b>1</b>	<b>About this document</b>			
	<b>INFORMATION</b>			
	Make sure that the user has the printed documentation and ask him/her to keep it for future reference.			
	<b>INFORMATION</b>			
	EBVH16SU23DJ6V is a heating only model. Therefore, all references to cooling in this document are NOT applicable.			
	<b>Target audience</b>			
	Authorised installers			
	<b>Documentation set</b>			
	This document is part of a documentation set. The complete set consists of:			
	▪ <b>General safety precautions:</b>			
	▪ Safety instructions that you must read before installing			
	▪ Format: Paper (in the box of the indoor unit)			
	▪ <b>Operation manual:</b>			
	▪ Quick guide for basic usage			
	▪ Format: Paper (in the box of the indoor unit)			

- **User reference guide:**
  - Detailed step-by-step instructions and background information for basic and advanced usage
  - Format: Digital files on <http://www.daikineurope.com/support-and-manuals/product-information/>
- **Installation manual – Outdoor unit:**
  - Installation instructions
  - Format: Paper (in the box of the outdoor unit)
- **Installation manual – Indoor unit:**
  - Installation instructions
  - Format: Paper (in the box of the indoor unit)
- **Installer reference guide:**
  - Preparation of the installation, good practices, reference data, ...
  - Format: Digital files on <http://www.daikineurope.com/support-and-manuals/product-information/>
- **Addendum book for optional equipment:**
  - Additional info about how to install optional equipment
  - Format: Paper (in the box of the indoor unit) + Digital files on <http://www.daikineurope.com/support-and-manuals/product-information/>

Latest revisions of the supplied documentation may be available on the regional Daikin website or via your dealer.

The original documentation is written in English. All other languages are translations.

### Technical engineering data

- A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible).
- The **full set** of latest technical data is available on the Daikin Business Portal (authentication required).

### Online tools

In addition to the documentation set, some online tools are available for installers:

- **Daikin Technical Data Hub**
  - Central hub for technical specifications of the unit, useful tools, digital resources, and more.
  - Publicly accessible via <https://daikintechdatahub.eu>.
- **Heating Solutions Navigator**
  - Digital toolbox that offers a variety of tools to facilitate the installation and configuration of heating systems.
  - To access Heating Solutions Navigator, registration to the Stand By Me platform is required. For more information, see <https://professional.standbyme.daikin.eu>.
- **Daikin e-Care**
  - Mobile app for installers and service technicians that allows you to register, configure and troubleshoot heating systems.
  - The mobile app can be downloaded for iOS and Android devices using the QR codes below. Registration to the Stand By Me platform is required to access the app.

App Store



Google Play



## 2 Specific installer safety instructions



### INFORMATION

EBVH16SU23DJ6V is a heating only model. Therefore, all references to cooling in this document are NOT applicable.

Always observe the following safety instructions and regulations.

Installation site (see "4.1 Preparing the installation site" [p 8])



### WARNING

The appliance shall be stored in a room without continuously operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater).



### WARNING

DO NOT reuse refrigerant piping that has been used with any other refrigerant. Replace the refrigerant pipes or clean thoroughly.



### WARNING

Follow the service space dimensions in this manual for correct installation of the unit. See "4.1.1 Installation site requirements of the indoor unit" [p 8].

Special requirements for R32 (see "4.1.2 Special requirements for R32 units" [p 8])



### WARNING

- Do NOT pierce or burn.
- Do NOT use means to accelerate the defrosting process or to clean the equipment, other than those recommended by the manufacturer.
- Be aware that R32 refrigerant does NOT contain an odour.



### WARNING

The appliance shall be stored so as to prevent mechanical damage and in a well-ventilated room without continuously operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater).



### WARNING

Make sure installation, servicing, maintenance and repair comply with instructions from Daikin and with applicable legislation and are executed ONLY by authorised persons.

Opening and closing the unit (see "4.2 Opening and closing the unit" [p 14])



### DANGER: RISK OF ELECTROCUTION



### DANGER: RISK OF BURNING/SCALDING

Mounting the indoor unit (see "4.3 Mounting the indoor unit" [p 15])



### WARNING

Fixing method of the indoor unit MUST be in accordance with the instructions from this manual. See "4.3 Mounting the indoor unit" [p 15].

Piping installation (see "5 Piping installation" [p 16])



### WARNING

Field piping method MUST be in accordance with the instructions from this manual. See "5 Piping installation" [p 16].

## 2 Specific installer safety instructions



### WARNING

The discharge pipes from the pressure relief valves **MUST** terminate in a safe and visible position without forming any risk to persons in the vicinity.



### WARNING

- Discharge piping, tundish, drain valves, etc. **MUST** be positioned away from any electrical components.
- The discharge pipe away from the tundish **MUST** terminate in a safe, visible position without forming any risk to persons in the vicinity.



### WARNING

- Do **NOT** install any valves between the domestic hot water tank and relief valves/expansion vessel.
- Do **NOT** install shut-off valves between the expansion relief valve and the domestic hot water tank.

Electrical installation (see "6 Electrical installation" [p 20])



### DANGER: RISK OF ELECTROCUTION



### WARNING

Electrical wiring connection method **MUST** be in accordance with the instructions from:

- This manual. See "6 Electrical installation" [p 20].
- The wiring diagram, which is delivered with the unit, located on the inside of the indoor unit switch box cover. For a translation of its legend, see "11.2 Wiring diagram: Indoor unit" [p 47].



### WARNING

- All wiring **MUST** be performed by an authorised electrician and **MUST** comply with the applicable legislation.
- Make electrical connections to the fixed wiring.
- All components procured on-site and all electrical construction **MUST** comply with the applicable legislation.



### WARNING

If the supply cord is damaged, it **MUST** be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



### WARNING

**ALWAYS** use multicore cable for power supply cables.




### CAUTION

Do **NOT** push or place redundant cable length in the unit.



### WARNING

Make sure that the electrical wiring does **NOT** touch the refrigerant gas pipe, which can be very hot.

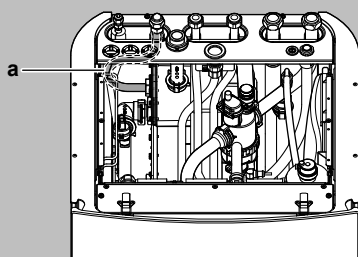

a Refrigerant gas pipe



### WARNING

The backup heater **MUST** have a dedicated power supply and **MUST** be protected by the safety devices required by the applicable legislation.



### CAUTION

To guarantee the unit is completely earthed, **ALWAYS** connect the backup heater power supply and the earth cable.



### INFORMATION

Details of type and rating of fuses, or rating of circuit breakers are described in "6 Electrical installation" [p 20].

Commissioning (see "8 Commissioning" [p 39])





### WARNING

Commissioning method **MUST** be in accordance with the instructions from this manual. See "8 Commissioning" [p 39].



### WARNING

**Air purging heat emitters or collectors.** Before you purge air from heat emitters or collectors, check if  or  is displayed on the home screen of the user interface.

- If not, you can purge air immediately.
- If yes, make sure that the room where you want to purge air is sufficiently ventilated. **Reason:** Refrigerant might leak into the water circuit, and subsequently into the room when you purge air from the heat emitters or collectors.

Maintenance and service (see "10 Maintenance and service" [p 42])



### CAUTION

Water coming out of the valve may be very hot.



### WARNING

If the internal wiring is damaged, it has to be replaced by the manufacturer, its service agent or similarly qualified persons.



### DANGER: RISK OF BURNING/SCALDING

The water in the tank can be very hot.



### NOTICE

Although the water circuit is drained, some water may be spilled when removing the magnetic filter/dirt separator from the filter housing. **ALWAYS** clean up spilled water.



### NOTICE

To protect the piping connected to the magnetic filter/dirt separator from damage it is recommended to perform this procedure with the magnetic filter/dirt separator removed from the unit.



### NOTICE

Opening the magnetic filter/dirt separator is **ONLY** required in case of severe issues. Preferably this action is never to be done during the complete lifetime of the magnetic filter/dirt separator.



### NOTICE

Check the condition of the O-rings and replace if needed. Apply water to the O-rings before installation.

### 3 About the box




#### INFORMATION

EBVH16SU23DJ6V is a heating only model. Therefore, all references to cooling in this document are NOT applicable.

#### 3.1 Indoor unit

- At delivery, the unit MUST be checked for damage. Any damage MUST be reported immediately to the claims agent of the carrier.
- Bring the packed unit as close as possible to its final installation position to prevent damage during transport.
- Unpack the indoor unit completely according to the instructions mentioned on the unpacking instructions sheet.


##### 3.1.1 To remove the accessories from the indoor unit

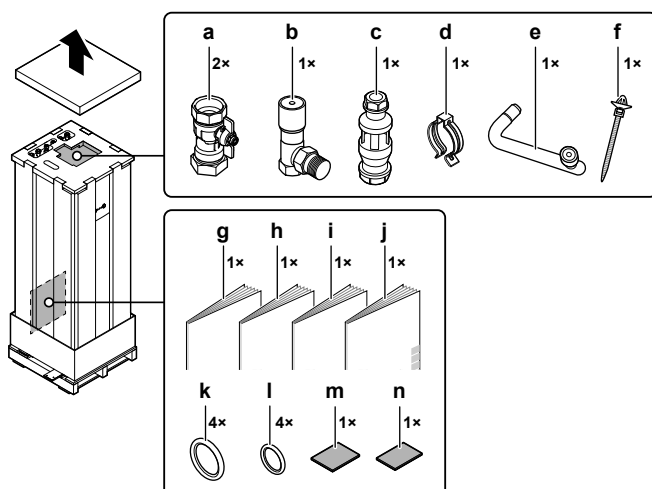

- a Shut-off valves for water circuit
- b Overpressure bypass valve
- c Tundish (to mount onto the pressure relief valve discharge pipe)
- d Quick fixture (for the discharge pipe)
- e Discharge pipe (for pressure relief valve)
- f Cable tie + clip (for the discharge pipe)
- g General safety precautions
- h Addendum book for optional equipment
- i Indoor unit installation manual
- j Operation manual
- k Sealing rings for shut-off valves (space heating water circuit)
- l Sealing rings for field-supplied shut-off valves (domestic hot water circuit)
- m Sealing tape for low voltage wiring intake (66×80 mm)
- n Antisweat sticker to cover the hole at the back of the unit (50×80 mm)

##### 3.1.2 To handle the indoor unit


Use the handles at the back and at the bottom to carry the unit.

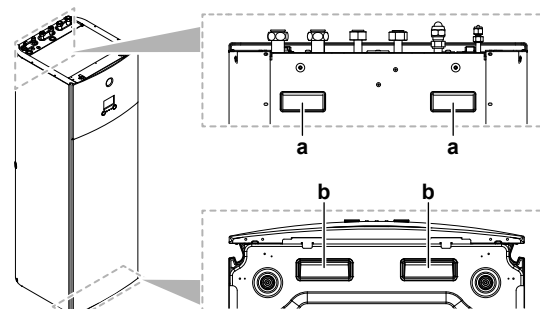

- a Handles at the back of the unit
- b Handles at the bottom of the unit. Carefully tilt the unit to the back so that the handles become visible.

#### 3.2 Domestic hot water tank kit

##### 3.2.1 To remove the accessories from the domestic hot water tank kit

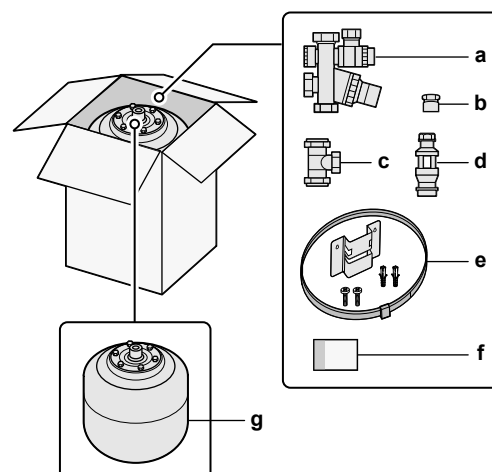

- a Pressure reducing valve/pressure relief valve combination. Water inlet and water outlet 22 mm connection, discharge piping connection 15 mm
- b Adaptor 22 mm×3/4" Female BSP
- c T-piece 22 mm×22 mm×22 mm
- d Tundish 15 mm inlet, 22 mm outlet
- e Wall mounting set for expansion vessel
- f Instruction sheet
- g Expansion vessel of 18 l – 3/4" Male BSP



#### NOTICE

All piping MUST be installed according to section G3 of the Building Regulations.

#### 3.3 Checklist for the required DHW accessories

For installation compliant with section G3 of the Building Regulations, you must verify that the following accessories are present.

##### Delivered with indoor unit:

<input type="checkbox"/>	Tundish 15 mm inlet, 22 mm outlet
--------------------------	-----------------------------------

## 4 Unit installation

### Delivered with domestic hot water tank kit:

<input type="checkbox"/>	Pressure reducing valve/pressure relief valve combination
<input type="checkbox"/>	Adaptor 22 mm×3/4" Female BSP
<input type="checkbox"/>	T-piece 22 mm×22 mm×22 mm
<input type="checkbox"/>	Tundish 15 mm inlet, 22 mm outlet
<input type="checkbox"/>	Wall mounting set for expansion vessel
<input type="checkbox"/>	Instruction sheet
<input type="checkbox"/>	Expansion vessel of 18 l – 3/4" Male BSP

## 4 Unit installation



### INFORMATION

EBVH16SU23DJ6V is a heating only model. Therefore, all references to cooling in this document are NOT applicable.

### 4.1 Preparing the installation site



#### WARNING

The appliance shall be stored in a room without continuously operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater).



#### WARNING

DO NOT reuse refrigerant piping that has been used with any other refrigerant. Replace the refrigerant pipes or clean thoroughly.


#### 4.1.1 Installation site requirements of the indoor unit

- The indoor unit is designed for indoor installation only and for the following ambient temperatures:
  - Space heating operation: 5~30°C
  - Domestic hot water production: 5~35°C
- Mind the following measurements guidelines:

Maximum refrigerant piping length <sup>(a)</sup> between indoor unit and outdoor unit	50 m
Minimum refrigerant piping length <sup>(a)</sup> between indoor unit and outdoor unit	3 m
Maximum height difference between indoor unit and outdoor unit	30 m

<sup>(a)</sup> Refrigerant piping length is the one-way length of liquid piping.

- Mind the following spacing installation guidelines:

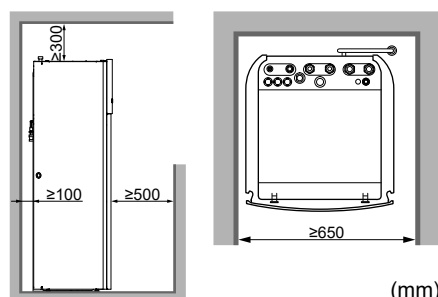

### INFORMATION

If you have limited installation space, do the following before installing the unit in its final position: "4.3.2 To connect the drain hose to the drain" [▶ 16]. It requires to remove one or both side panels.

#### 4.1.2 Special requirements for R32 units

Because the total refrigerant charge in the system is  $\geq 1.84$  kg, the room where you install the indoor unit must comply with the conditions described in "4.1.3 Installation patterns" [▶ 9].



#### WARNING

- Do NOT pierce or burn.
- Do NOT use means to accelerate the defrosting process or to clean the equipment, other than those recommended by the manufacturer.
- Be aware that R32 refrigerant does NOT contain an odour.



#### WARNING

The appliance shall be stored so as to prevent mechanical damage and in a well-ventilated room without continuously operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater) and have a room size as specified below.



#### NOTICE

- Do NOT re-use joints and copper gaskets which have been used already.
- Joints made in installation between parts of refrigerant system shall be accessible for maintenance purposes.



#### WARNING

Make sure installation, servicing, maintenance and repair comply with instructions from Daikin and with applicable legislation and are executed ONLY by authorised persons.



#### NOTICE






- Pipework shall be protected from physical damage.
- Installation of pipework shall be kept to a minimum.



### 4.1.3 Installation patterns

Depending on the type of room in which you install the indoor unit, different installation patterns are allowed:

Room type	Allowed patterns
Living room, kitchen, garage, attic, basement, storage room	1, 2, 3
Technical room (i.e. room that is NEVER occupied by persons)	1, 2, 3, 4

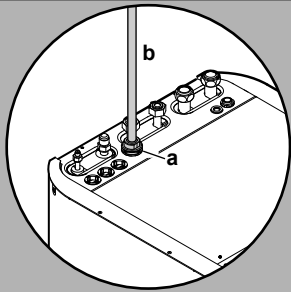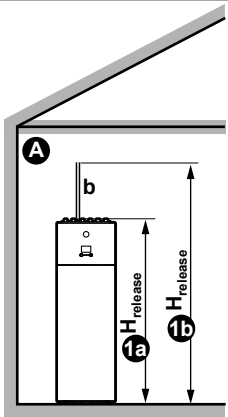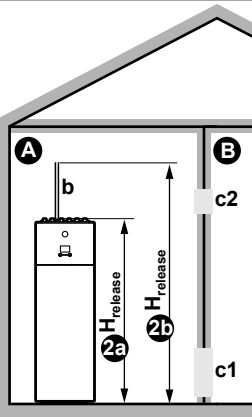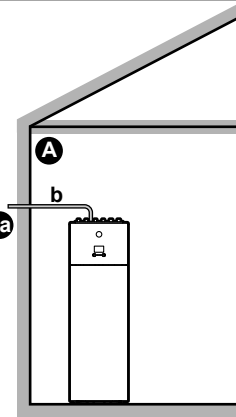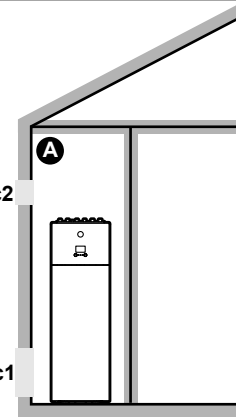	PATTERN 1	PATTERN 2	PATTERN 3	PATTERN 4
				
Ventilation openings	N/A	Between room A and B	N/A	Between room A and outside
Minimum floor area	Room A	Room A + Room B	N/A	N/A
Chimney	Might be needed	Might be needed	Connected to outside	N/A
Release in case of refrigerant leakage	Inside room A	Inside room A	Outside	Inside room A
Restrictions	See "PATTERN 1" [▶ 10], "PATTERN 2" [▶ 10], "PATTERN 3" [▶ 12], and "Tables for PATTERN 1, 2 and 3" [▶ 12]			See "PATTERN 4" [▶ 14]


<b>A</b>	Room A (= room where indoor unit is installed)
<b>B</b>	Room B (= adjacent room)
<b>a</b>	If no chimney is installed, this is the default point of release in case of refrigerant leakage. If needed, you can connect a chimney here: <ul style="list-style-type: none"> <li>Unit's connection point for the chimney = 1" male thread. Use a compatible counterpart for the chimney.</li> <li>Make sure the connection is airtight.</li> </ul>
<b>b</b>	Chimney
<b>c1</b>	Bottom opening for natural ventilation
<b>c2</b>	Top opening for natural ventilation
<b>H<sub>release</sub></b>	Actual release height: <b>1a/2a</b> : Without chimney. From floor to top of the unit. <ul style="list-style-type: none"> <li>For 180 l units =&gt; H<sub>release</sub> = 1.66 m</li> <li>For 230 l units =&gt; H<sub>release</sub> = 1.86 m</li> </ul> <b>1b/2b</b> : With chimney. From floor to top of the chimney. <ul style="list-style-type: none"> <li>For 180 l units =&gt; H<sub>release</sub> = 1.66 m + Chimney height</li> <li>For 230 l units =&gt; H<sub>release</sub> = 1.86 m + Chimney height</li> </ul>
<b>3a</b>	Installation with chimney connected to the outside. The release height is not relevant. There are no requirements to the minimum floor area.
<b>N/A</b>	Not applicable

Minimum floor area / Release height:

- The minimum floor area requirements depend on the release height of the refrigerant in case of a leakage. The higher the release height, the lower the minimum floor area requirements.
- The default point of release (without chimney) is at the top of the unit. To decrease the minimum floor area requirements, you can increase the release height by installing a chimney. If the chimney leads outside of the building, there are no requirements anymore to the minimum floor area.
- You can also take advantage of the floor area of the adjacent room (= room B) by providing ventilation openings between the two rooms.
- For installations in technical rooms (i.e. room that is NEVER occupied by persons), additionally to patterns 1, 2 and 3, you can also use **PATTERN 4**. For this pattern there are no requirements to the minimum floor area if you provide 2 openings (one at the bottom, one at the top) between the room and the outside to ensure natural ventilation. The room must be protected from frost.

## 4 Unit installation

### PATTERN 1

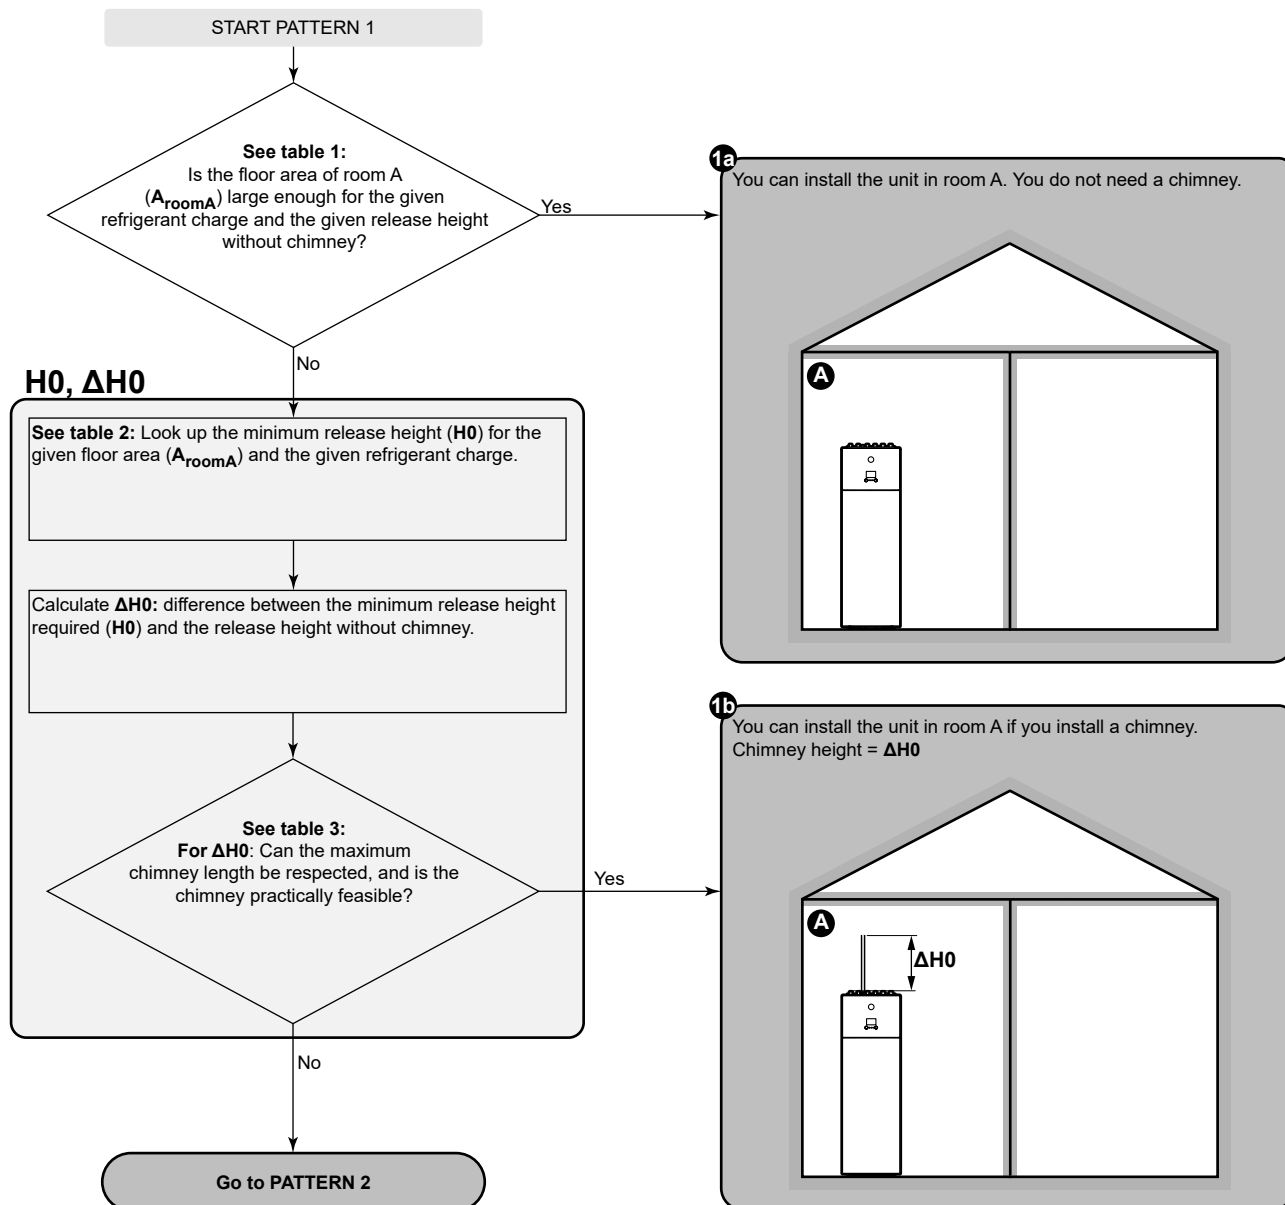



### PATTERN 2

#### PATTERN 2: Conditions ventilation openings

If you want to take advantage of the floor area of the adjacent room, you must provide 2 openings (one at the bottom, one at the top) between the rooms to ensure natural ventilation. The openings must comply with the following conditions:


- **Bottom opening ( $A_{nv}$ ):**
  - Must be a permanent opening that cannot be closed.
  - Must be completely located between 0 and 300 mm from the floor.
  - Must be  $\geq A_{nv-min}$  (minimum bottom opening area).
  - $\geq 50\%$  of the required opening area  $A_{nv-min}$  must be  $\leq 200$  mm from the floor.
  - The bottom of the opening must be  $\leq 100$  mm from the floor.
  - If the opening starts from the floor, the height of the opening must be  $\geq 20$  mm.
- **Top opening:**
  - Must be a permanent opening that cannot be closed.
  - Must be  $\geq 50\%$  of  $A_{nv-min}$  (minimum bottom opening area).
  - Must be  $\geq 1.5$  m from the floor.

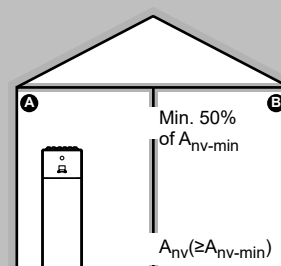

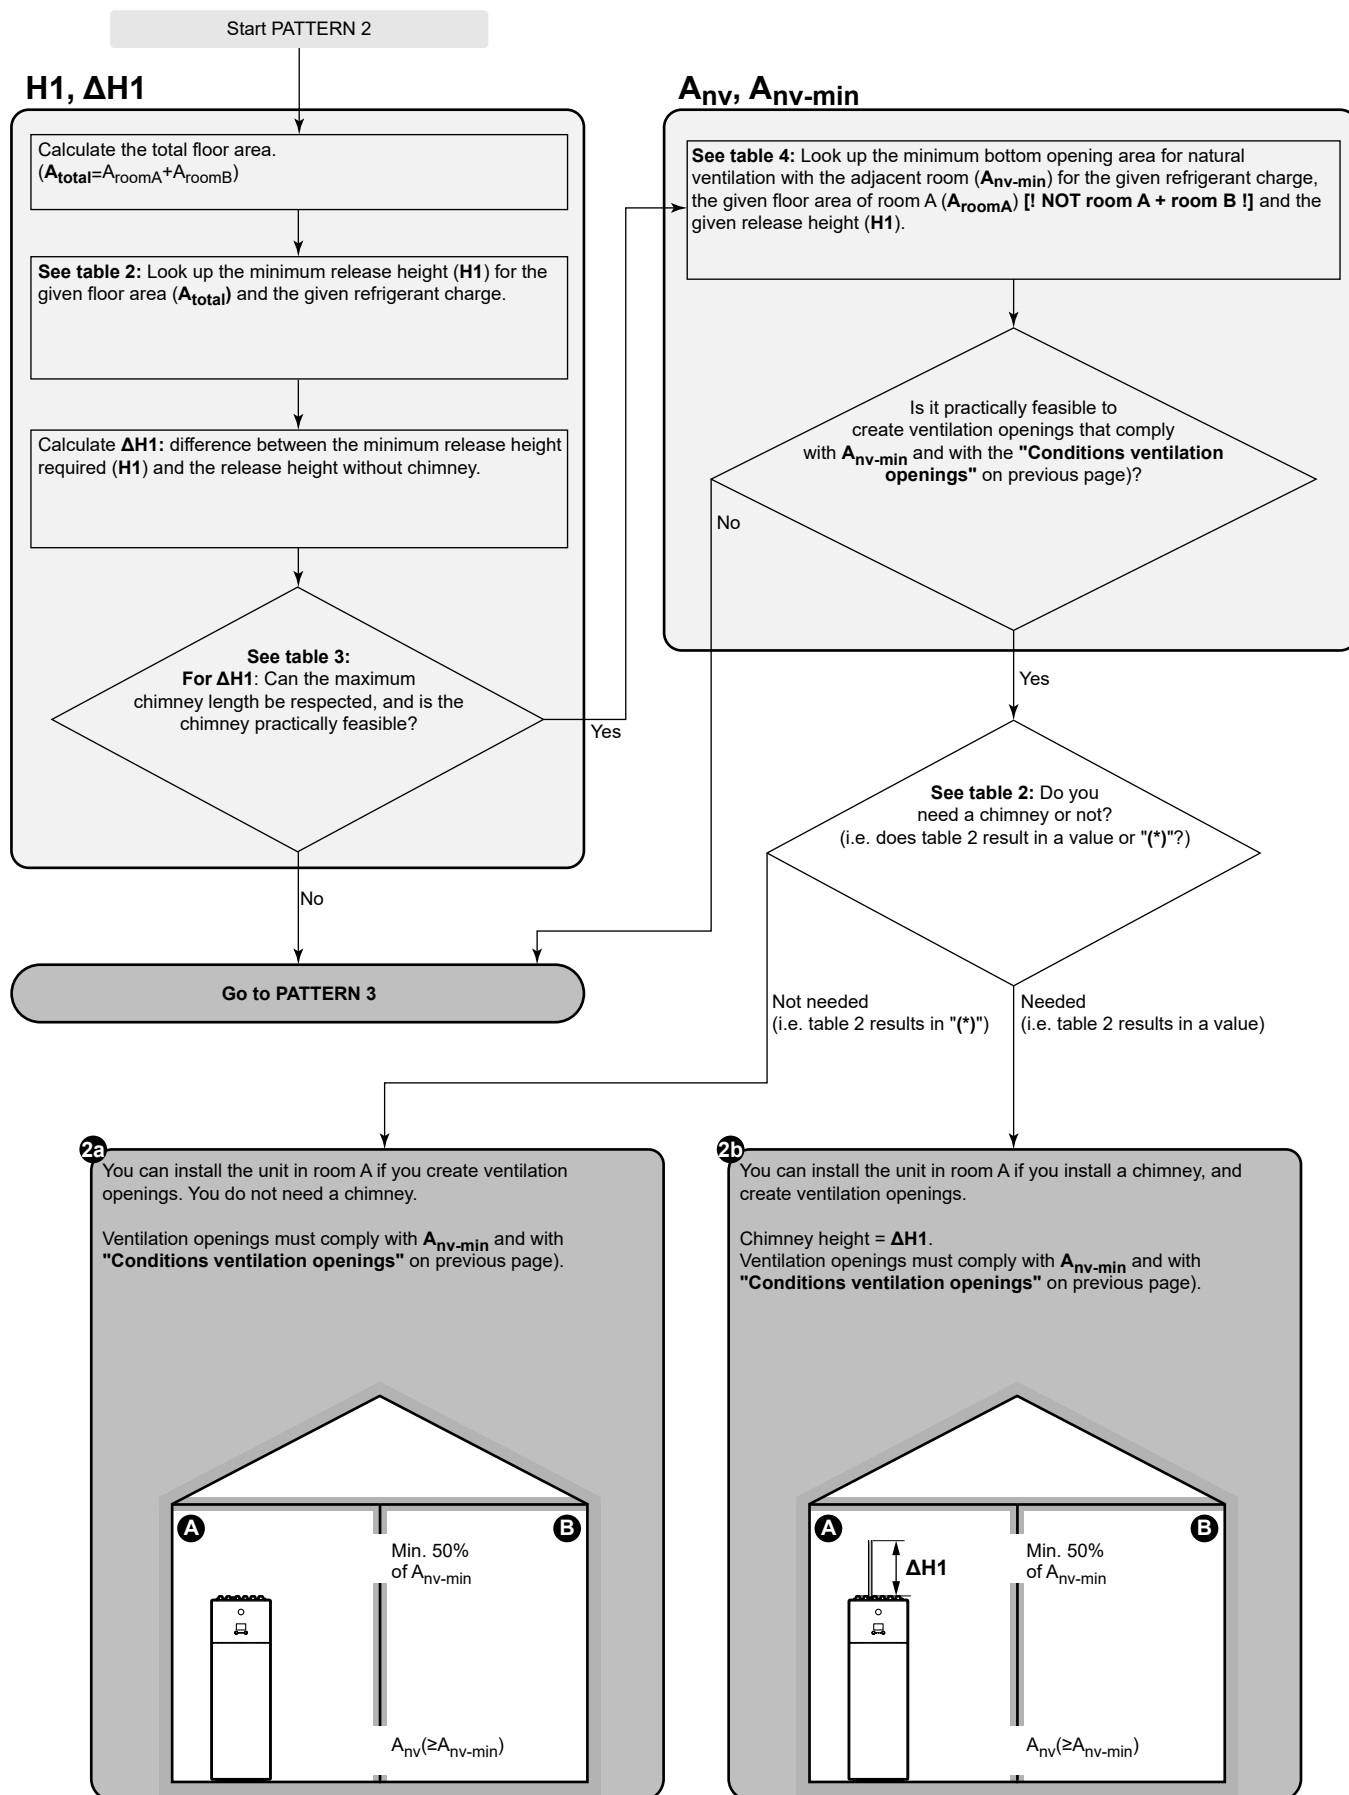

## 4 Unit installation

### PATTERN 3

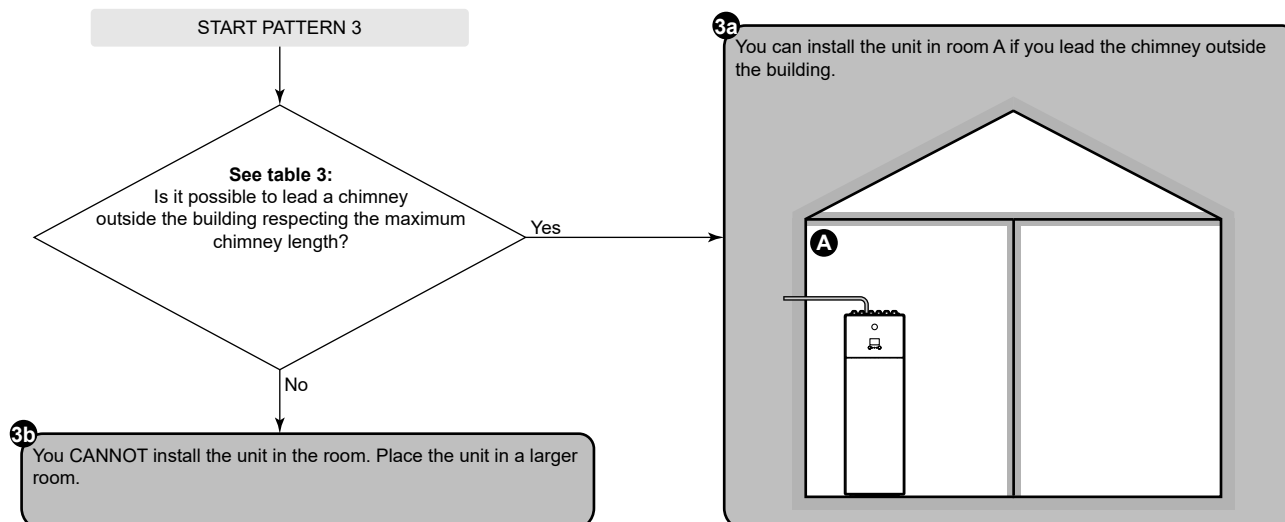

### Tables for PATTERN 1, 2 and 3

**Table 1: Minimum floor area**

For intermediate refrigerant charges, use the row with the higher value. **Example:** If the refrigerant charge is 4.3 kg, use the row of 4.5 kg.

Charge (kg)	Minimum floor area (m <sup>2</sup> )	
	Release height without chimney (m)	
	1.66 (Unit=180 l)	1.86 (Unit=230 l)
3.8	16.04	12.76
4	17.77	14.14
4.5	22.49	17.90
5	27.76	22.09
5.5	33.59	26.73
5.8	37.36	29.73

**Table 2: Minimum release height**

Take the following into account:

- For intermediate floor areas, use the column with the lower value. **Example:** If the floor area is 22.50 m<sup>2</sup>, use the column of 20.00 m<sup>2</sup>.
- For intermediate refrigerant charges, use the row with the higher value. **Example:** If the refrigerant charge is 4.3 kg, use the row of 4.5 kg.
- (\*): The release height of the unit without chimney (for 180 l units: 1.66 m; for 230 l units: 1.86 m) is already higher than the minimum required release height. => OK (no chimney needed).

Charge (kg)	Minimum release height (m)						
	Floor area (m <sup>2</sup> )						
	5.00	10.00	15.00	20.00	25.00	30.00	35.00
3.8	3.30	2.10	1.72	(*)	(*)	(*)	(*)
4	3.47	2.21	1.81	(*)	(*)	(*)	(*)
4.5	3.91	2.49	2.03	1.76	(*)	(*)	(*)
5	4.34	2.77	2.26	1.96	1.75	(*)	(*)
5.5	4.78	3.04	2.49	2.15	1.93	1.76	(*)
5.8	5.04	3.21	2.62	2.27	2.03	1.85	1.72

**Table 3: Maximum chimney length**

When installing a chimney, the chimney length must be less than the maximum chimney length.

- Use the columns with the correct refrigerant charge. For intermediate refrigerant charges, use the columns with the higher value. **Example:** If the refrigerant charge is 4.0 kg, use the columns of 5.8 kg.
- For intermediate diameters, use the column with the lower value. **Example:** If the diameter is 23 mm, use the column of 22 mm.
- X: Not allowed

Maximum chimney length (m) – In case of Refrigerant charge=3.8 kg (and T=60°C)						In case of Refrigerant charge=5.8 kg (and T=60°C)				
Chimney	Inside diameter of chimney (mm)					Inside diameter of chimney (mm)				
	20	22	24	26	28	20	22	24	26	28
Straight pipe	19.03	33.90	55.16	84.54	124.06	3.37	9.47	18.40	30.91	47.91
1× 90° elbow	17.23	31.92	53.00	82.20	121.54	1.57	7.49	16.24	28.57	45.39
2× 90° elbow	15.43	29.94	50.84	79.86	119.02	X	5.51	14.08	26.23	42.87
3× 90° elbow	13.63	27.96	48.68	77.52	116.50	X	3.53	11.92	23.89	40.35

**Table 4: Minimum bottom opening area for natural ventilation**

Take the following into account:

- Use the correct table. For intermediate refrigerant charges, use the table with the higher value. **Example:** If the refrigerant charge is 4.3 kg, use the table of 4.8 kg.
- For intermediate floor areas, use the column with the lower value. **Example:** If the floor area is 12.50 m<sup>2</sup>, use the column of 10.00 m<sup>2</sup>.
- For intermediate release height values, use the row with the lower value. **Example:** If the release height is 1.90 m, use the row of 1.86 m.
- A<sub>nv</sub>: Bottom opening area for natural ventilation.
- A<sub>nv-min</sub>: Minimum bottom opening area for natural ventilation.
- (\*): Already OK (no ventilation openings needed).

A <sub>nv-min</sub> (dm <sup>2</sup> ) – In case of Refrigerant charge=3.8 kg							
Release height (m)	Floor area of room A (m <sup>2</sup> ) [! NOT room A + room B !]						
	5.00	10.00	15.00	20.00	25.00	30.00	35.00
1.66	4.6	2.2	0.4	(*)	(*)	(*)	(*)
1.86	3.8	1.1	(*)	(*)	(*)	(*)	(*)
2.06	3.1	0.2	(*)	(*)	(*)	(*)	(*)
2.26	2.5	(*)	(*)	(*)	(*)	(*)	(*)
2.46	1.9	(*)	(*)	(*)	(*)	(*)	(*)
2.66	1.4	(*)	(*)	(*)	(*)	(*)	(*)
2.86	0.9	(*)	(*)	(*)	(*)	(*)	(*)
3.06	0.5	(*)	(*)	(*)	(*)	(*)	(*)


A <sub>nv-min</sub> (dm <sup>2</sup> ) – In case of Refrigerant charge=4.8 kg							
Release height (m)	Floor area of room A (m <sup>2</sup> ) [! NOT room A + room B !]						
	5.00	10.00	15.00	20.00	25.00	30.00	35.00
1.66	7.0	4.9	3.4	1.8	0.2	(*)	(*)
1.86	6.1	3.7	2.0	0.1	(*)	(*)	(*)
2.06	5.3	2.7	0.7	(*)	(*)	(*)	(*)
2.26	4.6	1.7	(*)	(*)	(*)	(*)	(*)
2.46	3.9	0.8	(*)	(*)	(*)	(*)	(*)
2.66	3.3	(*)	(*)	(*)	(*)	(*)	(*)
2.86	2.8	(*)	(*)	(*)	(*)	(*)	(*)
3.06	2.3	(*)	(*)	(*)	(*)	(*)	(*)

A <sub>nv-min</sub> (dm <sup>2</sup> ) – In case of Refrigerant charge=5.8 kg							
Release height (m)	Floor area of room A (m <sup>2</sup> ) [! NOT room A + room B !]						
	5.00	10.00	15.00	20.00	25.00	30.00	35.00
1.66	9.5	7.7	6.5	5.1	3.7	2.2	0.7
1.86	8.4	6.3	4.8	3.2	1.6	(*)	(*)
2.06	7.5	5.1	3.4	1.6	(*)	(*)	(*)
2.26	6.7	4.0	2.1	0.1	(*)	(*)	(*)
2.46	5.9	3.1	0.9	(*)	(*)	(*)	(*)
2.66	5.3	2.2	(*)	(*)	(*)	(*)	(*)
2.86	4.6	1.3	(*)	(*)	(*)	(*)	(*)
3.06	4.1	0.5	(*)	(*)	(*)	(*)	(*)

## 4 Unit installation

### PATTERN 4

PATTERN 4 is only allowed for installations in technical rooms (i.e. room that is NEVER occupied by persons). For this pattern there are no requirements to the minimum floor area if you provide 2 openings (one at the bottom, one at the top) between the room and the outside to ensure natural ventilation. The room must be protected from frost.

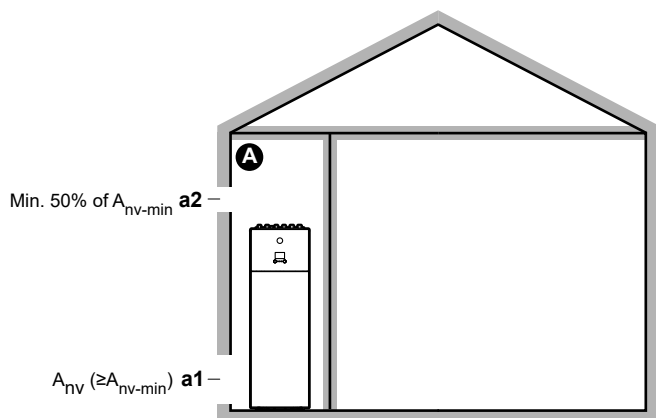

<b>A</b>	Unoccupied room where the indoor unit is installed. Must be protected from frost.
<b>a1</b>	<b><math>A_{nv}</math>: Bottom opening</b> for natural ventilation between the unoccupied room and the outside. <ul style="list-style-type: none"> <li>Must be a permanent opening that cannot be closed.</li> <li>Must be above ground level.</li> <li>Must be completely located between 0 and 300 mm from the floor of the unoccupied room.</li> <li>Must be <math>\geq A_{nv-min}</math> (minimum bottom opening area as specified in the table below).</li> <li><math>\geq 50\%</math> of the required opening area <math>A_{nv-min}</math> must be <math>\leq 200</math> mm from the floor of the unoccupied room.</li> <li>The bottom of the opening must be <math>\leq 100</math> mm from the floor of the unoccupied room.</li> <li>If the opening starts from the floor, the height of the opening must be <math>\geq 20</math> mm.</li> </ul>
<b>a2</b>	<b>Top opening</b> for natural ventilation between room A and the outside. <ul style="list-style-type: none"> <li>Must be a permanent opening that cannot be closed.</li> <li>Must be <math>\geq 50\%</math> of <math>A_{nv-min}</math> (minimum bottom opening area as specified in the table below).</li> <li>Must be <math>\geq 1.5</math> m from the floor of the unoccupied room.</li> </ul>

#### $A_{nv-min}$ (minimum bottom opening area for natural ventilation)

The minimum bottom opening area for natural ventilation between the unoccupied room and the outside depends on the total refrigerant in the system. For intermediate refrigerant charges, use the row with the higher value. **Example:** If the refrigerant charge is 4.3 kg, use the row of 4.4 kg.


Total refrigerant charge (kg)	$A_{nv-min}$ (dm <sup>2</sup> )
3.8	9.9
4	10.1
4.2	10.4
4.4	10.6
4.6	10.9
4.8	11.1
5	11.3
5.2	11.5
5.4	11.8

Total refrigerant charge (kg)	$A_{nv-min}$ (dm <sup>2</sup> )
5.6	12.0
5.8	12.2

## 4.2 Opening and closing the unit

### 4.2.1 To open the indoor unit


#### Overview

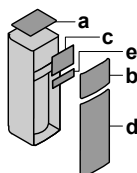

- a Top panel
- b User interface panel
- c Switch box cover
- d Front panel
- e High voltage switch box cover

#### Open

- 1 Remove the top panel.

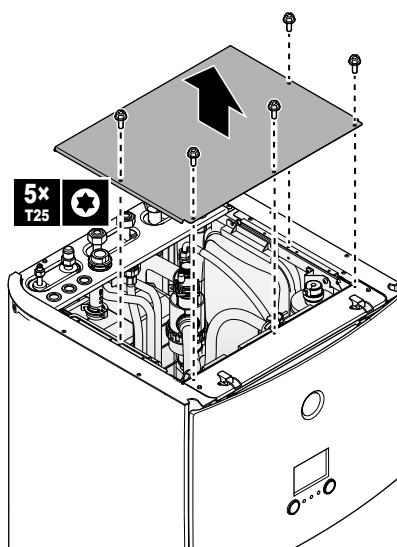


- 2 Remove the user interface panel. Open the hinges at the top and slide the top panel upwards.




#### NOTICE

If you remove the user interface panel, also disconnect the cables from the back of the user interface panel to prevent damage.

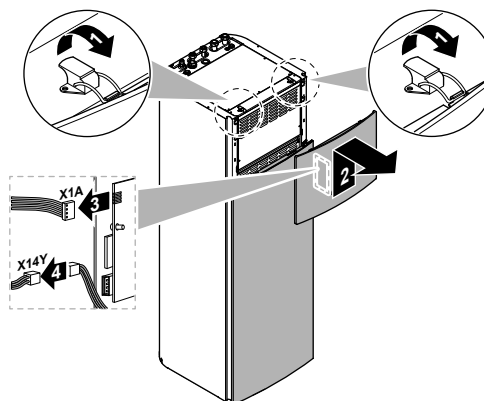


- 3 Remove the switch box cover.

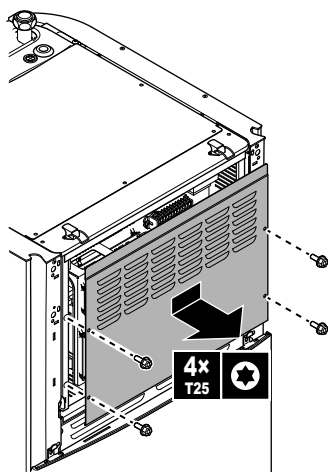


4 If necessary, remove the front plate. This is, for example, necessary in the following cases:

- "4.2.2 To lower the switch box on the indoor unit" [▶ 15]
- "4.3.2 To connect the drain hose to the drain" [▶ 16]
- When you need access to the high voltage switch box

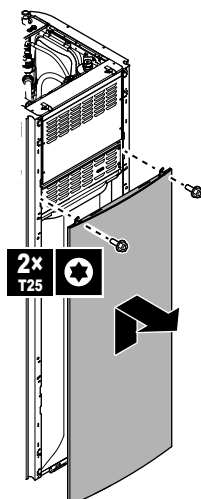

5 If you need access to the high voltage components, remove the high voltage switch box cover.

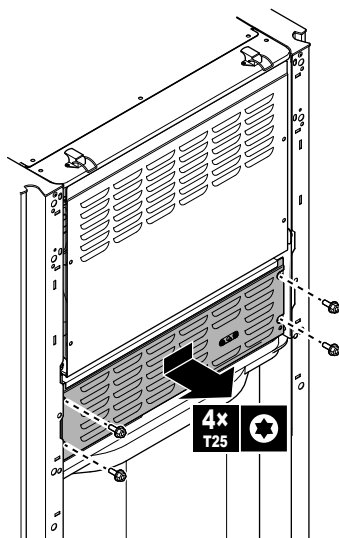


### 4.2.2 To lower the switch box on the indoor unit


During the installation, you will need access to the inside of the indoor unit. To have easier front access, put the switch box lower on the unit as follows:

**Prerequisite:** The user interface panel and front panel have been removed.

- 1 Remove the fixing plate at the top of the unit.
- 2 Tilt the switch box to the front and lift it out of its hinges.

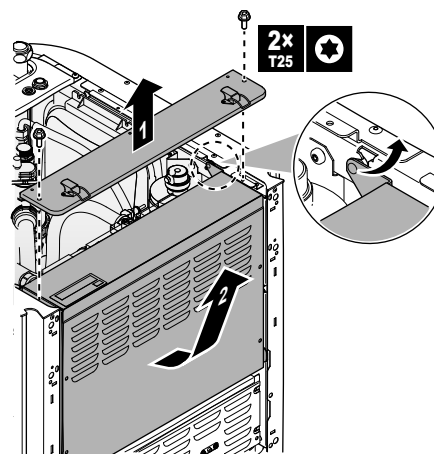

- 3 Place the switch box lower on the unit. Use the 2 hinges located lower on the unit.

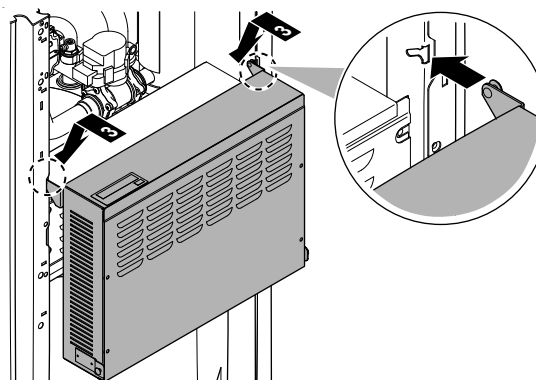

### 4.2.3 To close the indoor unit

- 1 Close the cover of the switch box.
- 2 Put the switch box back into place.
- 3 Reinstall the top panel.
- 4 Reinstall the side panels.
- 5 Reinstall the front panel.
- 6 Reconnect the cables to the user interface panel.
- 7 Reinstall the user interface panel.



#### NOTICE

When closing the indoor unit cover, make sure that the tightening torque does NOT exceed 4.1 N•m.


## 4.3 Mounting the indoor unit

### 4.3.1 To install the indoor unit

- 1 Lift the indoor unit from the pallet and place it on the floor. Also see "3.1.2 To handle the indoor unit" [▶ 7].
- 2 Connect the drain hose to the drain. See "4.3.2 To connect the drain hose to the drain" [▶ 16].


## 5 Piping installation

- Slide the indoor unit into position.
- Adjust the height of the leveling feet to compensate for floor irregularities. The maximum allowed deviation is 1°.

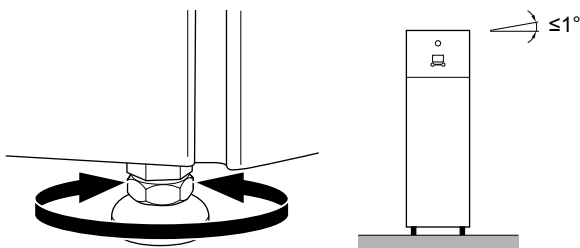

### NOTICE

Do NOT tilt the unit forwards:

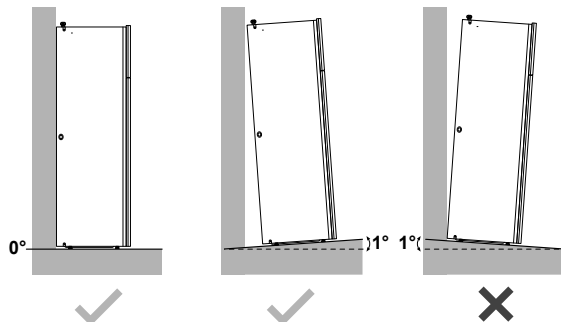

### 4.3.2 To connect the drain hose to the drain


Water coming from the pressure relief valve is collected in the drain pan. The drain pan is connected to a drain hose inside the unit. You must connect the drain hose to an appropriate drain according to the applicable legislation. You can route the drain hose through the left or right side panel.

**Prerequisite:** The user interface panel and front panel have been removed.


- Remove one of the side panels.
- Cut out the rubber grommet.
- Pull the drain hose through the hole.
- Reattach the side panel. Ensure the water can flow through the drain tube.

It is recommended to use a tundish to collect the water.

#### Option 1: Through the left side panel

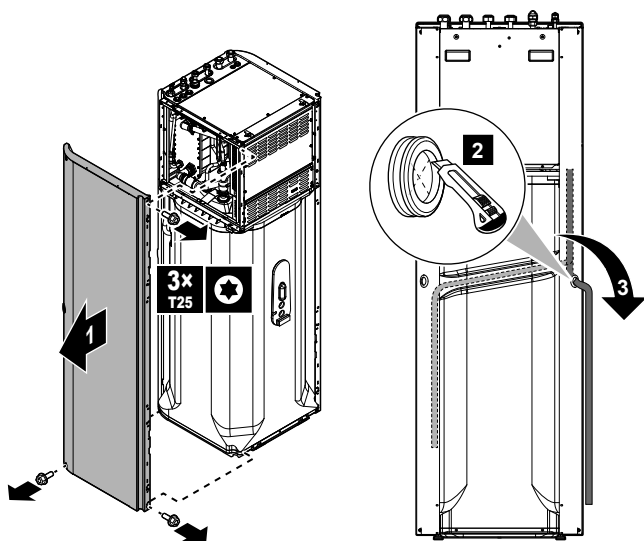

#### Option 2: Through the right side panel

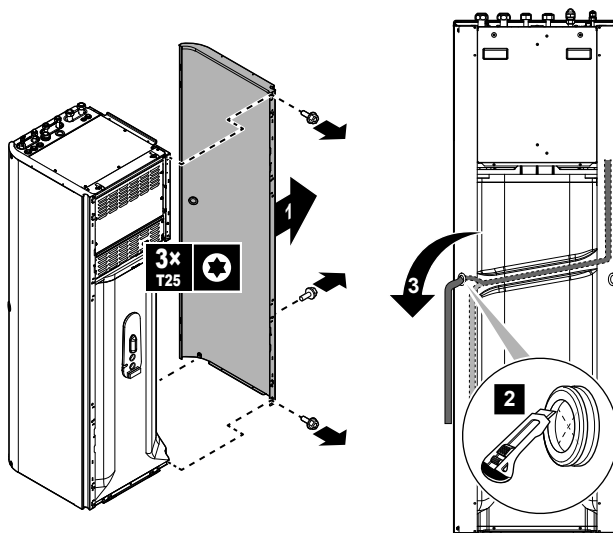

## 5 Piping installation



### INFORMATION

EBVH16SU23DJ6V is a heating only model. Therefore, all references to cooling in this document are NOT applicable.

## 5.1 Preparing refrigerant piping

### 5.1.1 Refrigerant piping requirements

Also see "4.1.2 Special requirements for R32 units" [► 8] for additional requirements.

- Piping length:** See "4.1.1 Installation site requirements of the indoor unit" [► 8].
- Piping material:** Phosphoric acid deoxidised seamless copper.
- Piping connections:** Only flare and brazed connections are allowed. The indoor and outdoor units have flare connections. Connect both ends without brazing. If brazing should be needed, take the guidelines in the installer reference guide into account.
- Flare connections:** Only use annealed material.
- Piping diameter:**

Liquid piping	Ø9.5 mm (3/8")
Gas piping	Ø15.9 mm (5/8")

- Piping temper grade and thickness:**

Outer diameter (Ø)	Temper grade	Thickness (t) <sup>(a)</sup>	
9.5 mm (3/8")	Annealed (O)	≥0.8 mm	
15.9 mm (5/8")	Annealed (O)	≥1.0 mm	


<sup>(a)</sup> Depending on the applicable legislation and the maximum working pressure of the unit (see "PS High" on the unit name plate), larger piping thickness might be required.

### 5.1.2 Refrigerant piping insulation

- Use polyethylene foam as insulation material:
  - with a heat transfer rate between 0.041 and 0.052 W/mK (0.035 and 0.045 kcal/mh°C)
  - with a heat resistance of at least 120°C
- Insulation thickness



Pipe outer diameter ( $\varnothing_p$ )	Insulation inner diameter ( $\varnothing_i$ )	Insulation thickness (t)
9.5 mm (3/8")	12~15 mm	$\geq 13$ mm
15.9 mm (5/8")	17~20 mm	$\geq 13$ mm




If the temperature is higher than 30°C and the humidity is higher than RH 80%, the thickness of the insulation materials should be at least 20 mm to prevent condensation on the surface of the insulation.

## 5.2 Connecting refrigerant piping

See the installation manual of the outdoor unit for all guidelines, specifications and installation instructions.

### 5.2.1 To connect the refrigerant piping to the indoor unit

- 1 Connect the liquid stop valve from the outdoor unit to the refrigerant liquid connection of the indoor unit.

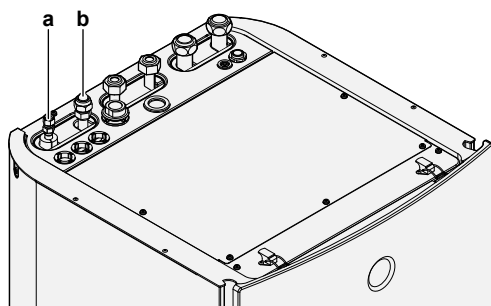

- a Refrigerant liquid connection  
b Refrigerant gas connection

- 2 Connect the gas stop valve from the outdoor unit to the refrigerant gas connection of the indoor unit.

## 5.3 Preparing water piping



### NOTICE

In case of plastic pipes, make sure they are fully oxygen diffusion tight according to DIN 4726. The diffusion of oxygen into the piping can lead to excessive corrosion.



### NOTICE

**Water circuit requirements.** Make sure to comply with the water pressure and water temperature requirements below. For additional water circuit requirements, see the installer reference guide.


- **Water pressure – Domestic hot water.** The maximum water pressure is 4 bar. Provide adequate safeguards in the water circuit to ensure that the maximum pressure is NOT exceeded. The minimum water pressure to operate is 1 bar.
- **Water pressure – Space heating/cooling circuit.** The maximum water pressure is 3 bar. Provide adequate safeguards in the water circuit to ensure that the maximum pressure is NOT exceeded. The minimum water pressure to operate is 1 bar.

- **Water temperature.** All installed piping and piping accessories (valve, connections,...) MUST withstand the following temperatures:



### INFORMATION

The following illustration is an example and might NOT match your system layout.

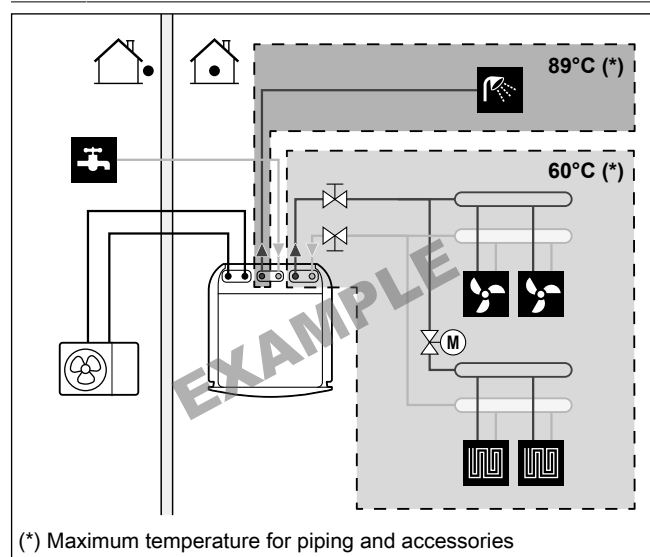

(\*) Maximum temperature for piping and accessories

### 5.3.1 To check the water volume and flow rate

#### Minimum water volume

Check that the total water volume in the installation is higher than the minimum water volume, the internal water volume of the indoor unit NOT included:

If...	Then the minimum water volume is...
Heating operation	20 l



### NOTICE

When circulation in each space heating/cooling loop is controlled by remotely controlled valves, it is important that the minimum water volume is guaranteed, even if all of the valves are closed.

#### Minimum flow rate

Check that the minimum flow rate in the installation is guaranteed in all conditions. For this purpose, use the overpressure bypass valve delivered with the unit, and respect the minimum water volume.

If operation is...	Then the minimum required flow rate is...
Heating/defrost	22 l/min
Domestic hot water production	



### NOTICE

When circulation in each or certain space heating loops is controlled by remotely controlled valves, it is important that the minimum flow rate is guaranteed, even if all valves are closed. In case the minimum flow rate cannot be reached, a flow error 7H will be generated (no heating or operation).

See the installer reference guide for more information.

See the recommended procedure as described in "8.2 Checklist during commissioning" [p 39].

## 5 Piping installation

### 5.4 Connecting water piping


#### 5.4.1 To connect the water piping

##### ! NOTICE

Do NOT use excessive force when connecting the piping. Deformation of the piping can cause malfunctioning of the unit.

To facilitate service and maintenance, 2 shut-off valves and 1 overpressure bypass valve are provided. Mount the shut-off valves on the space heating water inlet and space heating water outlet. To ensure the minimum flow rate (and prevent overpressure), install the overpressure bypass valve on the space heating water outlet.

- 1 Install the shut-off valves on the space heating water pipes.
- 2 Screw the indoor unit nuts on the shut-off valve.
- 3 Connect the domestic hot water in and out pipes to the indoor unit. It is obligatory to use the accessory G3 kit EKHUWG3D to comply with UK legislation. See "5.4.2 To connect the water piping for domestic hot water" [p 18].

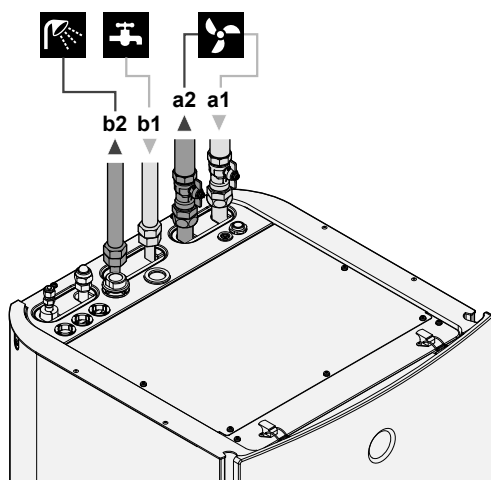

- a1 Space heating/cooling – Water IN (screw connection, 1")
- a2 Space heating/cooling – Water OUT (screw connection, 1")
- b1 DHW – Cold water IN (screw connection, 3/4")
- b2 DHW – Hot water OUT (screw connection, 3/4")

##### ! NOTICE

It is recommended to install shut-off valves to domestic cold water in and domestic hot water out connections. These shut-off valves are field supplied.

##### ! NOTICE



**Overpressure bypass valve** (delivered as accessory). We recommend to install the overpressure bypass valve in the space heating water circuit.

- Mind the minimum water volume when choosing the installation location of the overpressure bypass valve (at the indoor unit, or at the collector). See "5.3.1 To check the water volume and flow rate" [p 17].
- Mind the minimum flow rate when adjusting the overpressure bypass valve setting. See "5.3.1 To check the water volume and flow rate" [p 17] and "8.2.1 To check the minimum flow rate" [p 40].


##### ! NOTICE

Install air purge valves at all local high points.

##### ! NOTICE


A pressure relief valve (field supply) with an opening pressure of maximum 10 bar (=1 MPa) must be installed on the domestic cold water inlet connection in accordance with the applicable legislation.

#### 5.4.2 To connect the water piping for domestic hot water

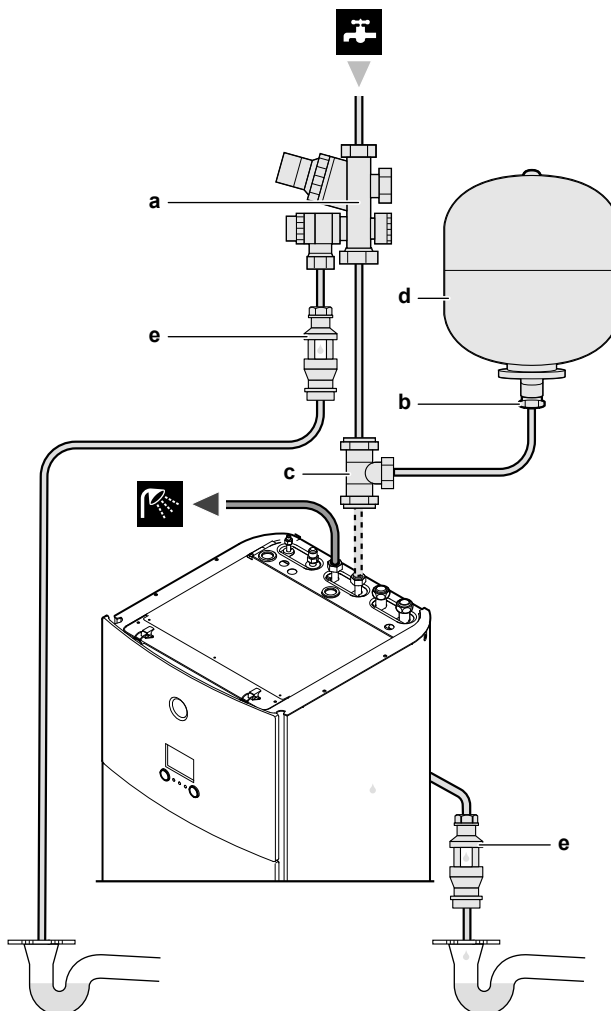


- a Pressure reducing valve/pressure relief valve combination. Water inlet and water outlet 22 mm connection, discharge piping connection 15 mm
- b Adaptor 22 mm×3/4" Female BSP
- c T-piece 22 mm×22 mm×22 mm
- d Expansion vessel of 18 l – 3/4" Male BSP
- e Tundish 15 mm inlet, 22 mm outlet

- 1 Pre-assemble the adaptor and expansion vessel so that the expansion vessel is ready for installation.

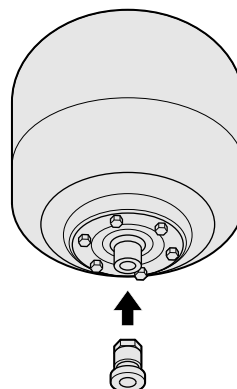

## 2 Mount the expansion vessel to the wall.

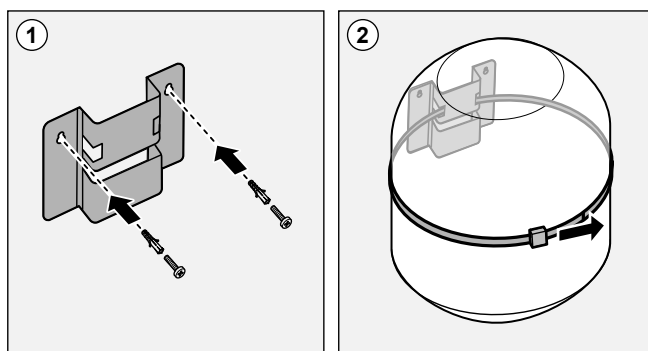

- 3 Fit the T-piece (part of the kit) to the domestic hot water cold water IN pipe of the unit.
- 4 Connect the pressure reducing valve/pressure relief valve combination (part of the kit) to the T-piece with a length of copper tube Ø22 mm (field supply).
- 5 Connect the expansion vessel to the T-piece with a length of copper tube Ø22 mm (field supply).
- 6 Connect the pressure reducing valve/pressure relief valve combination to the water mains inlet.
- 7 Install the tundish (part of the kit) in a vertical position within a maximum of 600 mm away from the pressure reducing valve/pressure relief valve combination.



### WARNING


Install the tundish away from any electrical device.  
**Possible consequence:** Electrical shock or fire.



### NOTICE


To ensure a free water flow through the discharge pipe, manually operate the pressure relief valve by turning its knob left.

- 8 Use the quick fixture to connect the discharge pipe (see "3.1.1 To remove the accessories from the indoor unit" (p. 7)) to the pipe connection in the hole located at the back of the unit, and fix the pipe to the rear plate with the cable tie + clip. This pipe starts at the pressure relief valve of the domestic hot water tank. After connecting the discharge pipe, cover the hole with the antisweat sticker.

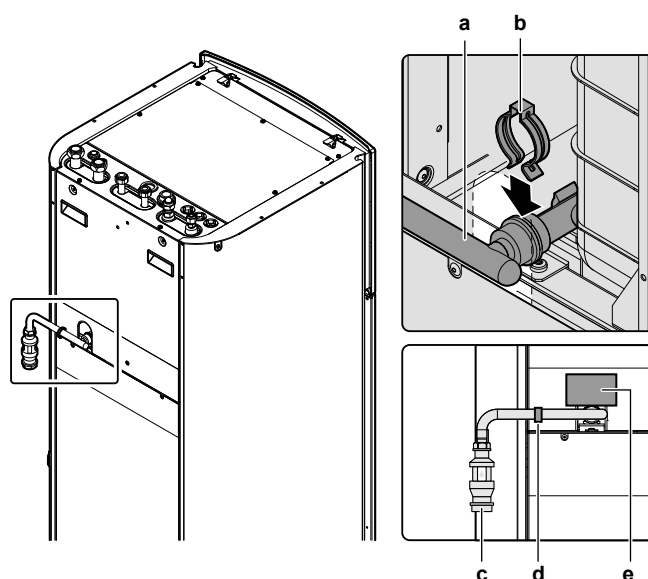

- a Discharge pipe (for pressure relief valve)
- b Quick fixture
- c Tundish
- d Cable tie + clip
- e Antisweat sticker (50×80 mm)

- 9 Connect the 2 tundishes (1 from the pressure relief valve of the domestic hot water tank, and 1 from the pressure relief valve of the domestic hot water tank kit) to an appropriate drain according to the applicable legislation. The following example shows discharge below fixed grating (Building Regulation G3 section 3.61 gives alternative points of discharge):

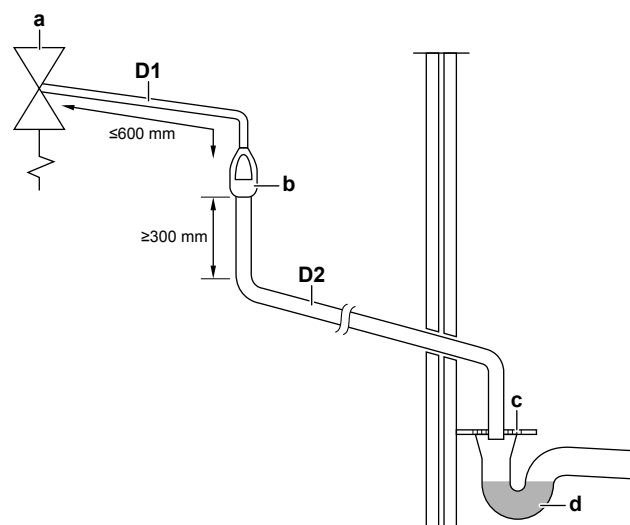

- a Safety device (pressure and temperature relief valve of domestic hot water tank; pressure relief valve of domestic hot water tank kit)
- b Tundish
- c Fixed grating
- d Trapped gully
- D1 Metal discharge pipe from safety device to tundish
- D2 Discharge pipe from tundish, with continuous fall. See Building Regulation G3 section 3.56, Table 03 and worked example.

- 10 After completing the installation, the installer has to fill out the warning label on the tank with indelible ink. The warning label can be found on the unit top plate.

### WARNING

- Do not remove or alter the warning label.
- Should the system develop a fault, switch the power off and contact the installer.

### WARNING TO INSTALLER

- This installation is subject to building regulation approval, notify Local Authority of intention to install.
- Use only manufacturer's recommended spare parts. Contact your local Daikin dealer.
- Installed by  
name \_\_\_\_\_  
address \_\_\_\_\_  
tel. No. \_\_\_\_\_  
completion date \_\_\_\_\_

### TECHNICAL SPECIFICATIONS



EN128

16 bar



### WARNING

The discharge pipes from the pressure relief valves **MUST** terminate in a safe and visible position without forming any risk to persons in the vicinity.



### WARNING

- Discharge piping, tundish, drain valves, etc. **MUST** be positioned away from any electrical components.
- The discharge pipe away from the tundish **MUST** terminate in a safe, visible position without forming any risk to persons in the vicinity.

## 6 Electrical installation



### WARNING

- Do NOT install any valves between the domestic hot water tank and relief valves/expansion vessel.
- Do NOT install shut-off valves between the expansion relief valve and the domestic hot water tank.




### NOTICE

- All pipework and fittings must be flushed free of flux and debris prior to installing the domestic hot water tank kit. Failure to do this may cause irreparable damage to the tank kit controls. Flush the system by opening the hot water tap.
- The tundish pipework must be a 22 mm metal pipe with a minimal vertical length of 300 mm below the tundish before any elbows or bends in the pipework. All pipework must have a continuous fall of 1 in 200 thereafter. Maximum permitted (equivalent) length of 22 mm pipework is 9 m. Each bend or elbow is equivalent to 0.8 m of pipework.

### 5.4.3 To connect the recirculation piping

**Prerequisite:** Only required if you need recirculation in your system.

- Remove the top panel from the unit, see "4.2.1 To open the indoor unit" [p 14].
- Cut out the rubber grommet on top of the unit, and remove the stop. The recirculation connector is placed below the hole.
- Route the recirculation piping through the grommet and connect it to the recirculation connector.

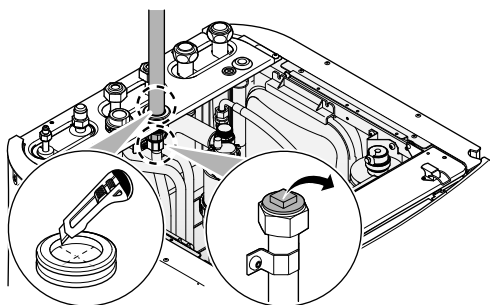

- Reattach the top panel.

### 5.4.4 To fill the water circuit

To fill the water circuit, use a field supply filling kit. Make sure you comply with the applicable legislation.



### NOTICE

**Pump.** To prevent blocking of the pump rotor, commission the unit as quickly as possible after filling the water circuit.



### INFORMATION

Make sure both air purge valves (one on the magnetic filter and one on the backup heater) are open.

### 5.4.5 To fill the domestic hot water tank

- Open every hot water tap in turn to purge air from the system pipe work.
- Open the cold water supply valve.
- Close all water taps after all air is purged.
- Check for water leaks.
- Manually operate the field-installed pressure relief valve to ensure a free water flow through the discharge pipe.

### 5.4.6 To insulate the water piping

The piping in the complete water circuit MUST be insulated to prevent condensation during cooling operation and reduction of the heating and cooling capacity.

If the temperature is higher than 30°C and the humidity is higher than RH 80%, the thickness of the insulation materials should be at least 20 mm to prevent condensation on the surface of the insulation.

## 6 Electrical installation



### INFORMATION

EBVH16SU23DJ6V is a heating only model. Therefore, all references to cooling in this document are NOT applicable.



### DANGER: RISK OF ELECTROCUTION




### WARNING

ALWAYS use multicore cable for power supply cables.



### WARNING

Make sure that the electrical wiring does NOT touch the refrigerant gas pipe, which can be very hot.

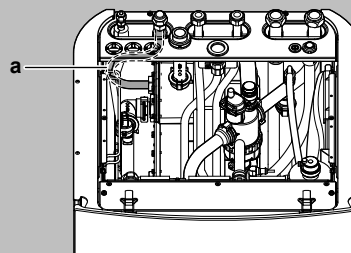

a Refrigerant gas pipe

### 6.1 About electrical compliance

**Only for the backup heater of the indoor unit**

See "6.3.2 To connect the backup heater power supply" [p 23].

### 6.2 Guidelines when connecting the electrical wiring







#### Tightening torques



















Indoor unit:

Item	Tightening torque (N·m)
X1M	2.45 ±10%
X2M	0.88 ±10%
X5M	0.88 ±10%
X6M	2.45 ±10%
X10M	0.88 ±10%
M4 (earth)	1.47 ±10%




### 6.3 Connections to the indoor unit

Item	Description
Power supply (main)	See "6.3.1 To connect the main power supply" [p 22].
Power supply (backup heater)	See "6.3.2 To connect the backup heater power supply" [p 23].

Item	Description
Shut-off valve	See "6.3.3 To connect the shut-off valve" [▶ 24].
Electricity meters	See "6.3.4 To connect the electricity meters" [▶ 24].
Domestic hot water pump	See "6.3.5 To connect the domestic hot water pump" [▶ 25].
Alarm output	See "6.3.6 To connect the alarm output" [▶ 25].
Space cooling/heating operation control	See "6.3.7 To connect the space cooling/heating ON/OFF output" [▶ 26].
Changeover to external heat source control	See "6.3.8 To connect the changeover to external heat source" [▶ 26].
Power consumption digital inputs	See "6.3.9 To connect the power consumption digital inputs" [▶ 27].
Safety thermostat	See "6.3.10 To connect the safety thermostat (normally closed contact)" [▶ 27].
Smart Grid	See "6.3.11 To connect a Smart Grid" [▶ 28].
Room thermostat (wired or wireless)	 See below table.
	 Wires: 0.75 mm <sup>2</sup> Maximum running current: 100 mA
	 For the main zone:
	<ul style="list-style-type: none"> <li>[2.9] Control</li> <li>[2.A] Thermostat type</li> </ul> For the additional zone: <ul style="list-style-type: none"> <li>[3.A] Thermostat type</li> <li>[3.9] (read-only) Control</li> </ul>
Heat pump convector	 There are different controllers and setups possible for the heat pump convectors.  Depending on the setup, you also need to implement a relay (field supply, see addendum book for optional equipment).  For more information, see:
	<ul style="list-style-type: none"> <li>Installation manual of the heat pump convectors</li> <li>Installation manual of the heat pump convector options</li> <li>Addendum book for optional equipment</li> </ul>
	 Wires: 0.75 mm <sup>2</sup> Maximum running current: 100 mA
	 For the main zone:
	<ul style="list-style-type: none"> <li>[2.9] Control</li> <li>[2.A] Thermostat type</li> </ul> For the additional zone: <ul style="list-style-type: none"> <li>[3.A] Thermostat type</li> <li>[3.9] (read-only) Control</li> </ul>

Item	Description
Remote outdoor sensor	 See:
	<ul style="list-style-type: none"> <li>Installation manual of the remote outdoor sensor</li> <li>Addendum book for optional equipment</li> </ul>
	 Wires: 2×0.75 mm <sup>2</sup>
	 [9.B.1]=1 (External sensor = Outdoor) [9.B.2] Ext. amb. sensor offset [9.B.3] Averaging time
Remote indoor sensor	 See:
	<ul style="list-style-type: none"> <li>Installation manual of the remote indoor sensor</li> <li>Addendum book for optional equipment</li> </ul>
	 Wires: 2×0.75 mm <sup>2</sup>
	 [9.B.1]=2 (External sensor = Room) [1.7] Room sensor offset
Human Comfort Interface	 See:
	<ul style="list-style-type: none"> <li>Installation and operation manual of the Human Comfort Interface</li> <li>Addendum book for optional equipment</li> </ul>
	 Wires: 2×(0.75~1.25 mm <sup>2</sup> ) Maximum length: 500 m
	 [2.9] Control [1.6] Room sensor offset
LAN adapter	 See:
	<ul style="list-style-type: none"> <li>Installation manual of the LAN adapter</li> <li>Addendum book for optional equipment</li> </ul>
	 Wires: 2×(0.75~1.25 mm <sup>2</sup> ). Must be sheathed. Maximum length: 200 m
	 See installation manual of the LAN adapter
WLAN cartridge	 See:
	<ul style="list-style-type: none"> <li>Installation manual of the WLAN cartridge</li> <li>Installer reference guide</li> </ul>
	 —
	 [D] Wireless gateway
WLAN module	 See:
	<ul style="list-style-type: none"> <li>Installation manual of the WLAN module</li> <li>Addendum book for optional equipment</li> <li>Installer reference guide</li> </ul>
	 Use the cable delivered with the WLAN module.
	 [D] Wireless gateway

## 6 Electrical installation

Item	Description
Bizone kit	<div>  See: <ul style="list-style-type: none"> <li>Installation manual of the bizone kit</li> <li>Addendum book for optional equipment</li> </ul> </div> <div>  Use the cable delivered with the bizone kit. </div> <div>  [9.P] Bizone kit </div>


 for room thermostat (wired or wireless):

In case of...	See...
Wireless room thermostat	<ul style="list-style-type: none"> <li>Installation manual of the wireless room thermostat</li> <li>Addendum book for optional equipment</li> </ul>
Wired room thermostat without multi-zoning base unit	<ul style="list-style-type: none"> <li>Installation manual of the wired room thermostat</li> <li>Addendum book for optional equipment</li> </ul>
Wired room thermostat with multi-zoning base unit	<ul style="list-style-type: none"> <li>Installation manual of the wired room thermostat (digital or analogue) + multi-zoning base unit</li> <li>Addendum book for optional equipment</li> <li>In this case: <ul style="list-style-type: none"> <li>You need to connect the wired room thermostat (digital or analogue) to the multi-zoning base unit</li> <li>You need to connect the multi-zoning base unit to the outdoor unit</li> <li>For cooling/heating operation, you also need to implement a relay (field supply, see addendum book for optional equipment)</li> </ul> </li> </ul>

### 6.3.1 To connect the main power supply



1 Open the following (see "4.2.1 To open the indoor unit" [▶ 14]):


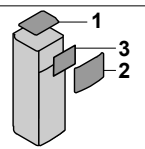
1	Top panel
2	User interface panel
3	Upper switch box cover



2 Connect the main power supply.



#### In case of normal kWh rate power supply

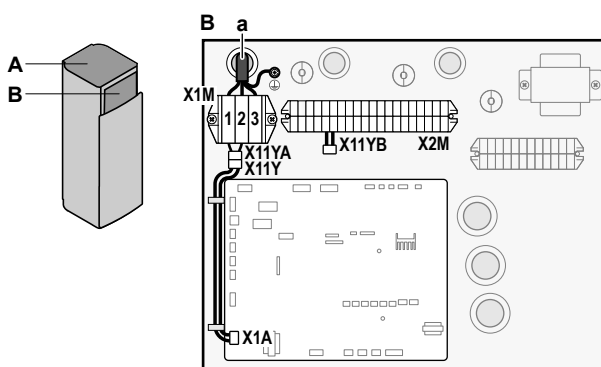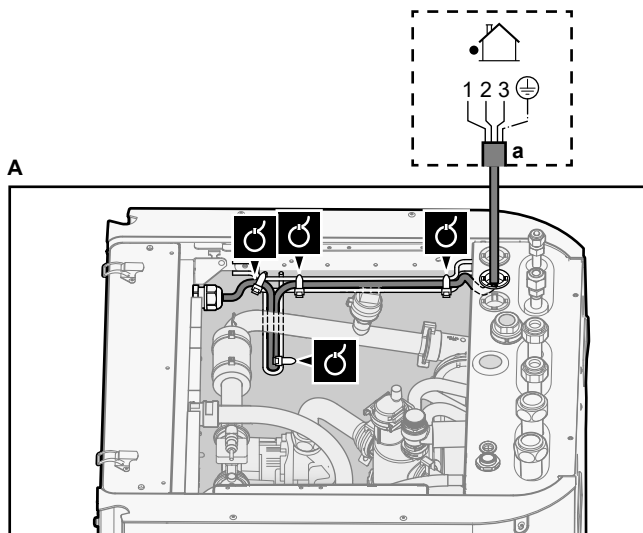	Interconnection cable (= main power supply)	Wires: (3+GND)×1.5 mm <sup>2</sup>
	—	—





a Interconnection cable (=main power supply)

#### In case of preferential kWh rate power supply

	Interconnection cable (= main power supply)	Wires: (3+GND)×1.5 mm <sup>2</sup>
	Normal kWh rate power supply	Wires: 1N Maximum running current: 6.3 A
	Preferential kWh rate power supply contact	Wires: 2×(0.75~1.25 mm <sup>2</sup> ) Maximum length: 50 m. Preferential kWh rate power supply contact: 16 V DC detection (voltage supplied by PCB). The voltage-free contact shall ensure the minimum applicable load of 15 V DC, 10 mA.
	[9.8] Benefit kWh power supply	—

Connect X11Y to X11YB.

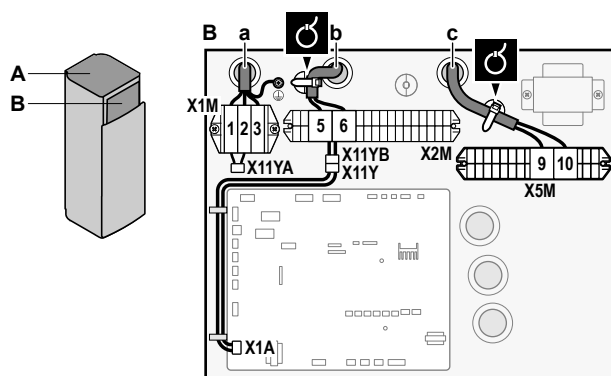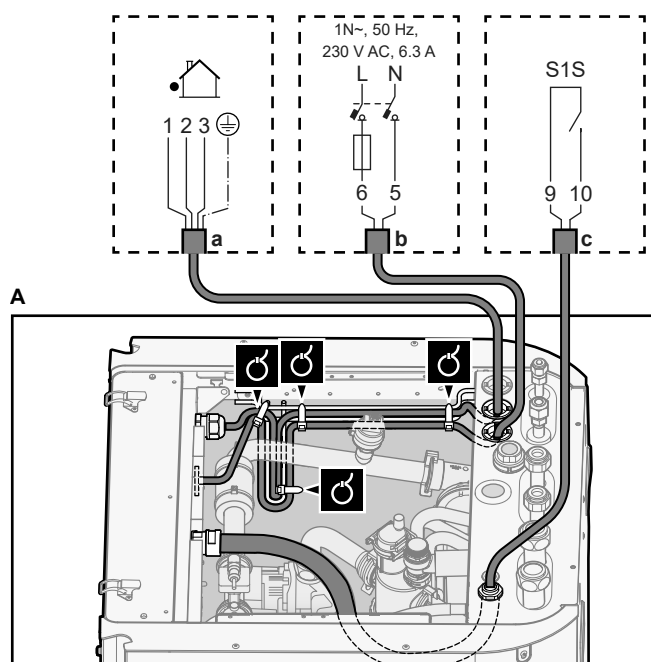

- a Interconnection cable (=main power supply)  
b Normal kWh rate power supply  
c Preferential power supply contact

3 Fix the cables with cable ties to the cable tie mountings.



### INFORMATION

In case of preferential kWh rate power supply, connect X11Y to X11YB. The necessity of separate normal kWh rate power supply to indoor unit (b) X2M/5+6 depends on the type of preferential kWh rate power supply.

Separate connection to the indoor unit is required:

- if preferential kWh rate power supply is interrupted when active, OR
- if no power consumption of the indoor unit is allowed at the preferential kWh rate power supply when active.

### 6.3.2 To connect the backup heater power supply

	Backup heater type	Power supply	Wires
	*6V	1N~ 230 V (6V3)	2+GND
		3~ 230 V (6T1)	3+GND
	[9.3] Backup heater		



### WARNING

The backup heater **MUST** have a dedicated power supply and **MUST** be protected by the safety devices required by the applicable legislation.



### CAUTION

To guarantee the unit is completely earthed, **ALWAYS** connect the backup heater power supply and the earth cable.

The backup heater capacity can vary, depending on the indoor unit model. Make sure that the power supply is in accordance with the backup heater capacity, as listed in the table below.

Backup heater type	Backup heater capacity	Power supply	Maximum running current	Z <sub>max</sub>
*6V	2 kW	1N~ 230 V <sup>(a)</sup>	9 A	—
	4 kW	1N~ 230 V <sup>(a)</sup>	17 A <sup>(b)(c)</sup>	0.22 Ω
	6 kW	1N~ 230 V <sup>(a)</sup>	26 A <sup>(b)(c)</sup>	0.22 Ω
	2 kW	3~ 230 V <sup>(d)</sup>	5 A	—
	4 kW	3~ 230 V <sup>(d)</sup>	10 A	—
	6 kW	3~ 230 V <sup>(d)</sup>	15 A	—


(a) 6V3

(b) Electrical equipment complying with EN/IEC 61000-3-12 (European/International Technical Standard setting the limits for harmonic currents produced by equipment connected to public low-voltage systems with input current >16 A and ≤75 A per phase).

(c) This equipment complies with EN/IEC 61000-3-11 (European/International Technical Standard setting the limits for voltage changes, voltage fluctuations and flicker in public low-voltage supply systems for equipment with rated current ≤75 A) provided that the system impedance Z<sub>sys</sub> is less than or equal to Z<sub>max</sub> at the interface point between the user's supply and the public system. It is the responsibility of the installer or user of the equipment to ensure, by consultation with the distribution network operator if necessary, that the equipment is connected only to a supply with a system impedance Z<sub>sys</sub> less than or equal to Z<sub>max</sub>.


(d) 6T1

Connect the power supply of the backup heater as follows:

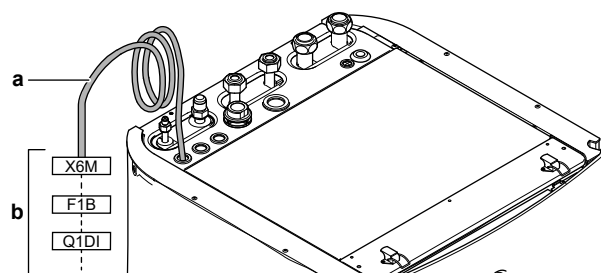

- a Factory-mounted cable connected to the contactor of the backup heater, inside the switch box (K1M)  
b Field wiring (see table below)

## 6 Electrical installation

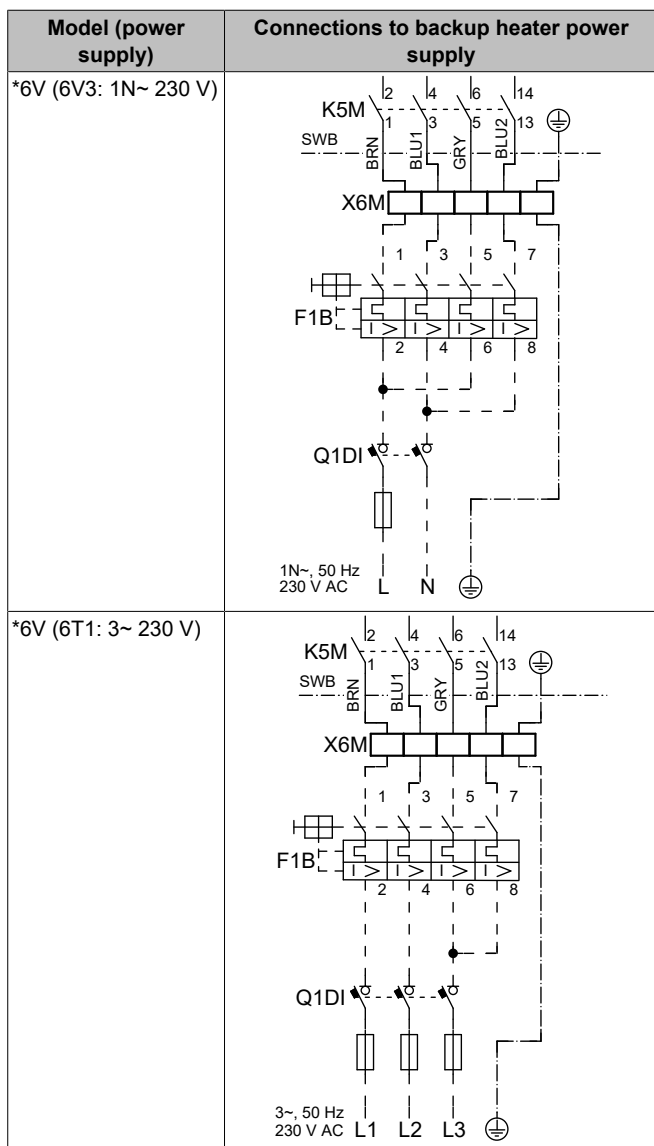

**F1B** Overcurrent fuse (field supply). Recommended fuse: 4-pole; 20 A; curve 400 V; tripping class C.  
**K5M** Safety contactor (in the lower switch box)  
**Q1DI** Earth leakage circuit breaker (field supply)  
**SWB** Switch box  
**X6M** Terminal (field supply)



### NOTICE

Do NOT cut or remove the backup heater power supply cable.

### 6.3.3 To connect the shut-off valve



#### INFORMATION

**Shut-off valve usage example.** In case of one LWT zone, and a combination of underfloor heating and heat pump convectors, install a shut-off valve before the underfloor heating to prevent condensation on the floor during cooling operation. For more information, see the installer reference guide.



Wires: 2×0.75 mm<sup>2</sup>

Maximum running current: 100 mA


230 V AC supplied by PCB



[2.D] Shut off valve

- 1 Open the following (see "4.2.1 To open the indoor unit" ▶ 14):

1	Top panel
2	User interface panel
3	Upper switch box cover


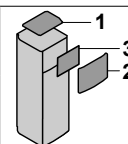


- 2 Connect the valve control cable to the appropriate terminals as shown in the illustration below.



### NOTICE

Wiring is different for a NC (normally closed) valve and a NO (normally open) valve.

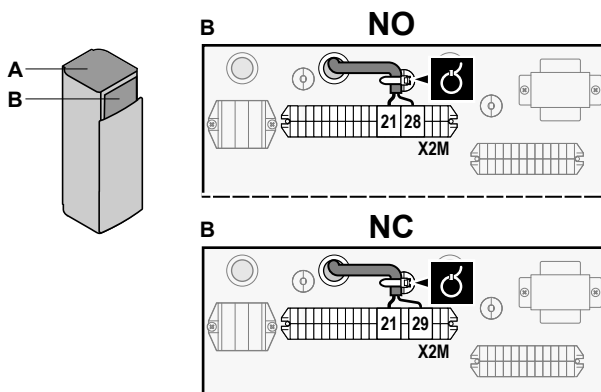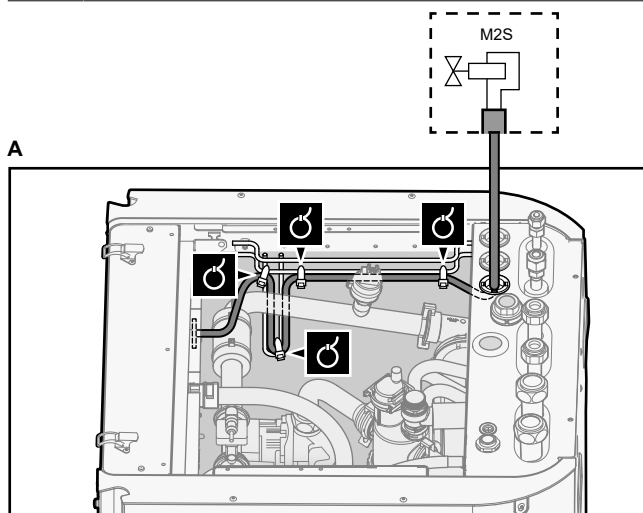

- 3 Fix the cable with cable ties to the cable tie mountings.

### 6.3.4 To connect the electricity meters



Wires: 2 (per meter)×0.75 mm<sup>2</sup>

Electricity meters: 12 V DC pulse detection (voltage supplied by PCB)



[9.A] Energy metering




#### INFORMATION

In case of an electricity meter with transistor output, check the polarity. The positive polarity MUST be connected to X5M/6 and X5M/4; the negative polarity to X5M/5 and X5M/3.


- 1 Open the following (see "4.2.1 To open the indoor unit" ▶ 14):

1	Top panel
2	User interface panel
3	Upper switch box cover

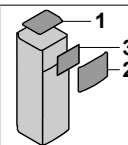



- Connect the electricity meters cable to the appropriate terminals as shown in the illustration below.

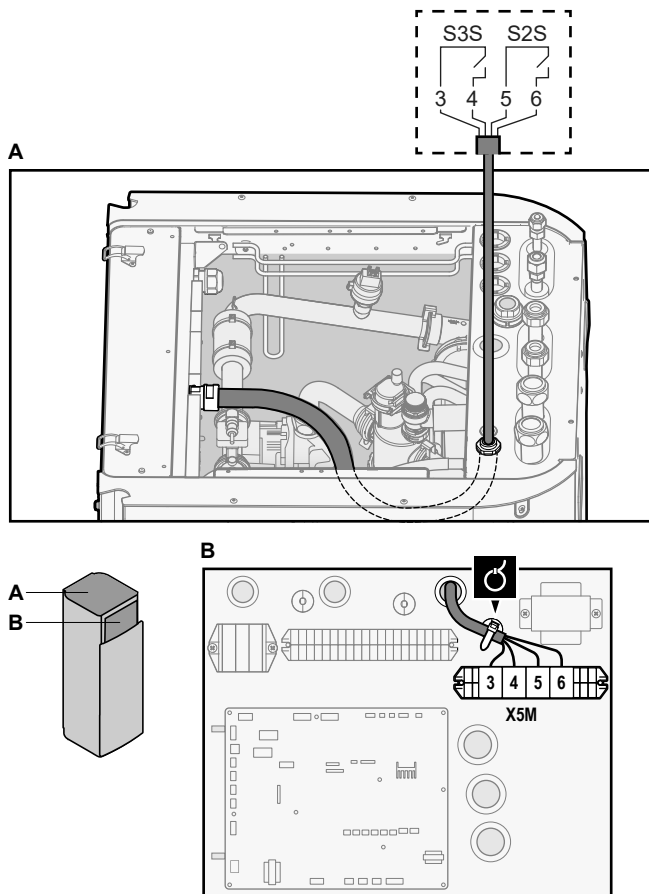

- Fix the cable with cable ties to the cable tie mountings.


### 6.3.5 To connect the domestic hot water pump

	Wires: (2+GND)×0.75 mm <sup>2</sup> DHW pump output. Maximum load: 2 A (inrush), 230 V AC, 1 A (continuous)
	[9.2.2] DHW pump [9.2.3] DHW pump schedule

- Open the following (see "4.2.1 To open the indoor unit" ▶ 14):

1	Top panel
2	User interface panel
3	Upper switch box cover

- Connect the domestic hot water pump cable to the appropriate terminals as shown in the illustration below.

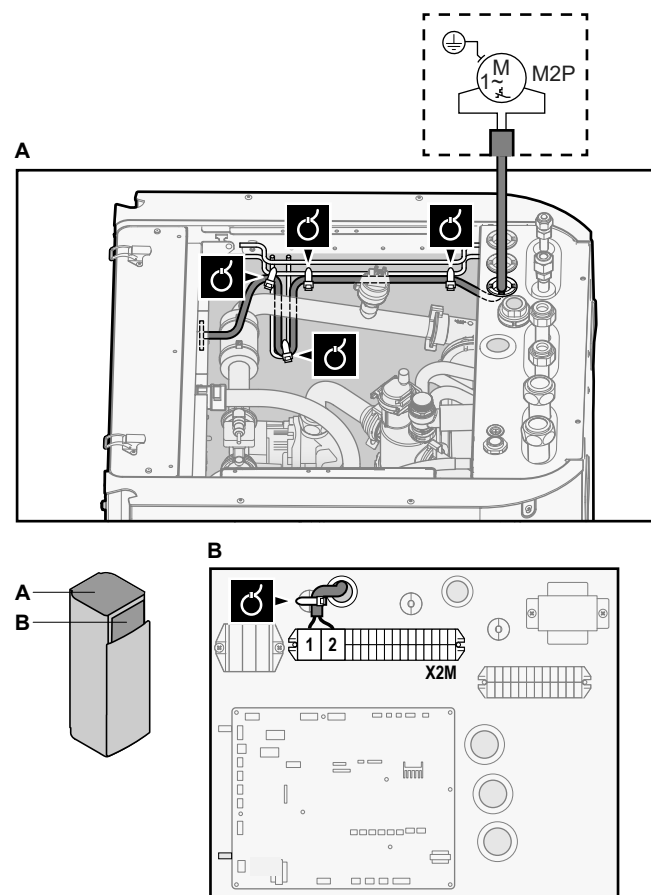

- Fix the cable with cable ties to the cable tie mountings.

### 6.3.6 To connect the alarm output

	Wires: (2+1)×0.75 mm <sup>2</sup> Maximum load: 0.3 A, 250 V AC
	[9.D] Alarm output



- Open the following (see "4.2.1 To open the indoor unit" ▶ 14):

1	Top panel
2	User interface panel
3	Upper switch box cover

- Connect the alarm output cable to the appropriate terminals as shown in the illustration below.

	1+2	Wires connected to the alarm output
	3	Wire between X2M and A4P
	A4P	Installation of EKR1HBAA is required.

## 6 Electrical installation

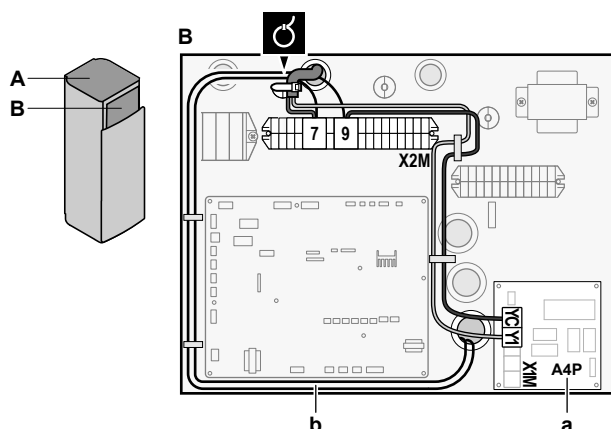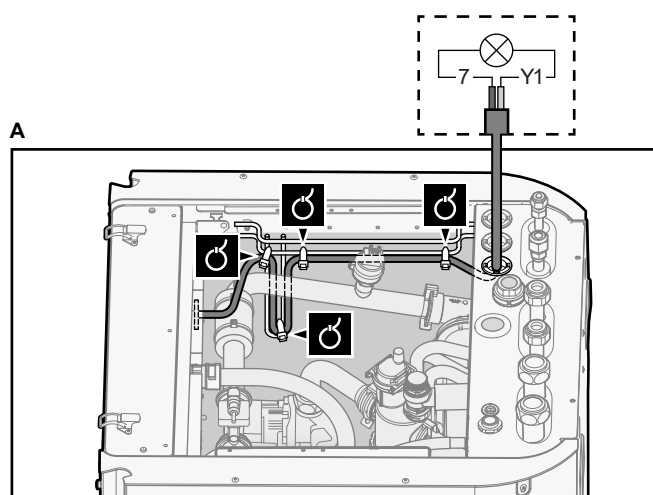

- a Installation of EKR1HBAA is required.
- b Prewiring between X2M/7+9 and Q1L (= thermal protector backup heater). Do NOT change.

3 Fix the cable with cable ties to the cable tie mountings.

### 6.3.7 To connect the space cooling/heating ON/OFF output



	Wires: (2+1)×0.75 mm <sup>2</sup>
	Maximum load: 0.3 A, 250 V AC
	—

1 Open the following (see "4.2.1 To open the indoor unit" ▶ 14):

1	Top panel
2	User interface panel
3	Upper switch box cover

2 Connect the space cooling/heating ON/OFF output cable to the appropriate terminals as shown in the illustration below.

	1+2	Wires connected to the space cooling/heating ON/OFF output
	3	Wire between X2M and A4P
	A4P	Installation of EKR1HBAA is required.

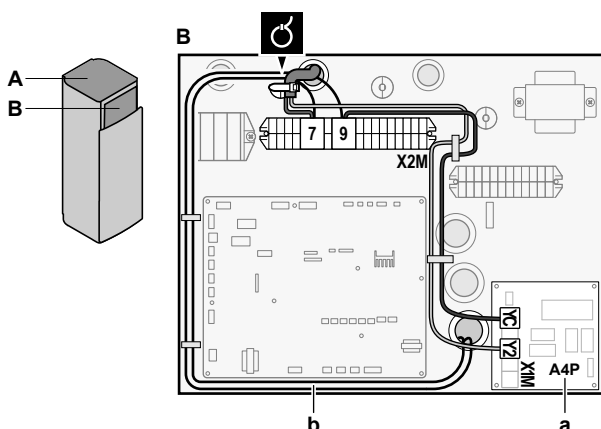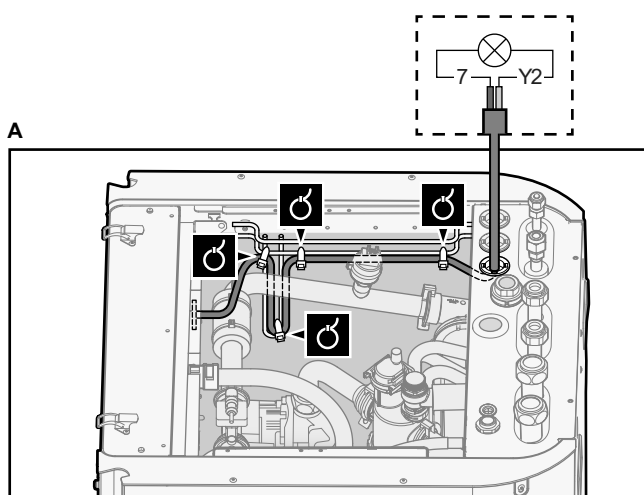

- a Installation of EKR1HBAA is required.
- b Prewiring between X2M/7+9 and Q1L (= thermal protector backup heater). Do NOT change.

3 Fix the cable with cable ties to the cable tie mountings.



### 6.3.8 To connect the changeover to external heat source

	Wires: 2×0.75 mm <sup>2</sup>
	Maximum load: 0.3 A, 250 V AC
	Minimum load: 20 mA, 5 V DC
	[9.C] Bivalent

1 Open the following (see "4.2.1 To open the indoor unit" ▶ 14):

1	Top panel
2	User interface panel
3	Upper switch box cover

2 Connect the changeover to external heat source cable to the appropriate terminals as shown in the illustration below.

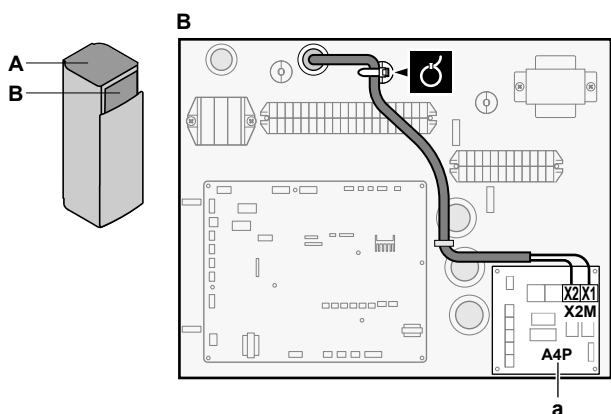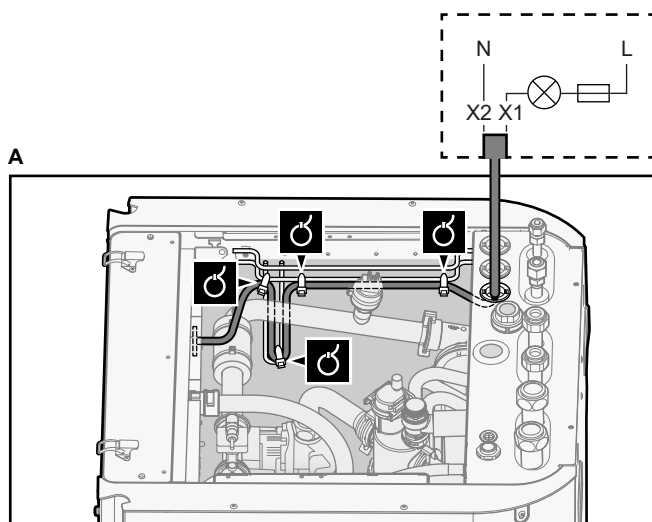

a Installation of EKR1HBAA is required.


- 3 Fix the cable with cable ties to the cable tie mountings.

## 6.3.9 To connect the power consumption digital inputs



	Wires: 2 (per input signal)×0.75 mm <sup>2</sup>
	Power limitation digital inputs: 12 V DC / 12 mA detection (voltage supplied by PCB)
	[9.9] Power consumption control.

- 1 Open the following (see "4.2.1 To open the indoor unit" ▶ 14):

1	Top panel
2	User interface panel
3	Upper switch box cover

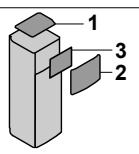

- 2 Connect the power consumption digital inputs cable to the appropriate terminals as shown in the illustration below.

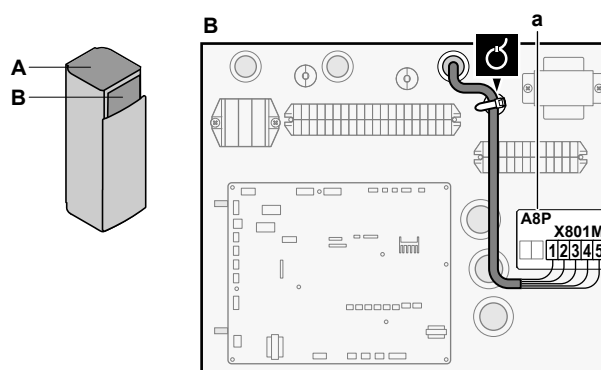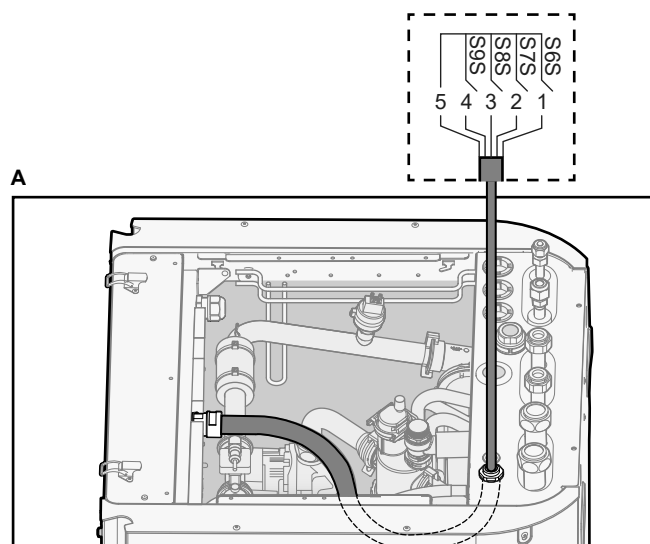

a Installation of EKR1AHTA is required.


- 3 Fix the cable with cable ties to the cable tie mountings.

## 6.3.10 To connect the safety thermostat (normally closed contact)

	Wires: 2×0.75 mm <sup>2</sup>
	Maximum length: 50 m
	Safety thermostat contact: 16 V DC detection (voltage supplied by PCB). The voltage-free contact shall ensure the minimum applicable load of 15 V DC, 10 mA.
	—

- 1 Open the following (see "4.2.1 To open the indoor unit" ▶ 14):


1	Top panel
2	User interface panel
3	Upper switch box cover

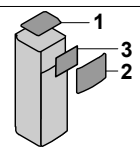

- 2 Connect the safety thermostat (normally closed) cable to the appropriate terminals as shown in the illustration below.

**Note:** The jumper wire (factory-mounted) must be removed from the respective terminals.

## 6 Electrical installation

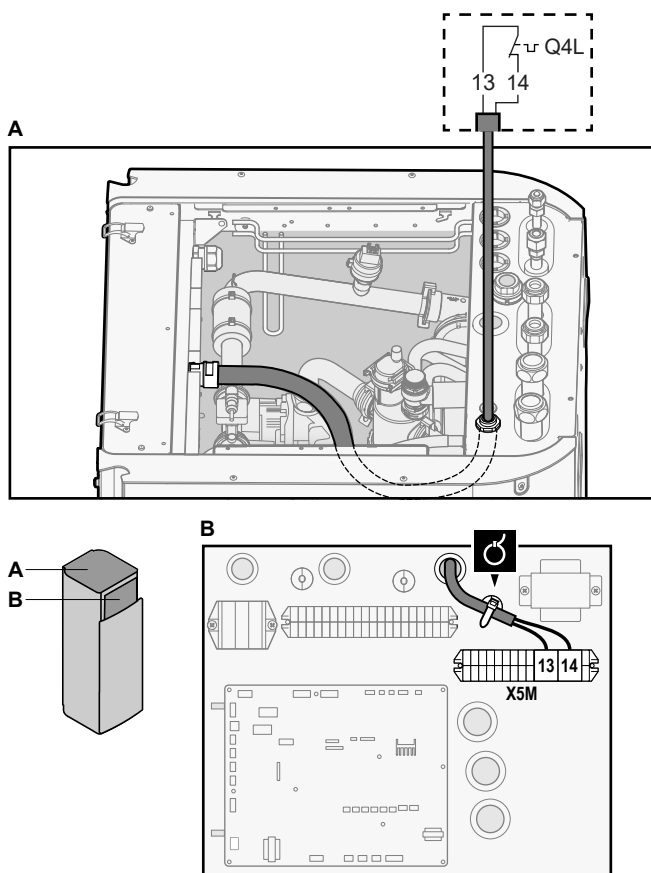

3 Fix the cable with cable ties to the cable tie mountings.



### NOTICE

Make sure to select and install the safety thermostat according to the applicable legislation.

In any case, to prevent unnecessary tripping of the safety thermostat, we recommend the following:

- The safety thermostat is automatically resettable.
- The safety thermostat has a maximum temperature variation rate of 2°C/min.
- There is a minimum distance of 2 m between the safety thermostat and the 3-way valve.



### NOTICE

**Error.** If you remove the jumper (open circuit) but do NOT connect the safety thermostat, stop error 8H-03 will occur.

### 6.3.11 To connect a Smart Grid

This topic describes 2 possible ways to connect the indoor unit to a Smart Grid:

- In case of low voltage Smart Grid contacts
- In case of high voltage Smart Grid contacts. This requires the installation of the Smart Grid relay kit (EKRELSG).

The 2 incoming Smart Grid contacts can activate the following Smart Grid modes:

Smart Grid contact		Smart Grid operation mode
1	2	
0	0	Free running
0	1	Forced off
1	0	Recommended on
1	1	Forced on

The use of a Smart Grid pulse meter is not mandatory:

If Smart Grid pulse meter is...	Then [9.8.8] Limit setting kW is...
Used ([9.A.2] Electricity meter 2 ≠ None)	Not applicable
Not used ([9.A.2] Electricity meter 2 = None)	Applicable

#### In case of low voltage Smart Grid contacts



Wires (Smart Grid pulse meter): 0.5 mm<sup>2</sup>

Wires (low voltage Smart Grid contacts): 0.5 mm<sup>2</sup>



[9.8.4]=3 (Benefit kWh power supply = Smart grid)


[9.8.5] Smart grid operation mode

[9.8.6] Allow electrical heaters

[9.8.7] Enable room buffering

[9.8.8] Limit setting kW

The wiring of the Smart Grid in case of low voltage contacts is as follows:

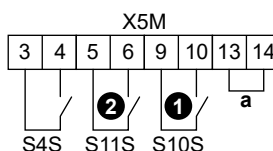


a Jumper (factory-mounted). If you also connect a safety thermostat (Q4L), replace the jumper with the safety thermostat wires.



- S4S Smart Grid pulse meter
- 1/S10S Low voltage Smart Grid contact 1
- 2/S11S Low voltage Smart Grid contact 2


1 Open the following (see "4.2.1 To open the indoor unit" ▶ 14):

1	Top panel
2	User interface panel
3	Upper switch box cover

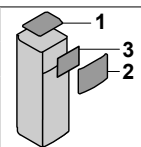

2 Connect the wiring as follows:

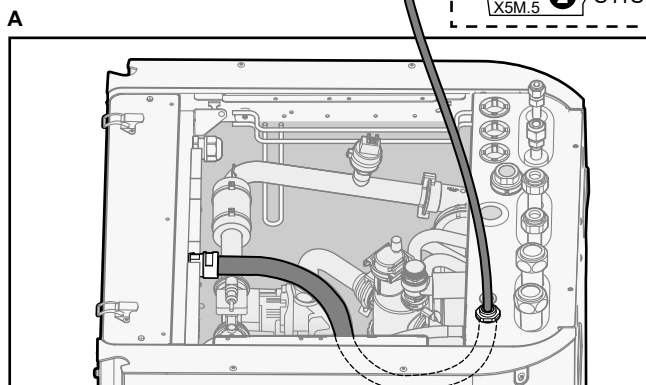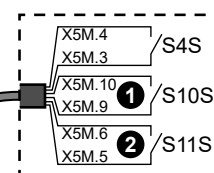

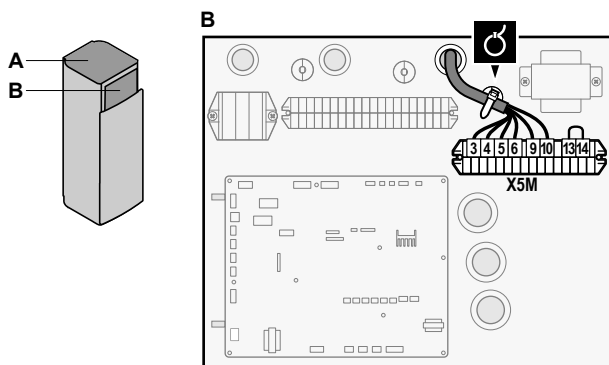


3 Fix the cables with cable ties to the cable tie mountings.

## In case of high voltage Smart Grid contacts

	Wires (Smart Grid pulse meter): 0.5 mm <sup>2</sup>
	Wires (high voltage Smart Grid contacts): 1 mm <sup>2</sup>
	[9.8.4]=3 (Benefit kWh power supply = Smart grid)
	[9.8.5] Smart grid operation mode
	[9.8.6] Allow electrical heaters
	[9.8.7] Enable room buffering
	[9.8.8] Limit setting kW

The wiring of the Smart Grid in case of high voltage contacts is as follows:

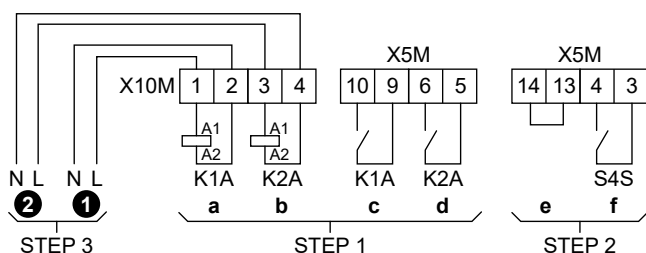

**STEP 1** Smart Grid relay kit installation

**STEP 2** Low voltage connections

**STEP 3** High voltage connections

① High voltage Smart Grid contact 1

② High voltage Smart Grid contact 2


a, b Coil sides of relays

c, d Contact sides of relays

e Jumper (factory-mounted). If you also connect a safety thermostat (Q4L), replace the jumper with the safety thermostat wires.

f Smart Grid pulse meter

1 Install the components of the Smart Grid relay kit as follows:

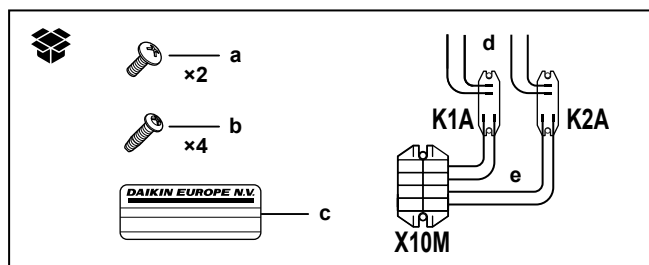

**K1A, K2A** Relays

**X10M** Terminal block


a Screws for X10M

b Screws for K1A and K2A



c Sticker to put on the high voltage wires

d Wires between the relays and X5M (AWG22 ORG)


e Wires between the relays and X10M (AWG18 RED)

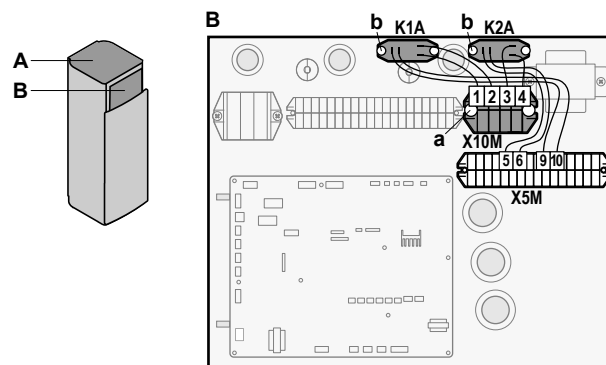

2 Connect the low voltage wiring as follows:

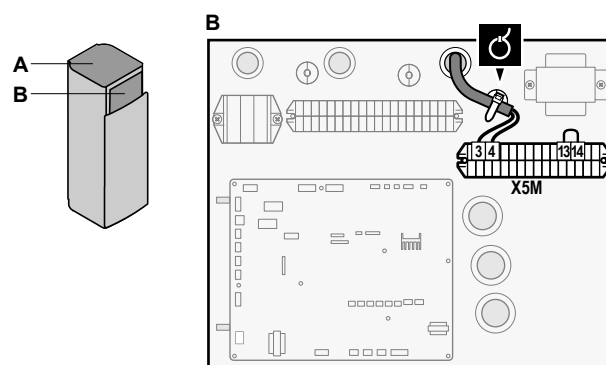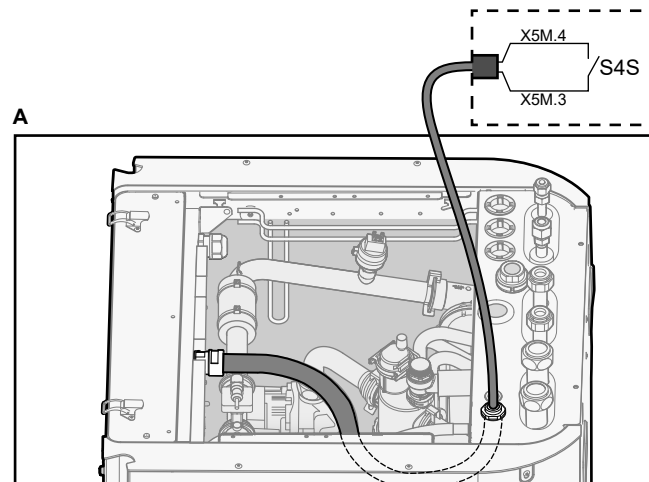


3 Connect the high voltage wiring as follows:

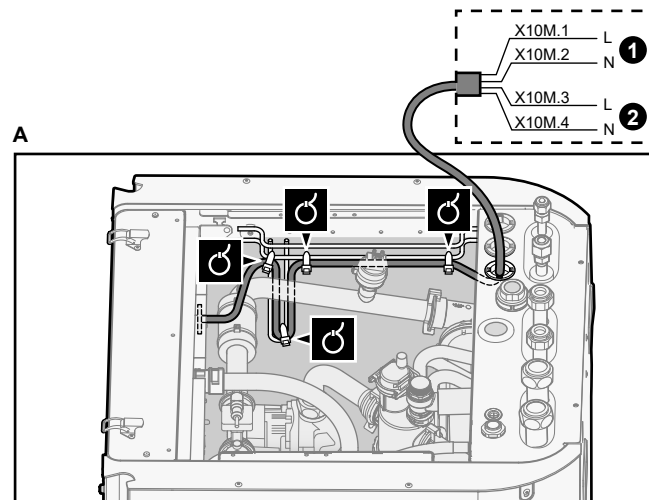

① High voltage Smart Grid contact 1

② High voltage Smart Grid contact 2


## 7 Configuration

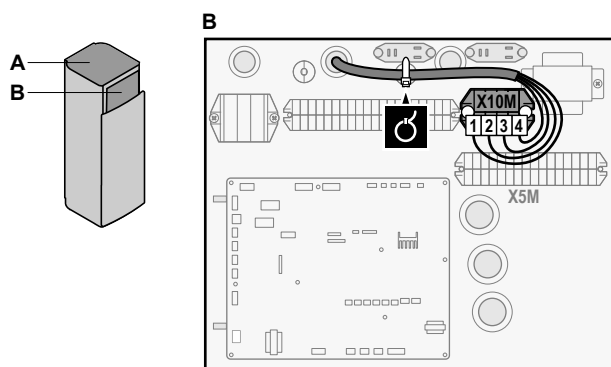

- 4 Fix the cables with cable ties to the cable tie mountings. If necessary, bundle excessive cable length with a cable tie.

### 6.4 After connecting the electrical wiring to the indoor unit

To prevent water ingress to the switch box, seal the low voltage wiring intake using the sealing tape (delivered as accessory).

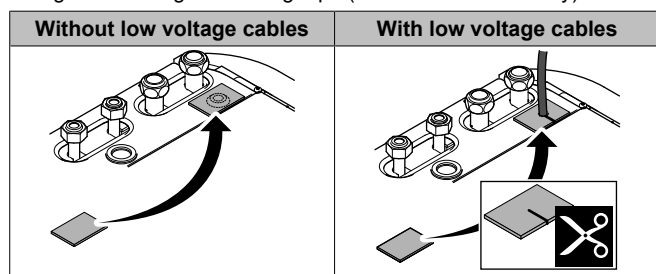

## 7 Configuration



### INFORMATION

EBVH16SU23DJ6V is a heating only model. Therefore, all references to cooling in this document are NOT applicable.

### 7.1 Overview: Configuration

This chapter describes what you have to do and know to configure the system after it is installed.



### NOTICE

This chapter explains only the basic configuration. For more detailed explanation and background information, see the installer reference guide.

#### Why

If you do NOT configure the system correctly, it might NOT work as expected. The configuration influences the following:

- The calculations of the software
- What you can see on and do with the user interface

#### How

You can configure the system via the user interface.

- **First time – Configuration wizard.** When you turn ON the user interface for the first time (via the unit), the configuration wizard starts to help you configure the system.
- **Restart the configuration wizard.** If the system is already configured, you can restart the configuration wizard. To restart the configuration wizard, go to Installer settings > Configuration wizard. To access Installer settings, see "7.1.1 To access the most used commands" [p 30].

- **Afterwards.** If necessary, you can make changes to the configuration in the menu structure or the overview settings.



### INFORMATION

When the configuration wizard is finished, the user interface will show an overview screen and request to confirm. When confirmed, the system will restart and the home screen will be displayed.

#### Accessing settings – Legend for tables

You can access the installer settings using two different methods. However, NOT all settings are accessible via both methods. If so, the corresponding table columns in this chapter are set to N/A (not applicable).

Method	Column in tables
Accessing settings via the breadcrumb in the home menu screen or the menu structure. To enable breadcrumbs, press the ? button in the home screen.	# For example: [2.9]
Accessing settings via the code in the overview field settings.	Code For example: [C-07]

See also:

- "To access the installer settings" [p 31]
- "7.5 Menu structure: Overview installer settings" [p 38]

#### 7.1.1 To access the most used commands


##### To change the user permission level

You can change the user permission level as follows:

1	Go to [B]: User profile.	
2	Enter the applicable pin code for the user permission level.	—
	• Browse through the list of digits and change the selected digit.	○...○
	• Move the cursor from left to right.	○...○
	• Confirm the pin code and proceed.	○...○


##### Installer pin code

The Installer pin code is **5678**. Additional menu items and installer settings are now available.

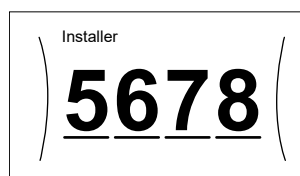


##### Advanced user pin code

The Advanced user pin code is **1234**. Additional menu items for the user are now visible.

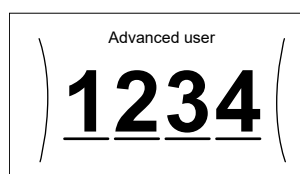

### User pin code

The User pin code is **0000**.

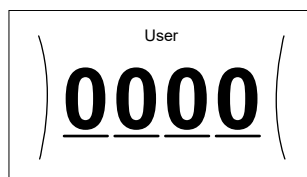

### To access the installer settings

- 1 Set the user permission level to Installer.
- 2 Go to [9]: Installer settings.

### To modify an overview setting

**Example:** Modify [1-01] from 15 to 20.

Most settings can be configured via the menu structure. If for any reason it is required to change a setting using the overview settings, then the overview settings can be accessed as follows:

1	Set the user permission level to Installer. See "To change the user permission level" [▶ 30].	—
2	Go to [9.I]: Installer settings > Overview field settings.	
3	Turn the left dial to select the first part of the setting and confirm by pressing the dial.	
4	Turn the left dial to select the second part of the setting	
5	Turn the right dial to modify the value from 15 to 20.	
6	Press the left dial to confirm the new setting.	
7	Press the center button to go back to the home screen.	



### INFORMATION

When you change the overview settings and you go back to the home screen, the user interface will show a popup screen and request to restart the system.

When confirmed, the system will restart and recent changes will be applied.

### Protective functions

The unit is equipped with the following protective functions:

- Room antifrost [2-06]
- Tank disinfection [2-01]

The unit automatically runs the protective functions when necessary. During installation or service, this behaviour is undesired. Therefore, the protective functions can be disabled. For more information, see the Installer reference guide, chapter Configuration.

### 7.2.1 Configuration wizard: Language

#	Code	Description
[7.1]	N/A	Language

### 7.2.2 Configuration wizard: Time and date

#	Code	Description
[7.2]	N/A	Set the local time and date



### INFORMATION

By default, daylight savings time is enabled and clock format is set to 24 hours. These settings can be changed during initial configuration or via the menu structure [7.2]: User settings > Time/date.

### 7.2.3 Configuration wizard: System

#### Indoor unit type

The indoor unit type is displayed, but cannot be adjusted.

#### Backup heater type

The backup heater is adapted to be connected to most common European electricity grids. The type of backup heater can be viewed but not changed.

#	Code	Description
[9.3.1]	[E-03]	▪ 3: 6V

#### Domestic hot water

The following setting determines if the system can prepare domestic hot water or not, and which tank is used. This setting is read only.

#	Code	Description
[9.2.1]	[E-05] <sup>(a)</sup> [E-06] <sup>(a)</sup> [E-07] <sup>(a)</sup>	▪ Integrated  The backup heater will also be used for domestic hot water heating.

- <sup>(a)</sup> Use the menu structure instead of the overview settings. Menu structure setting [9.2.1] replaces the following 3 overview settings:
- [E-05]: Can the system prepare domestic hot water?
  - [E-06]: Is a domestic hot water tank installed in the system?
  - [E-07]: What kind of domestic hot water tank is installed?

### Emergency

When the heat pump fails to operate, the backup heater can serve as an emergency heater. It then takes over the heat load either automatically or by manual interaction.

- When Emergency is set to Automatic and a heat pump failure occurs, the backup heater automatically takes over the domestic hot water production and space heating.
- When Emergency is set to Manual and a heat pump failure occurs, the domestic hot water heating and space heating stops.

To manually recover it via the user interface, go to the Malfunctioning main menu screen and confirm whether the backup heater can take over the heat load or not.

## 7.2 Configuration wizard

After first power ON of the system, the user interface will guide you using the configuration wizard. This way you can set the most important initial settings. This way the unit will be able to run properly. Afterwards, more detailed settings can be done via the menu structure if required.

## 7 Configuration

- Alternatively, when Emergency is set to:
  - auto SH reduced/DHW on, space heating is reduced but domestic hot water is still available.
  - auto SH reduced/DHW off, space heating is reduced and domestic hot water is NOT available.
  - auto SH normal/DHW off, space heating operates as normally but domestic hot water is NOT available.

Similarly as in Manual mode, the unit can take the full load with the backup heater if the user activates this via the Malfunctioning main menu screen.

To keep energy consumption low, we recommend to set Emergency to auto SH reduced/DHW off if the house is unattended for longer periods.

#	Code	Description
[9.5.1]	[4-06]	<ul style="list-style-type: none"> <li>0: Manual</li> <li>1: Automatic</li> <li>2: auto SH reduced/DHW on</li> <li>3: auto SH reduced/DHW off</li> <li>4: auto SH normal/DHW off</li> </ul>



### INFORMATION

The auto emergency setting can be set in the menu structure of the user interface only.



### INFORMATION

If a heat pump failure occurs and Emergency is not set to Automatic (setting 1), the room frost protection function and the underfloor heating screed dryout function will remain active even if the user does NOT confirm emergency operation.


### Number of zones


The system can supply leaving water to up to 2 water temperature zones. During configuration, the number of water zones must be set.



### INFORMATION

**Mixing station.** If your system layout contains 2 LWT zones, you need to install a mixing station in front of the main LWT zone.
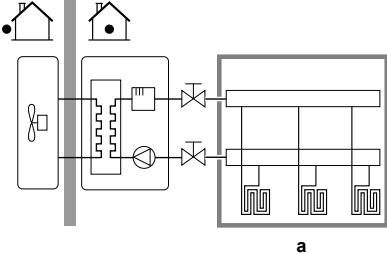
#	Code	Description
[4.4]	[7-02]	<ul style="list-style-type: none"> <li>0: Single zone</li> </ul> <p>Only one leaving water temperature zone:</p>  <p><b>a Main LWT zone</b></p>
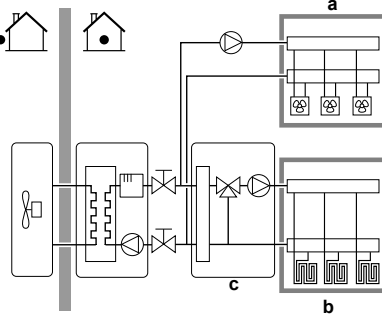
#	Code	Description
[4.4]	[7-02]	<ul style="list-style-type: none"> <li>1: Dual zone</li> </ul> <p>Two leaving water temperature zones. The main leaving water temperature zone consists of the higher load heat emitters and a mixing station to achieve the desired leaving water temperature. In heating:</p>  <p><b>a Additional LWT zone: Highest temperature</b>  <b>b Main LWT zone: Lowest temperature</b>  <b>c Mixing station</b></p>



### NOTICE

NOT configuring the system in the following way can cause damage to the heat emitters. If there are 2 zones, it is important that in heating:

- the zone with the lowest water temperature is configured as the main zone, and
- the zone with the highest water temperature is configured as the additional zone.



### NOTICE

If there are 2 zones and the emitter types are wrongly configured, water of high temperature can be sent towards a low temperature emitter (underfloor heating). To avoid this:

- Install an aquastat/thermostatic valve to avoid too high temperatures towards a low temperature emitter.
- Make sure you set the emitter types for the main zone [2.7] and for the additional zone [3.7] correctly in accordance with the connected emitter.



### NOTICE

An overpressure bypass valve can be integrated in the system. Keep in mind that this valve might not be shown on the illustrations.

### 7.2.4 Configuration wizard: Backup heater

The backup heater is adapted to be connected to most common European electricity grids. If the backup heater is available, the voltage, configuration and capacity must be set on the user interface.

The capacities for the different steps of the backup heater must be set for the energy metering and/or power consumption control feature to work properly. When measuring the resistance value of each heater, you can set the exact heater capacity and this will lead to more accurate energy data.



**Backup heater type**

The backup heater is adapted to be connected to most common European electricity grids. The type of backup heater can be viewed but not changed.

#	Code	Description
[9.3.1]	[E-03]	• 3: 6V

**Voltage**

This can be set to:

- 230V, 1ph
- 230V, 3ph

#	Code	Description
[9.3.2]	[5-0D]	• 0: 230V, 1ph • 1: 230V, 3ph

**Configuration**

The backup heater can be configured in different ways. It can be chosen to have a 1-step only backup heater or a backup heater with 2 steps. If 2 steps, the capacity of the second step depends on this setting. It can also be chosen to have a higher capacity of the second step in emergency.

#	Code	Description
[9.3.3]	[4-0A]	• 0: Relay 1 • 1: Relay 1 / Relay 1+2 • 2: Relay 1 / Relay 2 • 3: Relay 1 / Relay 2 Emergency Relay 1+2

**INFORMATION**

Settings [9.3.3] and [9.3.5] are linked. Changing one setting influences the other. If you change one, check if the other is still as expected.

**INFORMATION**

During normal operation, the capacity of the second step of the backup heater at nominal voltage is equal to [6-03]+[6-04].

**INFORMATION**

If [4-0A]=3 and emergency mode is active, the power usage of the backup heater is maximal and equal to  $2 \times [6-03] + [6-04]$ .

**INFORMATION**

Only for systems with integrated domestic hot water tank: If the storage temperature setpoint is higher than 50°C, Daikin recommends NOT to disable the backup heater second step because it will have a big impact on the required time for the unit to heat up the domestic hot water tank.

**Capacity step 1**

#	Code	Description
[9.3.4]	[6-03]	• The capacity of the first step of the backup heater at nominal voltage.

**Additional capacity step 2**

#	Code	Description
[9.3.5]	[6-04]	• The capacity difference between the second and first step of the backup heater at nominal voltage. Nominal value depends on backup heater configuration.

**7.2.5 Configuration wizard: Main zone**

The most important settings for the main leaving water zone can be set here.

**Emitter type**

Heating up or cooling down the main zone can take longer. This depends on:

- The water volume of the system
- The heater emitter type of the main zone

The setting Emitter type can compensate for a slow or a quick heating/cooling system during the heat up/cool down cycle. In room thermostat control, Emitter type influences the maximum modulation of the desired leaving water temperature, and the possibility for usage of the automatic cooling/heating changeover based on the indoor ambient temperature.

It is important to set Emitter type correctly and in accordance with your system layout. The target delta T for the main zone depends on it.

#	Code	Description
[2.7]	[2-0C]	• 0: Underfloor heating • 1: Fancoil unit • 2: Radiator

The setting of the emitter type has an influence on the space heating setpoint range and the target delta T in heating as follows:

Description	Space heating setpoint range	Target delta T in heating
0: Underfloor heating	Maximum 55°C	Variable
1: Fancoil unit	Maximum 55°C	Variable
2: Radiator	Maximum 60°C	Fixed 8°C

**NOTICE**

**Average emitter temperature** = Leaving water temperature – (Delta T)/2

This means that for a same leaving water temperature setpoint, the average emitter temperature of radiators is lower than that of underfloor heating because of a bigger delta T.

Example radiators:  $40 - 8/2 = 36^\circ\text{C}$

Example underfloor heating:  $40 - 5/2 = 37.5^\circ\text{C}$

To compensate, you can:

- Increase the weather-dependent curve desired temperatures [2.5].
- Enable leaving water temperature modulation and increase the maximum modulation [2.C].

**Control**

Define how the operation of the unit is controlled.

Control	In this control...
Leaving water	Unit operation is decided based on the leaving water temperature regardless the actual room temperature and/or heating or cooling demand of the room.
External room thermostat	Unit operation is decided by the external thermostat or equivalent (e.g. heat pump convector).
Room thermostat	Unit operation is decided based on the ambient temperature of the dedicated Human Comfort Interface (BRC1HHDA used as room thermostat).

## 7 Configuration

#	Code	Description
[2.9]	[C-07]	<ul style="list-style-type: none"> <li>0: Leaving water</li> <li>1: External room thermostat</li> <li>2: Room thermostat</li> </ul>

### Setpoint mode

Define the setpoint mode:

- Fixed: the desired leaving water temperature does not depend on the outdoor ambient temperature.
- In WD heating, fixed cooling mode, the desired leaving water temperature:
  - depends on the outdoor ambient temperature for heating
  - does NOT depend on the outdoor ambient temperature for cooling
- In Weather dependent mode, the desired leaving water temperature depends on the outdoor ambient temperature.

#	Code	Description
[2.4]	N/A	Setpoint mode: <ul style="list-style-type: none"> <li>Fixed</li> <li>WD heating, fixed cooling</li> <li>Weather dependent</li> </ul>

When weather dependent operation is active, low outdoor temperatures will result in warmer water and vice versa. During weather dependent operation, the user can shift the water temperature up or down by a maximum of 10°C.

### Schedule

Indicates if the desired leaving water temperature is according to a schedule. Influence of the LWT setpoint mode [2.4] is as follows:

- In Fixed LWT setpoint mode, the scheduled actions consist of desired leaving water temperatures, either preset or custom.
- In Weather dependent LWT setpoint mode, the scheduled actions consist of desired shift actions, either preset or custom.

#	Code	Description
[2.1]	N/A	<ul style="list-style-type: none"> <li>0: No</li> <li>1: Yes</li> </ul>

### 7.2.6 Configuration wizard: Additional zone

The most important settings for the additional leaving water zone can be set here.

#### Emitter type

For more info about this functionality, see "7.2.5 Configuration wizard: Main zone" [p 33].

#	Code	Description
[3.7]	[2-0D]	<ul style="list-style-type: none"> <li>0: Underfloor heating</li> <li>1: Fancoil unit</li> <li>2: Radiator</li> </ul>

#### Control

The control type is displayed here, but cannot be adjusted. It is determined by the control type of the main zone. For more info about the functionality, see "7.2.5 Configuration wizard: Main zone" [p 33].

#	Code	Description
[3.9]	N/A	<ul style="list-style-type: none"> <li>0: Leaving water if the control type of the main zone is Leaving water.</li> <li>1: External room thermostat if the control type of the main zone is External room thermostat or Room thermostat.</li> </ul>

### Setpoint mode

For more info about this functionality, see "7.2.5 Configuration wizard: Main zone" [p 33].

#	Code	Description
[3.4]	N/A	<ul style="list-style-type: none"> <li>0: Fixed</li> <li>1: WD heating, fixed cooling</li> <li>2: Weather dependent</li> </ul>

If you choose WD heating, fixed cooling or Weather dependent, the next screen will be the detailed screen with weather-dependent curves. Also see "7.3 Weather-dependent curve" [p 35].

### Schedule

Indicates if the desired leaving water temperature is according to a schedule. Also see "7.2.5 Configuration wizard: Main zone" [p 33].

#	Code	Description
[3.1]	N/A	<ul style="list-style-type: none"> <li>0: No</li> <li>1: Yes</li> </ul>

### 7.2.7 Configuration wizard: Tank



#### INFORMATION

To make tank defrost possible, we recommend a minimum tank temperature of 35°C.

#### Heat up mode

The domestic hot water can be prepared in 3 different ways. They differ from each other by the way the desired tank temperature is set and how the unit acts upon it.

#	Code	Description
[5.6]	[6-0D]	Heat up mode: <ul style="list-style-type: none"> <li>0: Reheat only: Only reheat operation is allowed.</li> <li>1: Schedule + reheat: The domestic hot water tank is heated according to a schedule and between the scheduled heat up cycles, reheat operation is allowed.</li> <li>2: Schedule only: The domestic hot water tank can ONLY be heated according to a schedule.</li> </ul>

See the operation manual for more details.

#### Comfort setpoint

Only applicable when domestic hot water preparation is Schedule only or Schedule + reheat. When programming the schedule, you can make use of the comfort setpoint as a preset value. When you later want to change the storage setpoint, you only have to do it in one place.

The tank will heat up until the **storage comfort temperature** has been reached. It is the higher desired temperature when a storage comfort action is scheduled.

Additionally, a storage stop can be programmed. This feature puts a stop to tank heating even if the setpoint has NOT been reached. Only program a storage stop when tank heating is absolutely undesirable.

#	Code	Description
[5.2]	[6-0A]	Comfort setpoint: ▪ 30°C~[6-0E]°C

### Eco setpoint

The **storage economic temperature** denotes the lower desired tank temperature. It is the desired temperature when a storage economic action is scheduled (preferably during day).

#	Code	Description
[5.3]	[6-0B]	Eco setpoint: ▪ 30°C~min(50,[6-0E])°C

### Reheat setpoint

**Desired reheat tank temperature**, used:

- in Schedule + reheat mode, during reheat mode: the guaranteed minimum tank temperature is set by the Reheat setpoint minus the reheat hysteresis. If the tank temperature drops below this value, the tank is heated up.
- during storage comfort, to prioritize the domestic hot water preparation. When the tank temperature rises above this value, domestic hot water preparation and space heating/cooling are executed sequentially.

#	Code	Description
[5.4]	[6-0C]	Reheat setpoint: ▪ 30°C~min(50,[6-0E])°C

## 7.3 Weather-dependent curve

### 7.3.1 What is a weather-dependent curve?

#### Weather-dependent operation

The unit operates 'weather dependent' if the desired leaving water or tank temperature is determined automatically by the outdoor temperature. It therefore is connected to a temperature sensor on the North wall of the building. If the outdoor temperature drops or rises, the unit compensates instantly. Thus, the unit does not have to wait for feedback by the thermostat to increase or decrease the temperature of the leaving water or tank. Because it reacts more quickly, it prevents high rises and drops of the indoor temperature and water temperature at tap points.

#### Advantage

Weather-dependent operation reduces energy consumption.

#### Weather-dependent curve

To be able to compensate for differences in temperature, the unit relies on its weather-dependent curve. This curve defines how much the temperature of the tank or leaving water must be at different outdoor temperatures. Because the slope of the curve depends on local circumstances such as climate and the insulation of the house, the curve can be adjusted by an installer or user.

#### Types of weather-dependent curve

There are 2 types of weather-dependent curves:

- 2-points curve
- Slope-offset curve

Which type of curve you use to make adjustments, depends on your personal preference. See "7.3.4 Using weather-dependent curves" [p 36].

#### Availability

The weather-dependent curve is available for:

- Main zone - Heating
- Main zone - Cooling
- Additional zone - Heating
- Additional zone - Cooling
- Tank (only available to installers)



#### INFORMATION


To operate weather dependent, correctly configure the setpoint of the main zone, additional zone or tank. See "7.3.4 Using weather-dependent curves" [p 36].

### 7.3.2 2-points curve

Define the weather-dependent curve with these two setpoints:

- Setpoint (X1, Y2)
- Setpoint (X2, Y1)

#### Example

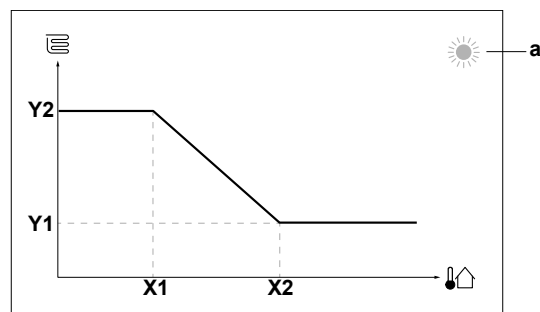

Item	Description
<b>a</b>	Selected weather dependent zone: <ul style="list-style-type: none"> <li>▪ : Main zone or additional zone heating</li> <li>▪ : Main zone or additional zone cooling</li> <li>▪ : Domestic hot water</li> </ul>
<b>X1, X2</b>	Examples of outdoor ambient temperature
<b>Y1, Y2</b>	Examples of desired tank temperature or leaving water temperature. The icon corresponds to the heat emitter for that zone: <ul style="list-style-type: none"> <li>▪ : Underfloor heating</li> <li>▪ : Fan coil unit</li> <li>▪ : Radiator</li> <li>▪ : Domestic hot water tank</li> </ul>

#### Possible actions on this screen

	Go through the temperatures.
	Change the temperature.
	Go to the next temperature.
	Confirm changes and proceed.

## 7 Configuration

### 7.3.3 Slope-offset curve


#### Slope and offset

Define the weather-dependent curve by its slope and offset:


- Change the **slope** to differently increase or decrease the temperature of the leaving water for different ambient temperatures. For example, if leaving water temperature is in general fine but at low ambient temperatures too cold, raise the slope so that leaving water temperature is heated increasingly more at decreasingly lower ambient temperatures.
- Change the **offset** to equally increase or decrease the temperature of the leaving water for different ambient temperatures. For example, if leaving water temperature is always a bit too cold at different ambient temperatures, shift the offset up to equally increase the leaving water temperature for all ambient temperatures.

#### Examples

Weather-dependent curve when slope is selected:

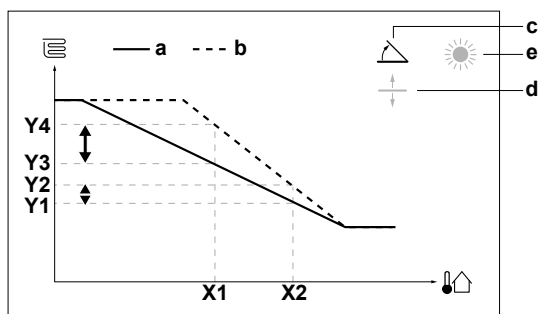

Weather-dependent curve when offset is selected:

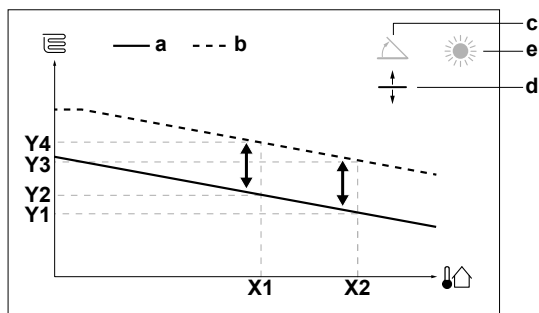

Item	Description
a	WD curve before changes.
b	WD curve after changes (as example): <ul style="list-style-type: none"> <li>When slope is changed, the new preferred temperature at X1 is unequally higher than the preferred temperature at X2.</li> <li>When offset is changed, the new preferred temperature at X1 is equally higher as the preferred temperature at X2.</li> </ul>
c	Slope
d	Offset
e	Selected weather dependent zone: <ul style="list-style-type: none"> <li> Main zone or additional zone heating</li> <li> Main zone or additional zone cooling</li> <li> Domestic hot water</li> </ul>
X1, X2	Examples of outdoor ambient temperature

Item	Description
Y1, Y2, Y3, Y4	Examples of desired tank temperature or leaving water temperature. The icon corresponds to the heat emitter for that zone: <ul style="list-style-type: none"> <li> Underfloor heating</li> <li> Fan coil unit</li> <li> Radiator</li> <li> Domestic hot water tank</li> </ul>

Possible actions on this screen	
	Select slope or offset.
	Increase or decrease the slope/offset.
	When slope is selected: set slope and go to offset. When offset is selected: set offset.
	Confirm changes and return to the submenu.

### 7.3.4 Using weather-dependent curves

Configure weather-dependent curves as following:

#### To define the setpoint mode

To use the weather-dependent curve, you need to define the correct setpoint mode:

Go to setpoint mode ...	Set the setpoint mode to ...
<b>Main zone – Heating</b>	
[2.4] Main zone > Setpoint mode	WD heating, fixed cooling OR Weather dependent
<b>Main zone – Cooling</b>	
[2.4] Main zone > Setpoint mode	Weather dependent
<b>Additional zone – Heating</b>	
[3.4] Additional zone > Setpoint mode	WD heating, fixed cooling OR Weather dependent
<b>Additional zone – Cooling</b>	
[3.4] Additional zone > Setpoint mode	Weather dependent
<b>Tank</b>	
[5.B] Tank > Setpoint mode	<b>Restriction:</b> Only available to installers. Weather dependent

#### To change the type of weather-dependent curve

To change the type for all zones (main + additional) and for the tank, go to [2.E] Main zone > WD curve type.

Viewing which type is selected is also possible via:

- [3.C] Additional zone > WD curve type
- [5.E] Tank > WD curve type

**Restriction:** Only available to installers.

#### To change the weather-dependent curve

Zone	Go to ...
<b>Main zone – Heating</b>	[2.5] Main zone > Heating WD curve
<b>Main zone – Cooling</b>	[2.6] Main zone > Cooling WD curve
<b>Additional zone – Heating</b>	[3.5] Additional zone > Heating WD curve
<b>Additional zone – Cooling</b>	[3.6] Additional zone > Cooling WD curve

Zone	Go to ...
Tank	<b>Restriction:</b> Only available to installers. [5.C] Tank > WD curve

**INFORMATION****Maximum and minimum setpoints**

You cannot configure the curve with temperatures that are higher or lower than the set maximum and minimum setpoints for that zone or for the tank. When the maximum or minimum setpoint is reached, the curve flattens out.

**To fine-tune the weather-dependent curve: slope-offset curve**

The following table describes how to fine-tune the weather-dependent curve of a zone or tank:

You feel ...		Fine-tune with slope and offset:	
At regular outdoor temperatures ...	At cold outdoor temperatures ...	Slope	Offset
OK	Cold	↑	—
OK	Hot	↓	—
Cold	OK	↓	↑
Cold	Cold	—	↑
Cold	Hot	↓	↑
Hot	OK	↑	↓
Hot	Cold	↑	↓
Hot	Hot	—	↓

**To fine-tune the weather-dependent curve: 2-points curve**

The following table describes how to fine-tune the weather-dependent curve of a zone or tank:

You feel ...		Fine-tune with setpoints:			
At regular outdoor temperatures ...	At cold outdoor temperatures ...	Y2 <sup>(a)</sup>	Y1 <sup>(a)</sup>	X1 <sup>(a)</sup>	X2 <sup>(a)</sup>
OK	Cold	↑	—	↑	—
OK	Hot	↓	—	↓	—
Cold	OK	—	↑	—	↑
Cold	Cold	↑	↑	↑	↑
Cold	Hot	↓	↑	↓	↑
Hot	OK	—	↓	—	↓
Hot	Cold	↑	↓	↑	↓
Hot	Hot	↓	↓	↓	↓

<sup>(a)</sup> See "7.3.2 2-points curve" ► 35].

## 7.4 Settings menu

You can set additional settings using the main menu screen and its submenus. The most important settings are presented here.

### 7.4.1 Main zone

**Thermostat type**

Only applicable in external room thermostat control.

**NOTICE**

If an external room thermostat is used, the external room thermostat will control the room frost protection. However, the room frost protection is only possible if [C.2] Space heating/cooling=On.

#	Code	Description
[2.A]	[C-05]	External room thermostat type for the main zone: <ul style="list-style-type: none"> <li>1: 1 contact: The used external room thermostat can only send a thermo ON/OFF condition. There is no separation between heating or cooling demand.</li> <li>2: 2 contacts: The used external room thermostat can send a separate heating/cooling thermo ON/OFF condition.</li> </ul>

### 7.4.2 Additional zone

**Thermostat type**

Only applicable in external room thermostat control. For more info about the functionality, see "7.4.1 Main zone" ► 37].

#	Code	Description
[3.A]	[C-06]	External room thermostat type for the additional zone: <ul style="list-style-type: none"> <li>1: 1 contact</li> <li>2: 2 contacts</li> </ul>

### 7.4.3 Information

**Dealer information**

The installer can fill in his contact number here.

#	Code	Description
[8.3]	N/A	Number that users can call in case of problems.

## 7 Configuration

### 7.5 Menu structure: Overview installer settings

[9] Installer settings	[9.2] Domestic hot water
Configuration wizard	Domestic hot water
Domestic hot water	DHW pump
Backup heater	DHW pump schedule
Emergency	Solar
Balancing	[9.3] Backup heater
Water pipe freeze prevention	Backup heater type
Benefit kWh power supply	Voltage
Power consumption control	Configuration
Energy metering	Capacity step 1
Sensors	Additional capacity step 2
Bivalent	Equilibrium
Alarm output	Equilibrium temperature
Auto restart	Operation
Power saving function	[9.5] Emergency
Disable protections	Emergency
Forced defrost	Compressor forced off
Overview field settings	[9.6] Balancing
Export MMI settings	Space heating priority
Bizone kit	Priority temperature
	Offset BSH setpoint
	Anti-recycle timer
	Minimum running timer
	Maximum running timer
	Additional timer
	[9.8] Benefit kWh power supply
	Allow heater
	Allow pump
	Benefit kWh power supply
	Smart grid operation mode
	Allow electrical heaters
	Enable room buffering
	Limit setting kW
	[9.9] Power consumption control
	Power consumption control
	Type
	Limit
	Limit 1
	Limit 2
	Limit 3
	Limit 4
	Priority heater
	(*) BBR16 activation
	(*) BBR16 power limit
	[9.A] Energy metering
	Electricity meter 1
	Electricity meter 2
	[9.B] Sensors
	External sensor
	Ext. amb. sensor offset
	Averaging time
	[9.C] Bivalent
	Bivalent
	Boiler efficiency
	Temperature
	Hysteresis
	[9.P] Bizone kit
	Bizone kit installed
	Bizone system type
	Add zone pump fixed PWM
	Main zone pump fixed PWM
	Mixing valve turning time

(\*) Only applicable in Swedish language.



#### INFORMATION

Solar kit settings are shown but are NOT applicable for this unit. Settings shall NOT be used or changed.



#### INFORMATION

Depending on the selected installer settings and unit type, settings will be visible/invisible.

## 8 Commissioning



### INFORMATION

EBVH16SU23DJ6V is a heating only model. Therefore, all references to cooling in this document are NOT applicable.



### NOTICE

**General commissioning checklist.** Next to the commissioning instructions in this chapter, a general commissioning checklist is also available on the Daikin Business Portal (authentication required).

The general commissioning checklist is complementary to the instructions in this chapter and can be used as a guideline and reporting template during the commissioning and hand-over to the user.




### NOTICE

ALWAYS operate the unit with thermistors and/or pressure sensors/switches. If NOT, burning of the compressor might be the result.



### NOTICE



Make sure both air purge valves (one on the magnetic filter and one on the backup heater) are open.

All automatic air purge valves MUST remain open after commissioning.



### NOTICE

**Pump.** To prevent blocking of the pump rotor, commission the unit as quickly as possible after filling the water circuit.



### INFORMATION

**Protective functions – "Installer-on-site mode".** The software is equipped with protective functions, such as room antifrost. The unit automatically runs these functions when necessary.

During installation or service this behaviour is undesired. Therefore, the protective functions can be disabled:

- **At first power-on:** The protective functions are disabled by default. After 12 hours they will be automatically enabled.
- **Afterwards:** An installer can manually disable the protective functions by setting [9.G]: Disable protections=Yes. After his work is done, he can enable the protective functions by setting [9.G]: Disable protections=No.

Also see "Protective functions" ► 31].

## 8.1 Checklist before commissioning

After the installation of the unit, first check the items listed below. Once all checks are fulfilled, the unit MUST be closed. Power-up the unit after it is closed.

<input type="checkbox"/>	You read the complete installation instructions, as described in the <b>installer reference guide</b> .
<input type="checkbox"/>	The <b>indoor unit</b> is properly mounted.
<input type="checkbox"/>	The <b>outdoor unit</b> is properly mounted.

<input type="checkbox"/>	The following <b>field wiring</b> has been carried out according to this document and the applicable legislation: <ul style="list-style-type: none"> <li>▪ Between the local supply panel and the outdoor unit</li> <li>▪ Between indoor unit and outdoor unit</li> <li>▪ Between the local supply panel and the indoor unit</li> <li>▪ Between the indoor unit and the valves (if applicable)</li> <li>▪ Between the indoor unit and the room thermostat (if applicable)</li> </ul>
<input type="checkbox"/>	The system is properly <b>earthed</b> and the earth terminals are tightened.
<input type="checkbox"/>	The <b>fuses</b> or locally installed protection devices are installed according to this document, and have NOT been bypassed.
<input type="checkbox"/>	The <b>power supply voltage</b> matches the voltage on the identification label of the unit.
<input type="checkbox"/>	There are NO <b>loose connections</b> or damaged electrical components in the switch box.
<input type="checkbox"/>	There are NO <b>damaged components</b> or <b>squeezed pipes</b> on the inside of the indoor and outdoor units.
<input type="checkbox"/>	<b>Backup heater circuit breaker</b> F1B (field supply) is turned ON.
<input type="checkbox"/>	There are NO <b>refrigerant leaks</b> .
<input type="checkbox"/>	The <b>refrigerant pipes</b> (gas and liquid) are thermally insulated.
<input type="checkbox"/>	The correct pipe size is installed and the <b>pipes</b> are properly insulated.
<input type="checkbox"/>	There is NO <b>water leak</b> inside the indoor unit.
<input type="checkbox"/>	The <b>shut-off valves</b> are properly installed and fully open.
<input type="checkbox"/>	The <b>stop valves</b> (gas and liquid) on the outdoor unit are fully open.
<input type="checkbox"/>	The <b>air purge</b> valve is open (at least 2 turns).
<input type="checkbox"/>	The <b>pressure relief valve</b> purges water when opened. Clean water MUST come out.
<input type="checkbox"/>	The <b>minimum water volume</b> is guaranteed in all conditions. See "To check the water volume and flow rate" in "5.3 Preparing water piping" ► 17].
<input type="checkbox"/>	The <b>domestic hot water tank</b> is filled completely.

## 8.2 Checklist during commissioning

<input type="checkbox"/>	The <b>minimum flow rate</b> during backup heater/defrost operation is guaranteed in all conditions. See "To check the water volume and flow rate" in "5.3 Preparing water piping" ► 17].
<input type="checkbox"/>	To perform an <b>air purge</b> .
<input type="checkbox"/>	To perform a <b>test run</b> .
<input type="checkbox"/>	To perform an <b>actuator test run</b> .
<input type="checkbox"/>	<b>Underfloor screed dryout function</b> The underfloor screed dryout function is started (if necessary).

## 8 Commissioning

### 8.2.1 To check the minimum flow rate

1	Check the hydraulic configuration to find out which space heating loops can be closed by mechanical, electronic, or other valves.	—
2	Close all space heating loops that can be closed.	—
3	Start the pump test run (see "8.2.4 To perform an actuator test run" ▶ 40).	—
4	Read out the flow rate <sup>(a)</sup> and modify the bypass valve setting to reach the minimum required flow rate + 2 l/min.	—

<sup>(a)</sup> During pump test run, the unit can operate below the minimum required flow rate.

If operation is...	Then the minimum required flow rate is...
Heating/defrost	22 l/min
Domestic hot water production	

### 8.2.2 To perform an air purge

**Conditions:** Make sure all operation is disabled. Go to [C]: Operation and turn off Space heating/cooling and Tank operation.

1	Set the user permission level to Installer. See "To change the user permission level" ▶ 30.	—
2	Go to [A.3]: Commissioning > Air purge.	🔍
3	Select OK to confirm. <b>Result:</b> The air purge starts. It stops automatically when air purge cycle is finished.	🔍
	To stop the air purge manually:	—
1	Go to Stop air purge.	🔍
2	Select OK to confirm.	🔍

#### Air purging heat emitters or collectors

We recommend to purge air with the unit's air purge function (see above). However, if you purge air from the heat emitters or collectors, mind the following:



#### WARNING

**Air purging heat emitters or collectors.** Before you purge air from heat emitters or collectors, check if or is displayed on the home screen of the user interface.

- If not, you can purge air immediately.
- If yes, make sure that the room where you want to purge air is sufficiently ventilated. **Reason:** Refrigerant might leak into the water circuit, and subsequently into the room when you purge air from the heat emitters or collectors.

### 8.2.3 To perform an operation test run

**Conditions:** Make sure all operation is disabled. Go to [C]: Operation and turn off Space heating/cooling and Tank operation.

1	Set the user permission level to Installer. See "To change the user permission level" ▶ 30.	—
2	Go to [A.1]: Commissioning > Operation test run.	🔍
3	Select a test from the list. <b>Example:</b> Heating.	🔍

4	Select OK to confirm. <b>Result:</b> The test run starts. It stops automatically when ready (±30 min).	🔍
	To stop the test run manually:	—
1	In the menu, go to Stop test run.	🔍
2	Select OK to confirm.	🔍



#### INFORMATION

If the outdoor temperature is outside the range of operation, the unit may NOT operate or may NOT deliver the required capacity.

#### To monitor leaving water and tank temperatures

During test run, the correct operation of the unit can be checked by monitoring its leaving water temperature (heating/cooling mode) and tank temperature (domestic hot water mode).

To monitor the temperatures:

1	In the menu, go to Sensors.	🔍
2	Select the temperature information.	🔍

### 8.2.4 To perform an actuator test run

**Conditions:** Make sure all operation is disabled. Go to [C]: Operation and turn off Space heating/cooling and Tank operation.

#### Purpose

Perform an actuator test run to confirm the operation of the different actuators. For example, when you select Pump, a test run of the pump will start.

1	Set the user permission level to Installer. See "To change the user permission level" ▶ 30.	—
2	Go to [A.2]: Commissioning > Actuator test run.	🔍
3	Select a test from the list. <b>Example:</b> Pump.	🔍
4	Select OK to confirm. <b>Result:</b> The actuator test run starts. It stops automatically when ready (±30 min).	🔍
	To stop the test run manually:	—
1	In the menu, go to Stop test run.	🔍
2	Select OK to confirm.	🔍

#### Possible actuator test runs

- Backup heater 1 test
- Backup heater 2 test
- Pump test



#### INFORMATION

Make sure that all air is purged before executing the test run. Also avoid disturbances in the water circuit during the test run.

- Shut off valve test
- Diverter valve test (3-way valve for switching between space heating and tank heating)
- Bivalent signal test
- Alarm output test
- C/H signal test
- DHW pump test
- Bizon kit direct pump test (bizon kit EKMIKPOA or EKMIKPHA)
- Bizon kit mixed pump test (bizon kit EKMIKPOA or EKMIKPHA)
- Bizon kit mixing valve test (bizon kit EKMIKPOA or EKMIKPHA)



### 8.2.5 To perform an underfloor heating screed dryout

**Conditions:** Make sure all operation is disabled. Go to [C]: Operation and turn off Space heating/cooling and Tank operation.

1	Set the user permission level to Installer. See "To change the user permission level" [p 30].	—
2	Go to [A.4]: Commissioning > UFH screed dryout.	
3	Set a dryout program: go to Program and use the UFH screed dryout programming screen.	
4	Select OK to confirm.  <b>Result:</b> The underfloor heating screed dryout starts. It stops automatically when done.  To stop the test run manually:	
1	Go to Stop UFH screed dryout.	
2	Select OK to confirm.	



#### NOTICE

To perform an underfloor heating screed dryout, room frost protection needs to be disabled ([2-06]=0). By default, it is enabled ([2-06]=1). However, due to the "installer-on-site" mode (see "Commissioning"), room frost protection will be automatically disabled for 12 hours after the first power-on.

If the screed dryout still needs to be performed after the first 12 hours of power-on, manually disable room frost protection by setting [2-06] to "0", and KEEP it disabled until the screed dryout has finished. Ignoring this notice will result in cracking of the screed.



#### NOTICE

For the underfloor heating screed dryout to be able to start, make sure the following settings are met:

- [4-00]=1
- [C-02]=0
- [D-01]=0
- [4-08]=0
- [4-01]≠1

## 9 Hand-over to the user

Once the test run is finished and the unit operates properly, please make sure the following is clear for the user:

- Fill in the installer setting table (in the operation manual) with the actual settings.
- Make sure that the user has the printed documentation and ask him/her to keep it for future reference. Inform the user that he can find the complete documentation at the URL mentioned earlier in this manual.
- Explain the user how to properly operate the system and what to do in case of problems.
- Show the user what to do for the maintenance of the unit.
- Explain the user about energy saving tips as described in the operation manual.

### 10 Maintenance and service

#### NOTICE

**General maintenance/inspection checklist.** Next to the maintenance instructions in this chapter, a general maintenance/inspection checklist is also available on the Daikin Business Portal (authentication required).

The general maintenance/inspection checklist is complementary to the instructions in this chapter and can be used as a guideline and reporting template during maintenance.

#### NOTICE

Maintenance **MUST** be done by an authorised installer or service agent.

We recommend performing maintenance at least once a year. However, applicable legislation might require shorter maintenance intervals.

### 10.1 Overview: Maintenance and service

This chapter contains information about:

- The yearly maintenance of the indoor unit
- Draining the domestic hot water tank
- Inspecting the inside of the domestic hot water tank
- Cleaning the water filter in case of trouble

### 10.2 Maintenance safety precautions



**DANGER: RISK OF ELECTROCUTION**



**DANGER: RISK OF BURNING/SCALDING**



**NOTICE: Risk of electrostatic discharge**

Before performing any maintenance or service work, touch a metal part of the unit in order to eliminate static electricity and to protect the PCB.

### 10.3 Checklist for yearly maintenance of the indoor unit


Check the following at least once a year:

- Water pressure
- Magnetic filter/dirt separator
- Water pressure relief valve
- Relief valve hose
- Pressure relief valve of the domestic hot water tank
- Switch box
- Descaling
- Chemical disinfection
- Pressure reducing valve of the domestic hot water tank kit
- Temperature and pressure relief valve

#### Water pressure

Keep water pressure above 1 bar. If it is lower, add water.

#### Magnetic filter/dirt separator

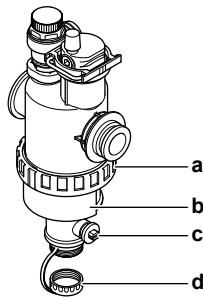

- a Screw connection
- b Magnetic sleeve
- c Drain valve
- d Drain cap

The yearly maintenance of the magnetic filter/dirt separator consists of:

- Checking if both parts of the magnetic filter/dirt separator are still screwed tight (a).
- Emptying the dirt separator as follows:

- 1 Take off the magnetic sleeve (b).
- 2 Unscrew the drain cap (d).
- 3 Connect a drain hose to the bottom of the water filter so that the water and dirt can be collected in a suitable container (bottle, sink...).
- 4 Open the drain valve for a couple of seconds (c).

**Result:** Water and dirt will come out.

- 5 Close the drain valve.
- 6 Screw the drain cap back on.
- 7 Reattach the magnetic sleeve.
- 8 Check the pressure of the water circuit. If required, add water.



#### NOTICE

- When checking the magnetic filter/dirt separator for tightness, hold it firmly, so as NOT to apply stress to the water piping.
- Do NOT isolate the magnetic filter/dirt separator by closing the shut-off valves. To properly empty the dirt separator, sufficient pressure is required.
- To prevent dirt from remaining in the dirt separator, ALWAYS take off the magnetic sleeve.
- ALWAYS first unscrew the drain cap, and connect a drain hose to the bottom of the water filter, then open the drain valve.



#### INFORMATION

For yearly maintenance, you do not have to remove the water filter from the unit to clean it. But in case of trouble with the water filter, you might have to remove it so that you can thoroughly clean it. Then you need to do as follows:

- "10.6.1 To remove the water filter" ► 45]
- "10.6.2 To clean the water filter in case of trouble" ► 45]
- "10.6.3 To install the water filter" ► 45]

## Water pressure relief valve

Open the valve and check if it operates correctly. **The water may be very hot!**

Checkpoints are:

- The water flow coming from the relief valve is high enough, no blockage of the valve or in between piping is suspected.
- Dirty water coming out of the relief valve:
  - open the valve until the discharged water does NOT contain dirt anymore
  - flush the system

To make sure this water originates from the tank, check after a tank heat up cycle.

It is recommended to do this maintenance more frequently.

## Pressure relief valve hose

Check whether the pressure relief valve hose is positioned appropriately to drain the water. See "4.3.2 To connect the drain hose to the drain" [► 16].

## Pressure relief valve of the domestic hot water tank

Open the valve.



### CAUTION

Water coming out of the valve may be very hot.

- Check if nothing blocks the water in the valve or in between piping. The water flow coming from the relief valve must be high enough.
- Check if the water coming out of the relief valve is clean. If it contains debris or dirt:
  - Open the valve until the discharged water does not contain debris or dirt anymore.
  - Flush and clean the complete tank, including the piping between the relief valve and cold water inlet.

To make sure this water originates from the tank, check after a tank heat up cycle.



### INFORMATION

It is recommended to perform this maintenance more than once a year.

## Switch box

- Carry out a thorough visual inspection of the switch box and look for obvious defects such as loose connections or defective wiring.
- Using an ohmmeter, check if contactors K1M, K2M, K3M and K5M (depending on your installation) operate correctly. All contacts of these contactors must be in open position when the power is turned OFF.



### WARNING

If the internal wiring is damaged, it has to be replaced by the manufacturer, its service agent or similarly qualified persons.

## Descaling

Depending on water quality and set temperature, scale can deposit on the heat exchanger inside the domestic hot water tank and can restrict heat transfer. For this reason, descaling of the heat exchanger may be required at certain intervals.

## Chemical disinfection

If the applicable legislation requires a chemical disinfection in specific situations, involving the domestic hot water tank, please be aware that the domestic hot water tank is a stainless steel cylinder. We recommend to use a non-chloride based disinfectant approved for use with water intended for human consumption.




### NOTICE

When using means for descaling or chemical disinfection, make sure water quality still complies with EU directive 2020/2184.

## Pressure reducing valve

Depending on local water conditions, annual inspection of the integral line strainer, pressure reducing valve cartridge and seating may be necessary.

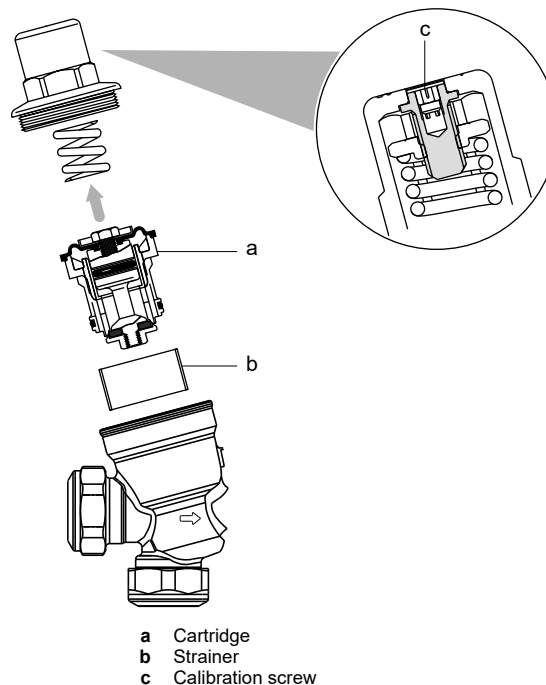

- 1 Unscrew the plastic cover of the pressure reducing valve.
- 2 Extract the cartridge with the aid of long nosed pliers to grip the head of the set screw.
- 3 Remove the strainer element.
- 4 Clean the strainer element and cartridge under clean running water.
- 5 Replace if the strainer or cartridge are damaged.
- 6 Refit the strainer, cartridge and cover.
- 7 If the cartridge has been replaced, calibrate the pressure reducing valve:
  - Close the downstream isolating valve (field supply).
  - Install an Allen key on the calibration screw in the centre of the plastic cover. Rotate it clockwise to increase the outlet pressure and anticlockwise to reduce it.

## Temperature and pressure relief valve

Check for correct operation of the temperature and pressure relief valve. Manually operate the temperature and pressure relief valve to ensure free water flow through discharge pipe. Turn knob left.

### 10.4 To drain the domestic hot water tank



**DANGER: RISK OF BURNING/SCALDING**

The water in the tank can be very hot.


**Prerequisite:** Stop the unit operation via the user interface.

**Prerequisite:** Turn OFF the respective circuit breaker.

**Prerequisite:** Close the cold water supply.

**Prerequisite:** Open all the hot water tapping points to allow air to enter the system.

- 1 Remove the top panel. See "4.2.1 To open the indoor unit" [p 14].
- 2 Remove the user interface panel. See "4.2.1 To open the indoor unit" [p 14].
- 3 Lower the switchbox. See "4.2.2 To lower the switch box on the indoor unit" [p 15].
- 4 Remove the tube from the temperature and pressure relief valve that is located on top of the tank.
- 5 Remove the temperature and pressure relief valve from the tank.
- 6 Use a drain hose and a pump to drain the tank via the access point.

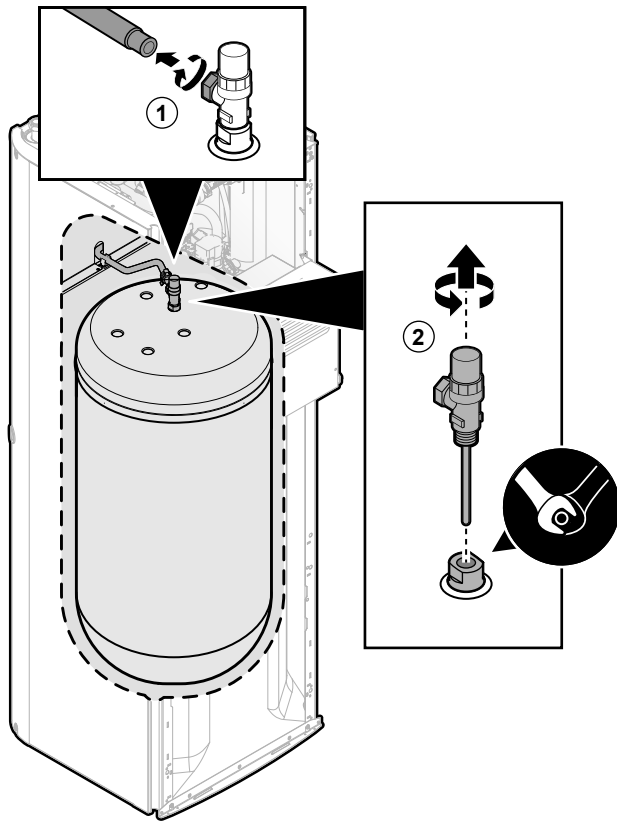

7 Tightening torques for installation:

Item	Tightening torque
Tube connection	30 N•m
Temperature and pressure relief valve	40 N•m

### 10.5 To inspect the inside of the domestic hot water tank



**DANGER: RISK OF BURNING/SCALDING**

The water in the tank can be very hot.

**Prerequisite:** Stop the unit operation via the user interface.


**Prerequisite:** Turn OFF the respective circuit breaker.

**Prerequisite:** Close the cold water supply.

**Prerequisite:** Open all the hot water tapping points to allow air to enter the system.

**Prerequisite:** Remove the top panel. See "4.2.1 To open the indoor unit" [p 14].

- 1 Remove the clip that fixes the domestic hot water OUT pipe.
- 2 Disconnect the pipe such that the tank is accessible for visual inspection (e.g. with an endoscope).

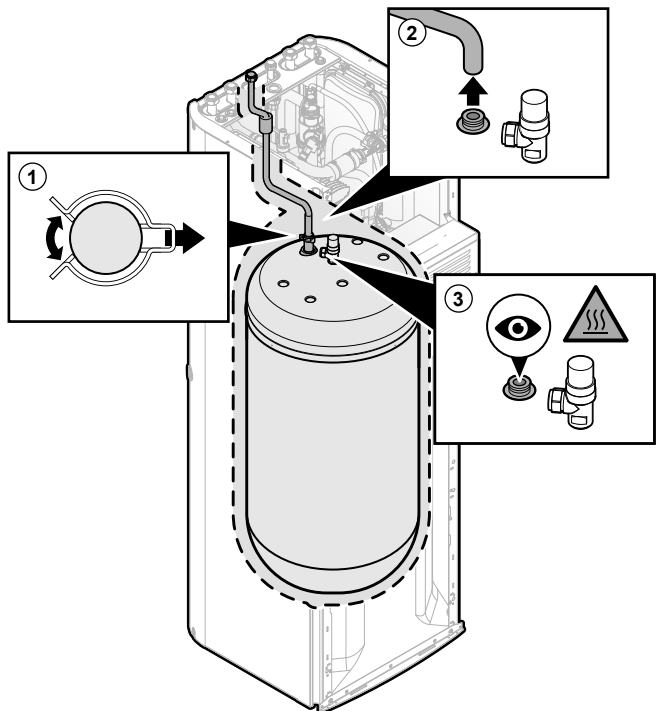

- 3 Reconnect the pipe to the tank.
- 4 Reinstall the clip to fix the domestic hot water OUT pipe.

### 10.6 About cleaning the water filter in case of trouble



#### INFORMATION

For yearly maintenance, you do not have to remove the water filter from the unit to clean it. But in case of trouble with the water filter, you might have to remove it so that you can thoroughly clean it. Then you need to do as follows:


- "10.6.1 To remove the water filter" [p 45]
- "10.6.2 To clean the water filter in case of trouble" [p 45]
- "10.6.3 To install the water filter" [p 45]

### 10.6.1 To remove the water filter

**Prerequisite:** Stop the unit operation via the user interface.

**Prerequisite:** Turn OFF the respective circuit breaker.

- 1 The water filter is located behind the switch box. To get access to it, see:
  - "4.2.1 To open the indoor unit" [► 14]
  - "4.2.2 To lower the switch box on the indoor unit" [► 15]
- 2 Close the stop valves of the water circuit.
- 3 Remove the cap on the bottom of the magnetic filter/dirt separator.
- 4 Connect a drain hose to the bottom of the water filter.
- 5 Open the valve on the bottom of the water filter to drain water from the water circuit. Collect the drained water in a bottle, sink, ... using the installed drain hose.
- 6 Remove the 2 clips that fix the water filter.

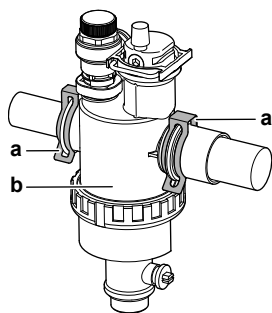

a Clip  
b Magnetic filter/dirt separator

- 7 Remove the water filter.
- 8 Remove the drain hose from the water filter.



#### NOTICE

Although the water circuit is drained, some water may be spilled when removing the magnetic filter/dirt separator from the filter housing. ALWAYS clean up spilled water.

### 10.6.2 To clean the water filter in case of trouble

- 1 Remove the water filter from the unit. See "10.6.1 To remove the water filter" [► 45].



#### NOTICE


To protect the piping connected to the magnetic filter/dirt separator from damage it is recommended to perform this procedure with the magnetic filter/dirt separator removed from the unit.

- 2 Unscrew the bottom of the water filter housing. Use an appropriate tool if needed.



#### NOTICE

Opening the magnetic filter/dirt separator is ONLY required in case of severe issues. Preferably this action is never to be done during the complete lifetime of the magnetic filter/dirt separator.

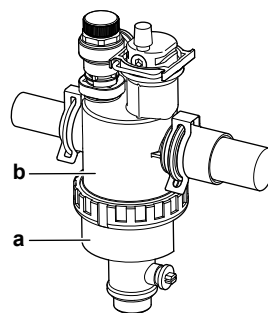


a Bottom part to be unscrewed  
b Water filter housing

- 3 Remove the strainer and the rolled-up filter from the water filter housing and clean with water.
- 4 Install the cleaned rolled-up filter and strainer in the water filter housing.



#### INFORMATION

Correctly install the strainer in the magnetic filter/dirt separator housing using the protrusions.

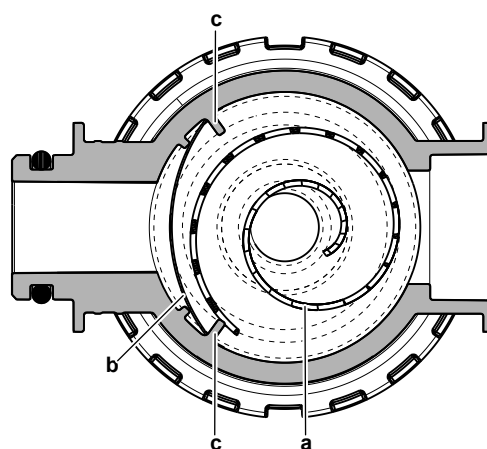

a Rolled-up filter  
b Strainer  
c Protrusion

- 5 Install and properly tighten the bottom of the water filter housing.


### 10.6.3 To install the water filter



#### NOTICE

Check the condition of the O-rings and replace if needed. Apply water to the O-rings before installation.

- 1 Install the water filter in the correct location.

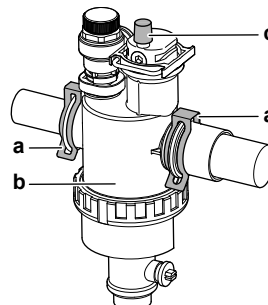

a Clip  
b Magnetic filter/dirt separator  
c Air purge valve

- 2 Install the 2 clips to fix the water filter to the water circuit pipes.
- 3 Make sure that the air purge valve of the water filter is in the open position.
- 4 Open the stop valves and add water to the water circuit if needed.

## 11 Technical data




### INFORMATION

EBVH16SU23DJ6V is a heating only model. Therefore, all references to cooling in this document are NOT applicable.

A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible). The **full set** of latest technical data is available on the Daikin Business Portal (authentication required).

### 11.1 Piping diagram: Indoor unit

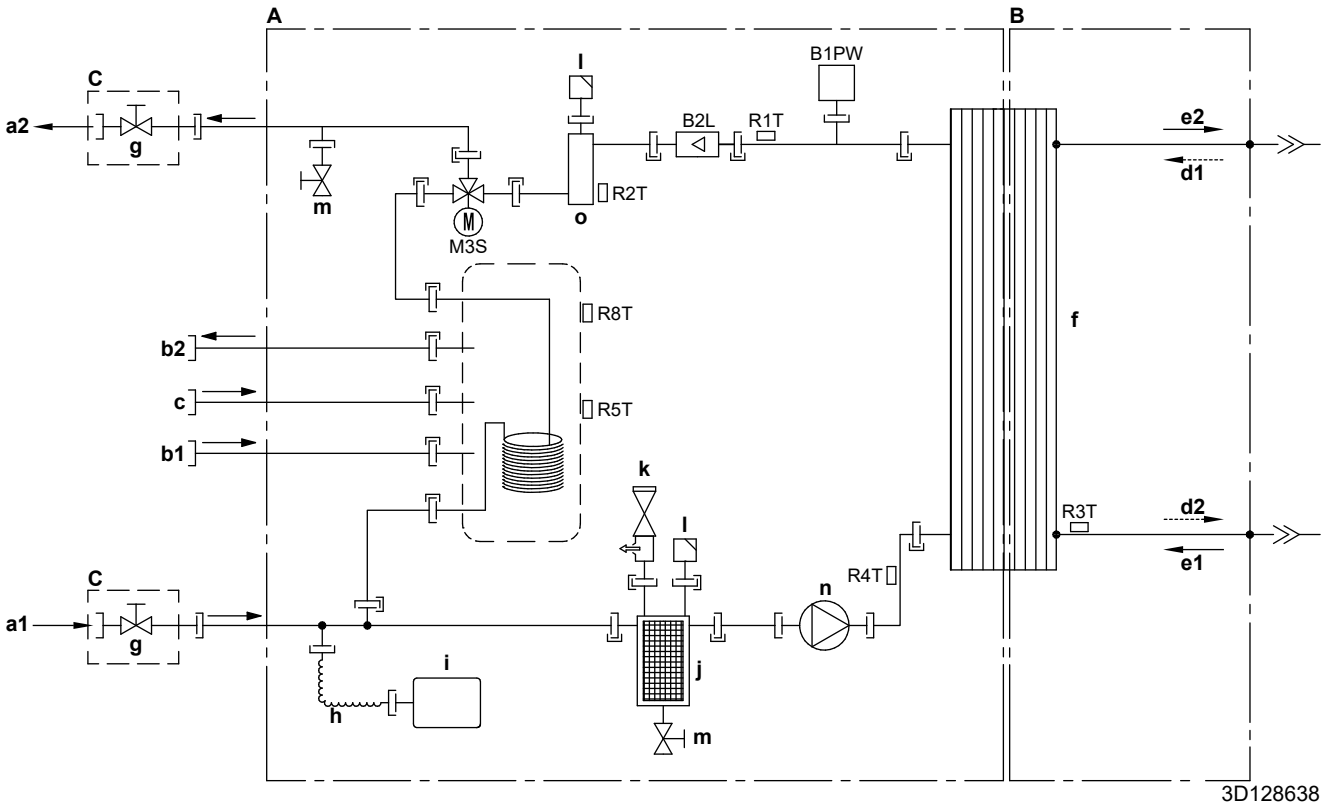

3D128638

- A** Water side
- B** Refrigerant side
- C** Field installed (delivered with the unit)
- a1** Space heating/cooling – Water IN (screw connection, 1")
- a2** Space heating/cooling – Water OUT (screw connection, 1")
- b1** DHW – Cold water IN (screw connection, 3/4")
- b2** DHW – Hot water OUT (screw connection, 3/4")
- c** Recirculation connection
- d1** Gas refrigerant IN (heating mode; condenser)
- d2** Liquid refrigerant OUT (heating mode; condenser)
- e1** Liquid refrigerant IN (cooling mode; evaporator)
- e2** Gas refrigerant OUT (cooling mode; evaporator)
- f** Plate heat exchanger
- g** Shut-off valve for service
- h** Flexible pipe
- i** Expansion vessel
- j** Magnetic filter/dirt separator
- k** Safety valve
- l** Automatic air purge
- m** Drain valve
- n** Pump
- o** Backup heater

- B2L** Flow sensor
- B1PW** Space heating water pressure sensor
- M3S** 3-way valve (space heating/domestic hot water)

- Thermistors:**
- R1T** Outlet water heat exchanger
- R2T** Outlet water backup heater
- R3T** Refrigerant liquid side
- R4T** Inlet water
- R5T, R8T** Tank

- Connections:**
- Screw connection
- Flare connection
- Quick coupling
- Brazed connection

## 11.2 Wiring diagram: Indoor unit

See the internal wiring diagram supplied with the unit (on the inside of the indoor unit switch box cover). The abbreviations used are listed below.

### Notes to go through before starting the unit

English	Translation
Notes to go through before starting the unit	Notes to go through before starting the unit
X1M	Main terminal
X2M	Field wiring terminal for AC
X5M	Field wiring terminal for DC
X6M	Backup heater power supply terminal
X10M	Smart Grid terminal
-----	Earth wiring
-----	Field supply
①	Several wiring possibilities
	Option
	Not mounted in switch box
	Wiring depending on model
	PCB
Note 1: Connection point of the power supply for the BUH should be foreseen outside the unit.	Note 1: Connection point of the power supply for the backup heater heater should be foreseen outside the unit.
<b>Backup heater power supply</b>	<b>Backup heater power supply</b>
<input type="checkbox"/> 6T1 (3~, 230 V, 6 kW)	<input type="checkbox"/> 6T1 (3~, 230 V, 6 kW)
<input type="checkbox"/> 6V3 (1N~, 230 V, 6 kW)	<input type="checkbox"/> 6V3 (1N~, 230 V, 6 kW)
<input type="checkbox"/> 6WN/9WN (3N~, 400 V, 6/9 kW)	<input type="checkbox"/> 6WN/9WN (3N~, 400 V, 6/9 kW)
<b>User installed options</b>	<b>User installed options</b>
<input type="checkbox"/> Remote user interface	<input type="checkbox"/> Dedicated Human Comfort Interface (BRC1HHDA used as room thermostat)
<input type="checkbox"/> Ext. indoor thermistor	<input type="checkbox"/> External indoor thermistor
<input type="checkbox"/> Ext outdoor thermistor	<input type="checkbox"/> External outdoor thermistor
<input type="checkbox"/> Digital I/O PCB	<input type="checkbox"/> Digital I/O PCB
<input type="checkbox"/> Demand PCB	<input type="checkbox"/> Demand PCB
<input type="checkbox"/> Safety thermostat	<input type="checkbox"/> Safety thermostat
<input type="checkbox"/> Smart Grid	<input type="checkbox"/> Smart Grid
<input type="checkbox"/> WLAN module	<input type="checkbox"/> WLAN module
<input type="checkbox"/> WLAN cartridge	<input type="checkbox"/> WLAN cartridge
<input type="checkbox"/> Bizone mixing kit	<input type="checkbox"/> Bizone mixing kit
<b>Main LWT</b>	<b>Main leaving water temperature</b>
<input type="checkbox"/> On/OFF thermostat (wired)	<input type="checkbox"/> ON/OFF thermostat (wired)
<input type="checkbox"/> On/OFF thermostat (wireless)	<input type="checkbox"/> ON/OFF thermostat (wireless)
<input type="checkbox"/> Ext. thermistor	<input type="checkbox"/> External thermistor
<input type="checkbox"/> Heat pump convector	<input type="checkbox"/> Heat pump convector
<b>Add LWT</b>	<b>Additional leaving water temperature</b>
<input type="checkbox"/> On/OFF thermostat (wired)	<input type="checkbox"/> ON/OFF thermostat (wired)
<input type="checkbox"/> On/OFF thermostat (wireless)	<input type="checkbox"/> ON/OFF thermostat (wireless)
<input type="checkbox"/> Ext. thermistor	<input type="checkbox"/> External thermistor
<input type="checkbox"/> Heat pump convector	<input type="checkbox"/> Heat pump convector

### Position in switch box

English	Translation
Position in switch box	Position in switch box

### Legend

A1P	Main PCB
A2P	* ON/OFF thermostat (PC=power circuit)
A3P	* Heat pump convector
A4P	* Digital I/O PCB
A8P	* Demand PCB
A11P	Main PCB of the MMI (= user interface of the indoor unit)
A14P	* PCB of the dedicated Human Comfort Interface (BRC1HHDA used as room thermostat)
A15P	* Receiver PCB (wireless ON/OFF thermostat)
A20P	* WLAN module
A30P	* Bizone mixing kit PCB
CN* (A4P)	* Connector
DS1(A8P)	* DIP switch
F1B	# Overcurrent fuse backup heater
F1U, F2U (A4P)	* Fuse 5 A 250 V for digital I/O PCB
K1A, K2A	* High voltage Smart Grid relay
K1M, K2M	Contactors backup heater
K5M	Safety contactors backup heater
K*R (A4P)	Relay on PCB
M2P	# Domestic hot water pump
M2S	# 2-way valve for cooling mode
PC (A15P)	* Power circuit
PHC1 (A4P)	* Optocoupler input circuit
Q1L	Thermal protector backup heater
Q4L	# Safety thermostat
Q*DI	# Earth leakage circuit breaker
R1H (A2P)	* Humidity sensor
R1T (A2P)	* Ambient sensor ON/OFF thermostat
R2T (A2P)	* External sensor (floor or ambient)
R6T	* External indoor or outdoor ambient thermistor
S1S	# Preferential kWh rate power supply contact
S2S	# Electrical meter pulse input 1
S3S	# Electrical meter pulse input 2
S4S	# Smart Grid feed-in
S6S~S9S	* Digital power limitation inputs
S10S-S11S	# Low voltage Smart Grid contact
SS1 (A4P)	* Selector switch
TR1	Power supply transformer
X6M	# Backup heater power supply terminal strip
X10M	* Smart Grid power supply terminal strip
X*, X*A, X*Y*, Y*	Connector
X*M	Terminal strip

\* Optional

# Field supply

## 11 Technical data

### Translation of text on wiring diagram


English	Translation
<b>(1) Main power connection</b>	<b>(1) Main power connection</b>
For HP tariff	For heat pump tariff
Indoor unit supplied from outdoor	Indoor unit supplied from outdoor
Normal kWh rate power supply	Normal kWh rate power supply
Only for normal power supply (standard)	Only for normal power supply (standard)
Only for preferential kWh rate power supply (outdoor)	Only for preferential kWh rate power supply (outdoor)
Outdoor unit	Outdoor unit
Preferential kWh rate power supply contact: 16 V DC detection (voltage supplied by PCB)	Preferential kWh rate power supply contact: 16 V DC detection (voltage supplied by PCB)
SWB	Switch box
Use normal kWh rate power supply for indoor unit	Use normal kWh rate power supply for indoor unit
<b>(2) Backup heater power supply</b>	<b>(2) Backup heater power supply</b>
Only for ***	Only for ***
<b>(3) User interface</b>	<b>(3) User interface</b>
Only for remote user interface	Only for the dedicated Human Comfort Interface (BRC1HHDA used as room thermostat)
SD card	Card slot for WLAN cartridge
SWB	Switch box
WLAN cartridge	WLAN cartridge
<b>(5) Ext. thermistor</b>	<b>(5) External thermistor</b>
SWB	Switch box
<b>(6) Field supplied options</b>	<b>(6) Field supplied options</b>
12 V DC pulse detection (voltage supplied by PCB)	12 V DC pulse detection (voltage supplied by PCB)
230 V AC Control Device	230 V AC Control Device
230 V AC supplied by PCB	230 V AC supplied by PCB
Bizone mixing kit	Bizone mixing kit
Continuous	Continuous current
DHW pump output	Domestic hot water pump output
DHW pump	Domestic hot water pump
Electrical meters	Electrical meters
For HV smartgrid	For high voltage Smart Grid
For LV smartgrid	For low voltage Smart Grid
For safety thermostat	For safety thermostat
For smartgrid	For Smart Grid
Inrush	Inrush current
Max. load	Maximum load
Normally closed	Normally closed
Normally open	Normally open
Safety thermostat contact: 16 V DC detection (voltage supplied by PCB)	Safety thermostat contact: 16 V DC detection (voltage supplied by PCB)
Shut-off valve	Shut-off valve
Smartgrid contacts	Smart Grid contacts
Smartgrid PV power pulse meter	Smart Grid photovoltaic power pulse meter
SWB	Switch box
<b>(7) Option PCBs</b>	<b>(7) Option PCBs</b>
Alarm output	Alarm output

English	Translation
Changeover to ext. heat source	Changeover to external heat source
Max. load	Maximum load
Min. load	Minimum load
Only for demand PCB option	Only for demand PCB option
Only for digital I/O PCB option	Only for digital I/O PCB option
Options: ext. heat source output, alarm output	Options: external heat source output, alarm output
Options: On/OFF output	Options: ON/OFF output
Power limitation digital inputs: 12 V DC / 12 mA detection (voltage supplied by PCB)	Power limitation digital inputs: 12 V DC / 12 mA detection (voltage supplied by PCB)
Space C/H On/OFF output	Space cooling/heating ON/OFF output
SWB	Switch box
<b>(8) External On/OFF thermostats and heat pump convector</b>	<b>(8) External ON/OFF thermostats and heat pump convector</b>
Additional LWT zone	Additional leaving water temperature zone
Main LWT zone	Main leaving water temperature zone
Only for external sensor (floor/ambient)	Only for external sensor (floor or ambient)
Only for heat pump convector	Only for heat pump convector
Only for wired On/OFF thermostat	Only for wired ON/OFF thermostat
Only for wireless On/OFF thermostat	Only for wireless ON/OFF thermostat



## Electrical connection diagram

For more details, please check the unit wiring.

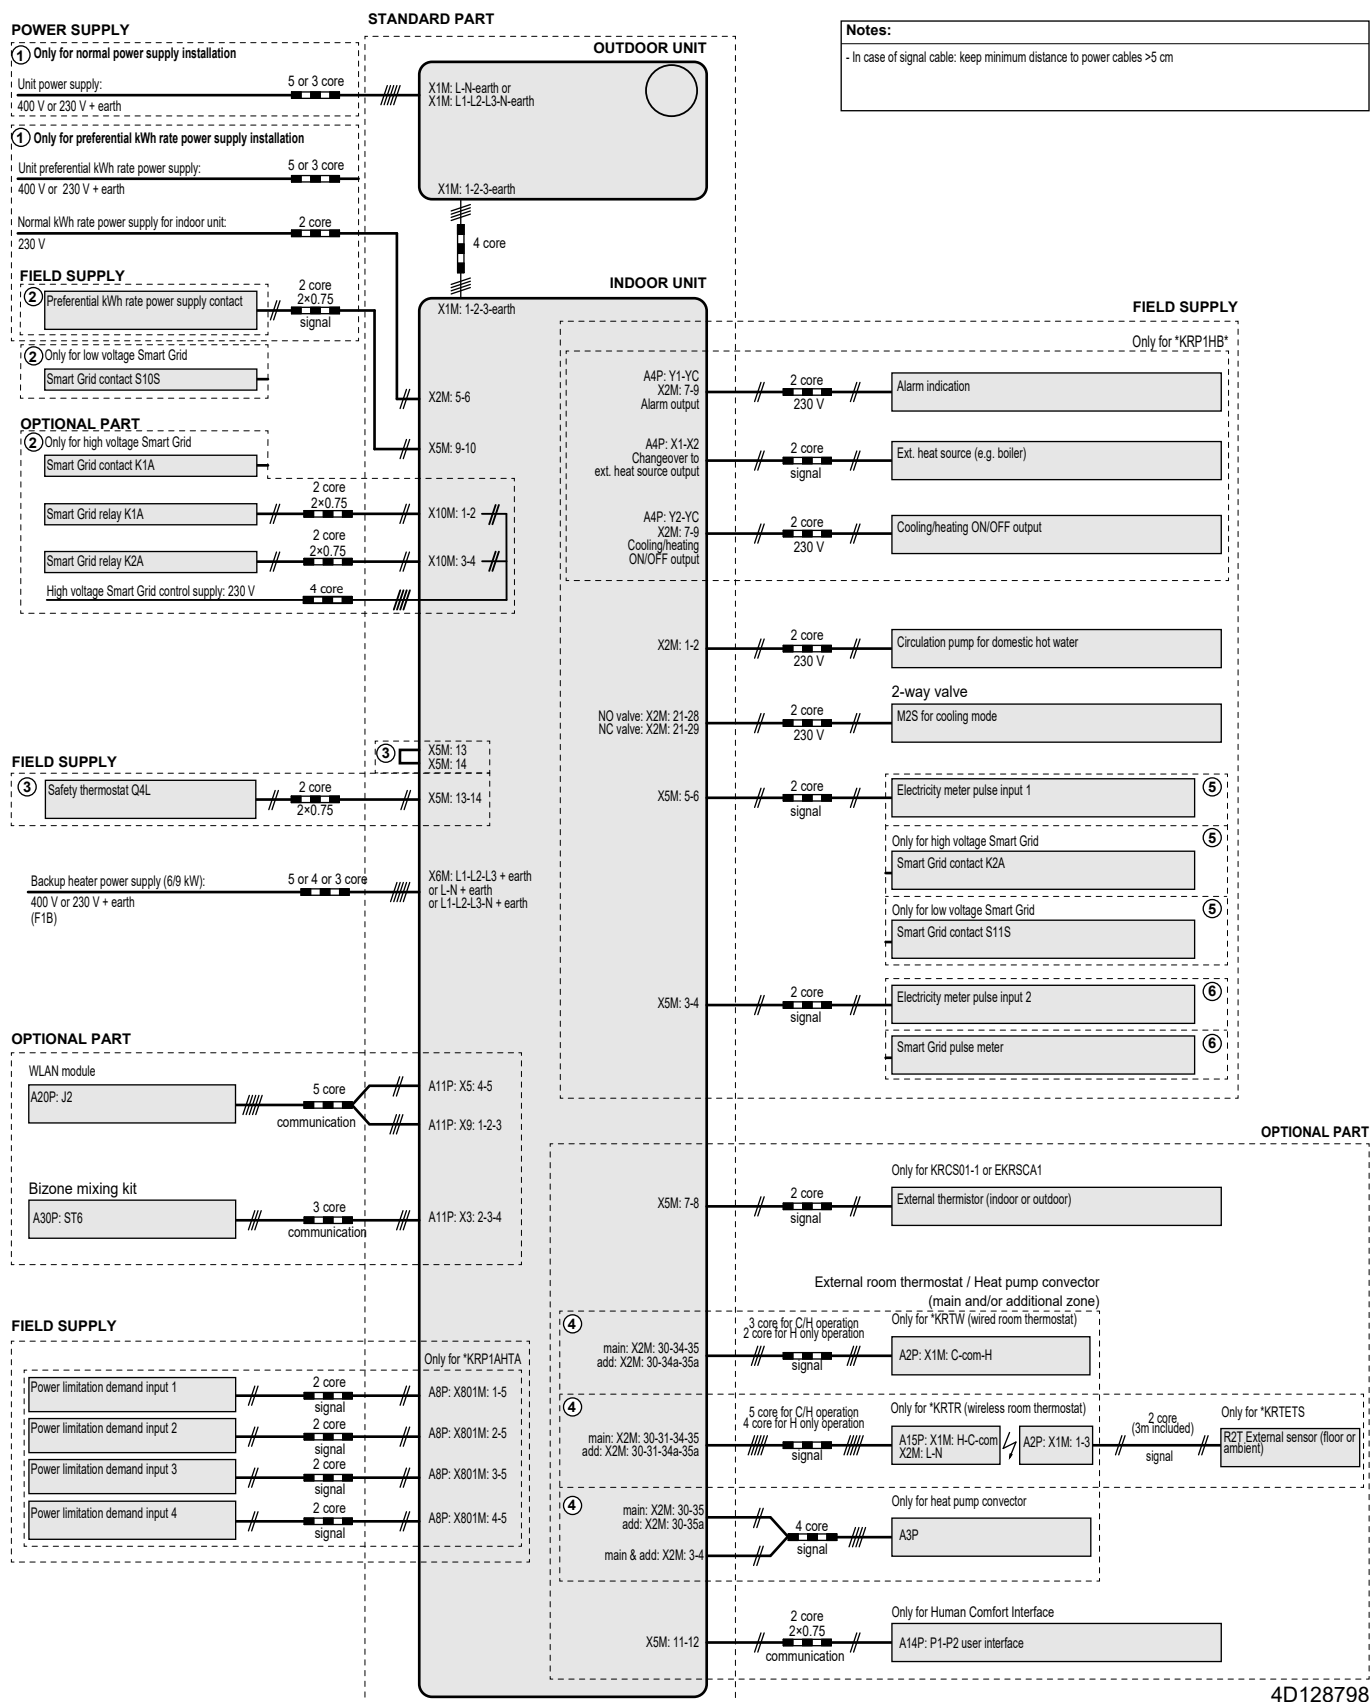

4D128798

## 11 Technical data

### 11.3 Technical specifications: Domestic hot water tank

#### 11.3.1 Test results in accordance with EN12897 (2016)



##### INFORMATION

This unit has been tested and approved according to BS EN12897:2016

Description	Hot water capacity	Reheat time
EBVH16SU23DJ6V	200 l	23 min 05 sec

#### 11.3.2 Warning label

##### WARNING TO USER

- Do not remove or adjust any component part of this installation. Contact the installer.
- Should the system develop a fault, switch the system off and contact the installer.

##### WARNING TO INSTALLER

- This installation is subject to building regulation approval, notify Local Authority of intention to install.
- Use only manufacturer's recommended spare parts. Contact your local Daikin dealer.
- Installed by



name .....  
address .....  
tel. No. ....  
completion date .....

##### TECHNICAL SPECIFICATIONS EN12897: 2016

- Maximum water supply pressure to pressure reducing valve: **16 bar**
- Operating pressure/set pressure of pressure reducing valve: **3.5 bar**
- Maximum primary working pressure (heating): **2.5 bar**
- Maximum flow temperature: **65 °C**
- Expansion vessel pre-charge pressure: **3.5 bar**
- Expansion valve setting: **8 bar**
- Temperature and pressure relief valve replacement part No.: **302810P**
- Operating pressure of temperature and pressure relief valve: **10 bar**
- Operating temperature of temperature and pressure relief valve: **95 °C**
- Operating temperature of thermal cut-out (2 pieces): **89 °C**
- Primary heating power input:  
**EBVH16SU23DJ6V 30.12 kW**
- Primary flow rate to reach primary heating power input: **15 l/min**
- Standing heat loss:  
**EBVH16SU23DJ6V 1.76 kWh/24h**
- Model storage capacity mass of unit when full  
**EBVH16SU23DJ6V 220 l 352 kg**
- Maximum design pressure: **10 bar**
- Rated volume heat exchanger: **9.1 l**

**DAIKIN EUROPE N.V.**

4P665210-1

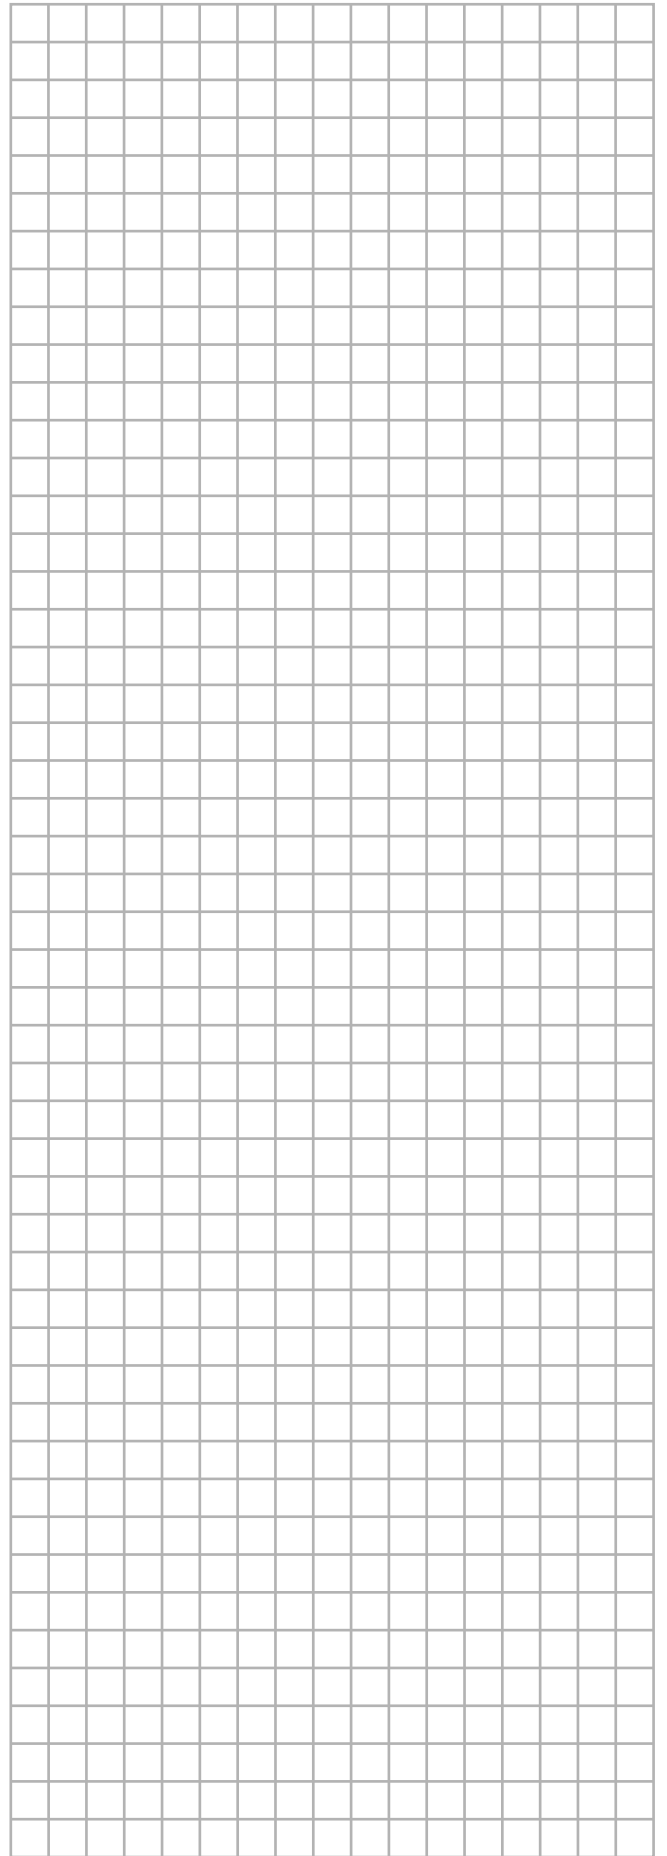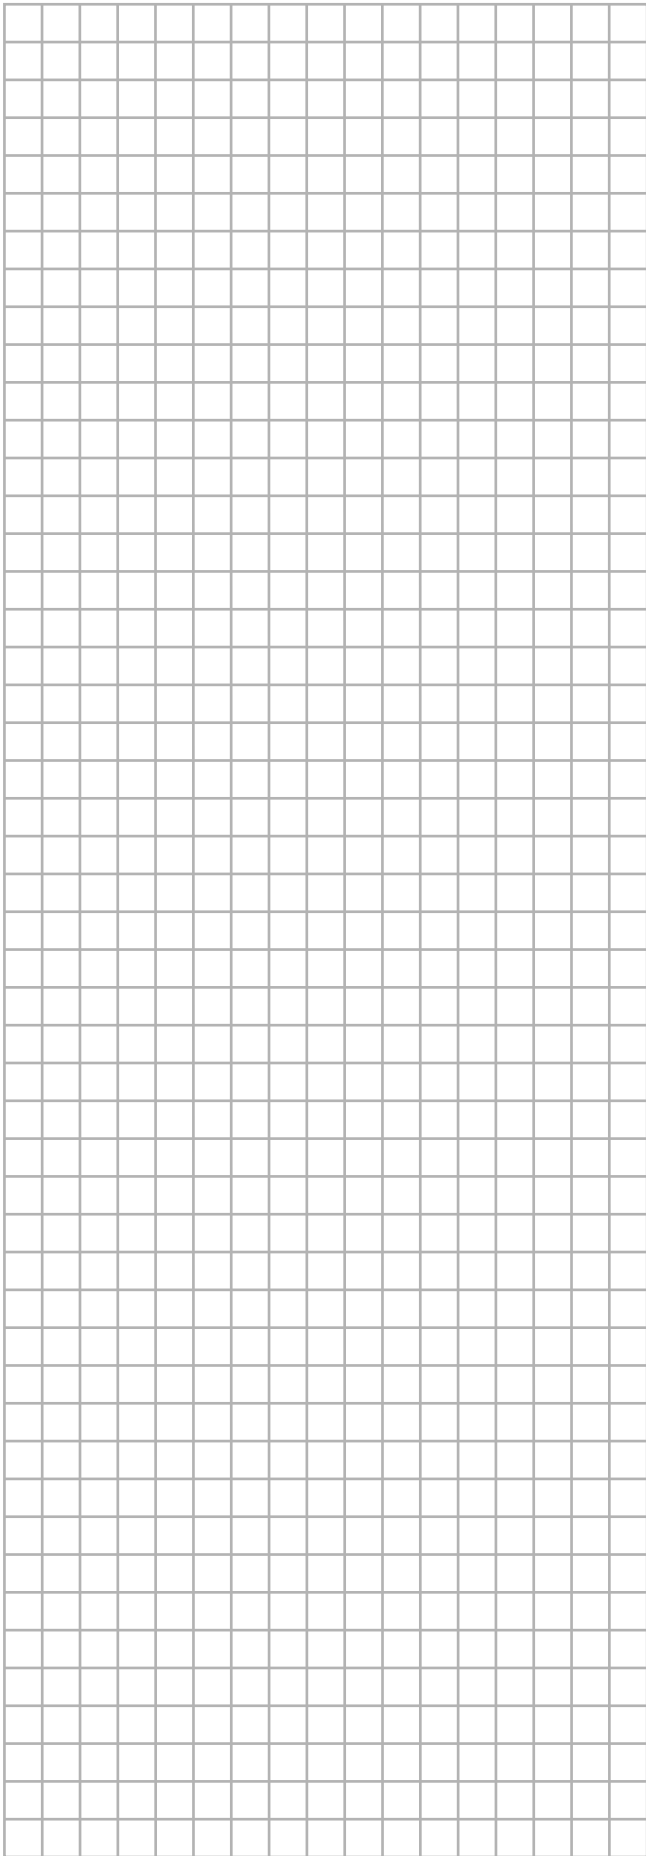



4P655200-1 B 0000000W

Copyright 2021 Daikin

**DAIKIN EUROPE N.V.**

Zandvoordestraat 300, B-8400 Oostende, Belgium

4P655200-1B 2021.10